



**rapidresponse™**

---

## OPERATING INSTRUCTIONS

---

# 2 Remote Controlled Mains Sockets



---

**MODEL: A1211WH-C**

---

# thank you

Thank you for the purchase of this quality **RAPID RESPONSE** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

This pack contains 2 wireless controlled plug sockets, which allow you to remotely switch on and off table lamps or appliances with power requirements up to 1000w. They are very simple to setup, just plug into the electric socket you want to control and set the socket to the required remote button. You can then control the socket from up to 30 metres away with the remote control. You can set each of the 2 sockets on different RF channels to be individually controlled, or on the same RF channel so that all 2 sockets can be controlled at same time.

---

## FUNCTION

---

- Ideal to control hard-to-reach sockets to switch appliances on and off.
- Several sockets can be controlled at same time.
- 12 individual code selections to avoid interference with other units.
- The LED on the Remote Control can indicate the signal transmission status.
- Up to 12 Receivers (Sockets) can be added.

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- For indoor use only
- Do not use more than 1000w on these sockets.
- Do not use to power heaters or other high powered devices
- Do not use in wet or damp conditions

---

## SPECIFICATIONS

---

- Remote Control Battery: CR2032 3v
- Remote Control Radio Frequency: 433.92 Mhz
- Receiver Voltage: 220-240v~50Hz
- Receiver Maximum Wattage: 1000w (Socket)
- Transmission Range: Typically 30m (Open Area)
- IP20

The remote control does not require direct line of sight to operate. It will work even when the socket is hidden by furniture.

---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

---

## LOCATION OF CONTROLS

---



**A - ON or OFF Functions Buttons, 3 Channels per code Adjustment**

**B - Code Adjustment (A,B,C or D)**

**C - Socket LED Indicator**

**D - All ON or all OFF Function Buttons**

**E - UK Mains Socket - 1000w maxium**

---

## HOW TO USE

---

On opening the pack, remove the battery tab protecting the battery inside the remote control.

### ■ PAIRING CONTROLLER & FIRST SOCKET

1. Connect the socket to the power, the LED will start blinking. The receiver has entered into learning mode.
2. Now chose the remote channel and buttons which you want to control the socket, press the On button you have chosen for around 5 seconds. The LED will become static to identify the socket is now paired.
3. You can now use the remote to turn on or turn off the socket.

**NOTE:** when the Socket connects to the power, the LED only blinks for around 15s, if you cannot pair the remote within 15s, the socket will quit learning status and then LED goes static.

### ■ PAIRING CONTROLLER & MORE SOCKETS

1. After you paired the first socket, you can press the first learned button ON and OFF together for around 5 seconds.
2. The socket LED will blink and enter into learning mode.
3. Then press another ON button to learn the remote for that additional socket.
4. You can repeat this step finish learning all sockets or combinations.

**NOTE:** you can totally learn 12 channels for the remote. If you try to learn more than 12 channels, the learned code will lose randomly.

3 channels on each Code Adjustment set. Change code set by moving switch from A-D.

Remote has ALL ON or ALL OFF function. The bottom buttons on the remote control are set to ALL ON or ALL OFF and you cannot learn another socket on these buttons.

#### ■ DELETING A PAIRED SOCKET

1. To delete certain socket from the remote control, remove the socket and disconnect from the power for 5 seconds.
2. Reconnect the power to the socket and the socket will enter Learning Mode again.
3. Now press the OFF button to delete the socket.

**NOTE:** You can repeat this step to delete all 12 channels code.

4. If you want to delete a certain code learned before then you can press the ON and OFF button together for around 5 seconds
5. The Socket LED will blink and enter into learning mode, and then press OFF button to delete the code.

#### ■ DELETING ALL SOCKETS

1. To delete all sockets from the remote control, then you can press the ON and OFF button together for around 5 seconds
2. The Socket LED will blink and enter into learning mode, and then press ALL ON and ALL OFF buttons to delete the code.



**rapidresponse™ CUSTOMER SERVICES**

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Rapid Response products, visit [www.lloytron.com](http://www.lloytron.com)

#### **WARRANTY**

An additional manufacturer's warranty is not provided with this product. If the product develops a manufacturing fault in any way, then under Statutory Rights you must stop use and return it to the retailer in which it was purchased.



Distributed by Lloytron Plc, Laltex House, Leigh, England WN7 3XH