

Home Charger



thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Plug in Mains
- Charge up to 4 x 'AA', 'AAA' or 1 x PP3 Ni-Mh or Ni-Cd Batteries (Batteries Not Included)
- Charging Status LED indicators (Does not indicate when fully charged)
- Automatic Short Circuit and Reverse Polarity Protection

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

DO NOT

Do not use for any purposes other than the appliances intended use.

- This appliance is not intended to be operated by means of an external timer or separate remote control system.

DO NOT

Do not use if any part of this appliance is damaged in any way.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Instruct the child not to try and recharge non-rechargeable batteries because of the danger of eruption.
- Examine the battery charger regularly for damage, especially the cord, plug and enclosure. If the battery charger is damaged, it must not be used until it has been repaired.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- This charger is intended for use with Nickel Cadmium and Nickel-Metal hydride batteries only.
- Charging other batteries may cause personal injury and damage to the charger.
- Observe correct polarity.

⊘ DO NOT

Do not charge a leaking or corroded battery.

⊘ DO NOT

Do not short circuit terminals.

⊘ DO NOT

Do not try to charge non-rechargeable batteries.

⊘ DO NOT

Do not charge Zinc Carbon, Alkaline or Lithium Batteries.

⊘ DO NOT

Do not mix chemistry types of batteries when charging.



SPECIFICATIONS

- Input Voltage: 220-240v ~ 50/60Hz

Charging Rates:

- AAA – 1.2v DC / 150mA
- AA – 1.2v DC / 50mA
- PP3 – 9v DC / 10mA

GUIDE TO CHARGING TIMES

To calculate the charging times, use the following formula:

Charging Time = Battery Capacity / Charging Rate

Examples:

- (AA 1600mAh) 11hrs = 1600mAh / 150mA
- (AA 2100mAh) 14hrs = 2100mAh / 150mA
- (AAA 800mAh) 16hrs = 800mAh / 50mA
- (PP3 9v 250mAh) 25hrs = 250mAh / 10mA





HOW TO USE

- This Charger will charge up to 4 x AA or AAA sized batteries at a time or 1 x PP3 9v Batteries.
- Both Ni-Mh or Ni-Cd batteries can be charged.
- Ni-Cd (Nickel Cadmium) Batteries must be **DISCHARGED** before use to avoid memory defect.
- Always observe **CORRECT POLARITY** when inserting batteries.
- The Red LED Indicator will **LIGHT UP** to indicate that a battery has been inserted. There is no indicator to state when the battery is fully charged
- **ALWAYS** calculate the charging time required using the formula shown in 'GUIDE TO CHARGING TIMES' section of this instruction manual **BEFORE COMMENCING CHARGE**.

WEEE/ENVIROMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately. If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.





LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Lloytron products, visit www.lloytron.com



Distributed in UK by Lloytron Plc, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86