



HomeCare™

OPERATING INSTRUCTIONS

Distress Alert



MODEL: B8010WH

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Lloytron products please visit our website at **www.Lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Distress Button Transmitter
- Portable Audible Receiver with Flashing Strobe
- 150m Range (unobstructed)
- Fully compatible With MIP™ System Products.
- Variable Volume Control
- Battery Operated:
- Receiver Requires: 2 x 'AA' Batteries (Not Included)
- Transmitter Requires: 1 x 'A23' Batteries (Included)

SPECIFICATIONS

Battery Operated:

- Receiver Requires: 2 x 'AA' Batteries (Not Included)
- Transmitter Requires: 1 x 'A23' Batteries (Included)

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- The Receiver is for use indoors.

⊘ DO NOT

Do not use outside or in damp conditions.

- To prevent against the risk of electric shock, do not submerge any part of this appliance in water.

⊘ DO NOT

Do not submerge any part of this appliance in water.

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.



DO NOT

Do not use rechargeable batteries.


- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.

DO NOT

Do not mix old and new batteries, different types of batteries, alkaline or rechargeable batteries with different capacity together.

- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible. The use of long life alkaline batteries is recommended.
- Dispose of used batteries carefully and in accordance with local government guidelines.

LOCATION OF CONTROLS

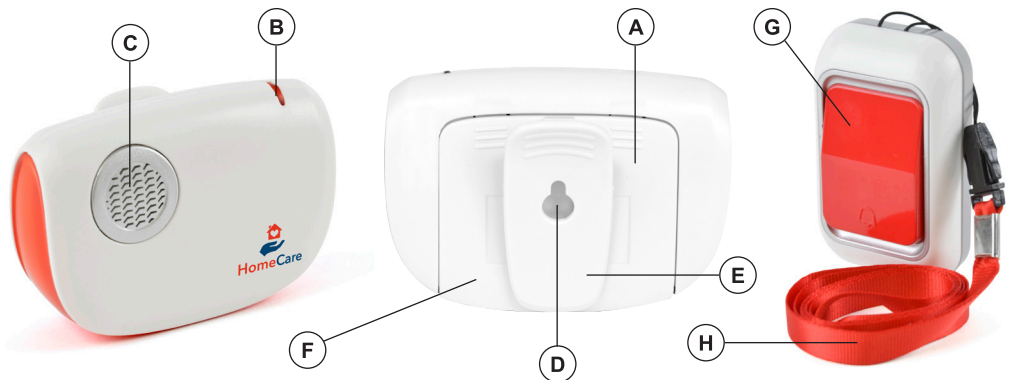

A – Chime Replay Button

(located underneath battery compartment)

Pressing this button will repeat the current chime or melody. This button is also used for programming the MIP network.

B – Strobe

Flashing strobes are helpful for the hearing impaired, providing a visual cue when visitors are at the door.

C – Speaker

The speaker outputs the chime or melody audio loudly to indicate that a visitor is at the door.

D – Wall Mounting Holes

Hang the door chime in various locations around the home that are best suited to your needs.

E – Built-in Clip

Clip the door chime to your belt or pockets for greater portability around the home or garden.

F – Battery Compartment

Requires 2 x 'AA' Batteries (Not Included)

G – Distress button

The distress button has been designed with a large, raised push button for easier access during emergencies.

H – Lanyard

Attach the Lanyard to the distress button (see instructions within this manual) in order to keep it attached to your person at all times.



MIP™ SYSTEM

This product can automatically learn the frequency of other MIP™ system modules including additional bell push/distress button transmitters and door chime receivers. This is useful if you wish to use more than one bell push or door chime or require a replacement for either.

■ RESET TO FACTORY DEFAULT SETTINGS

This may be required in certain circumstances such as incorrect programming of accessories or if faulty. There is no need to reset to factory default at any other time.



1 SWITCH the power off by **REMOVING** the batteries.



2 PRESS and **HOLD** the Chime Replay Button.



3 STILL HOLDING the chime replay button, **SWITCH** the power back on by **INSERTING** the batteries.



4 CONTINUE to **HOLD** the chime replay button for **10 SECONDS**, after which the strobe will flash or an audible beep will sound, indicating that the memory is now clear and ready for programming.

To re-programme the MIP™ system, please continue to the 'How to Programme' section.



■ HOW TO PROGRAMME



1 On each receiver, **PRESS** and **HOLD** the chime replay button for **10 SECONDS**. An audible beep will be heard. The receiver is now in a waiting mode.



2 **PRESS** the distress button. An audible beep will be heard again from the receiver. The receiver is now being programmed.



3 To exit the programming mode, **PRESS** the chime replay button again or **WAIT** a further **10 SECONDS** until a beep is heard and the programming is finished.

Up to 4 receivers and 4 transmitters can be programmed together at any one time.

Note: If multiple receivers are used then each receiver must be programmed to each bell push individually.

Note: This is only compatible with products highlighting the MIP™ System.

OPERATION

■ INSTALLING THE RECEIVER

- 1** **SLIDE OPEN** the battery compartment cover on the **REAR** of the receiver to **EXPOSE** the battery compartment.
- 2** **INSERT** 2 x 1.5v 'AA' batteries (not included), **ENSURING** the battery polarity **MATCHES** the internal markings.
- 3** **CLOSE** the battery compartment by **REPLACING** the cover.

■ USING THE RECEIVER

The receiver can be used in a multitude of ways, in either portable or stationary settings. For the purposes of receiving distress signals, we recommend using the portability function for carers to remain reactive to emergencies.

■ PORTABILITY FUNCTION

- 1** **LOCATE** the built-in belt clip on the **REAR** of the receiver.
- 2** **OPEN** the clip and **ATTACH** it to a convenient piece of clothing or belt in order to carry the receiver on your person.




■ STATIONARY FUNCTION

- 1 STAND** the receiver upright on a **FLAT, STABLE** surface in a suitable location.
- 2** The receiver has a built-in wall hanging hole on the rear of the unit. **INSERT** a nail or screw into a suitable location on the wall and **HANG** the receiver using the hanging hole.

■ INSTALLING THE DISTRESS BUTTON




1 PRY OPEN the distress button unit to **REVEAL** the battery compartment.

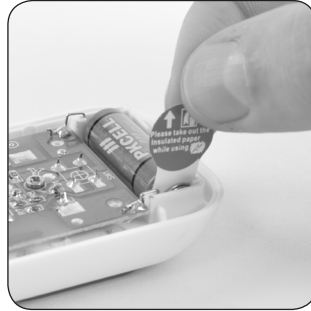

2 REMOVE the plastic tab located at the battery connector and **DISCARD** it safely. The distress button will not work if the tab is not removed.



3 At the top end of the rear plate (indicated by the arrow), **HOOK** the string from the lanyard **ONTO** the clip.

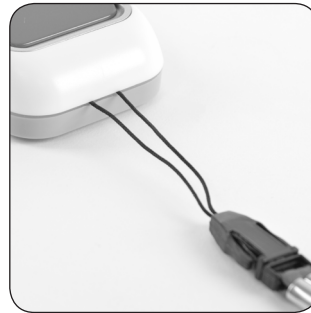

4 KEEPING the lanyard in place, **CLIP** the rear and front parts of the distress button **BACK TOGETHER**. This will now securely hold the lanyard in place.

■ CHIME REPLAY

During playback, press the chime replay button again to start the chime from the beginning.

⚠ CAUTION

Listening at high volume for long periods of time could damage user's ears.



NOTE: The battery can be used for one year. If the chime sounds distorted or faint, replace the old batteries with fresh ones.

IMPORTANT - This wireless receiver has an operating distance of 150 metres, but local conditions and the number of walls may affect this. Metal door frames and other factors that interfere with the signal will reduce the operating distance.

TROUBLE SHOOTING

If the Receiver automatically sounds, reset to factory default setting and then re-programme.

CLEANING AND CARE

Wipe with a clean soft cloth only. Do not wash with detergent or use any form of solvent.

■ STORAGE

Do not store in temperatures below 5°C or above 23°C. Failure to comply could cause damage to the product.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

■ REMOVING THE BATTERY FROM THE DISTRESS BUTTON

- 1** **PRY** open the back panel of the distress button unit.
- 2** **REMOVE** the A23 battery from the distress button.
- 3** **DISPOSE** of the battery at an official collection point.

■ REMOVING THE BATTERY FROM THE RECEIVER

- 1** **SLIDE OPEN** the battery door cover located on the back or underside of the unit.
- 2** **REMOVE** the Batteries from the receiver unit.
- 3** **DISPOSE** of the battery at an official collection point.



MIP™ ACCESSORIES AVAILABLE

MODEL NO.
B7890.

MAINS PLUG-IN
SIGNAL BOOSTER.


EXTENDS RANGE BY
ADDITIONAL 150M,
PERFECT FOR LARGER
PROPERTIES.



MODEL NO.
B7951BK/WH.

MAINS PLUG-IN 32
MELODY DOOR CHIME
IN BLACK OR WHITE.

ADDITIONAL PLUG-IN
DOOR CHIME.



MODEL NO.
B7811WH.

MAGNETIC DOOR
SENSOR.

FOR CONSERVATORY
DOORS, VESTIBULE
DOORS OR
RETAIL SHOPS.



MODEL NO.
B7902WH.

BATTERY OPERATED 32
MELODY DOOR CHIME.

GREAT PORTABILITY
FOR GARDENS OR ON
THE MOVE IN THE HOME

LOOK OUT FOR MORE ACCESSORIES.
ALL MIP™ SYSTEM PRODUCTS ARE FULLY COMPATIBLE WITH EACH OTHER!



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

 08454 81 8808

 customerservice@lloytron.com

 www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at www.Lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K