

OPERATING INSTRUCTIONS

Rechargeable LED

Emergency Lantern



MODEL: D1002GR

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Multi Function Emergency Lantern
- 18x Super bright LED Lantern
- 7x Super Bright LED Spot Light
- · Integral On/Off Switch
- Emergency and Automatic illumination when mains power removed
- Rechargeable 6v 3.5Ah Sealed Lead Acid Battery
- · Includes AC Mains Charging lead
- · Battery Charging Time: 24hrs approx
- Usage Time: >20hrs approx





IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

When using electrical appliances in general, basic safety precautions should always be observed, including the following;

- · Save these instructions.
- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Do not use in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- if the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Do not use if any part of this appliance is damaged in any way.
- · Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- · Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always turn the unit off, when not in use. Leaving it on will shorten the life of the battery.
- The Sealed Lead Acid Battery is not replaceable.
- Should you find the quality of the light deteriorating, recharge the battery using the mains charging lead provided.
- Do not look directly into the light, this may cause temporary or even permanent blindness.
- The LED Light is not replaceable.
- Do not submerse in water. This product is only splash proof, and not water resistant.

CHARGING

This product is rechargeable and comes complete with built-in rechargeable battery and Mains Charging Lead.

The Light is automatically turned off, when the Charging Lead is plugged into the unit

Approximate Charging Time is 24 hours to full capacity.

NOTE: Charging times may vary depending on the source.

EMERGENCY LIGHTING

When the unit is being charged with the setting either lamp switched on, the lamp is extinguished until the power source is removed.

In the event of a power cut, the power source is removed and the lamp automatically illuminates on the battery source.

This is ideal as an emergency back up and in locations where the mains power source is unreliable.


WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

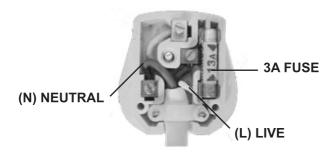

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord can be replaced.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



© LLOYTRON CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com** Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K.