

kitchenperfected™

OPERATING INSTRUCTIONS

Sandwich & Omelette Toaster



MODEL: E2603

thank you

Thank you for the purchase of this quality **KITCHEN PERFECTED** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Power: 750w
- Non stick scalloped plates
- Cut and seal action
- Thermostatically controlled heat setting
- Power and temperature indicator
- Hinged and locking lid
- Cool touch
- Easy clean



SPECIFICATIONS

Operating voltage: 220-240v~50Hz

Power Output: 750w max.

Ambient Operating Temperature: 5°C to 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.



IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

DO NOT

- Do not use outside or in damp conditions.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- Do not leave unattended when in use.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

This appliance is not intended to be operated by means of an external timer or separate remote control system.

- This appliance should only be used on a flat surface.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not place near or come in contact with flammable material (curtains, draperies, furnishings, wallpaper etc) whilst in operation as bread is liable to burn.

 **WARNING**

- Ensure adequate space around, above and beneath to permit free circulation of air around the toaster.
- Burns can occur from touching the hot metal parts. Use handles or knobs provided.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

 **DO NOT**

- Do not cover the toasting compartment whilst in operation.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not attempt to dislodge bread whilst the toaster remains plugged into the mains. Unplug first, and then use a wooden utensil. Avoid damage to the element.
- Do not clean with metal scouring pads. Pieces of the pads can break off and touch electrical parts involving a risk of electric shock.
- Do not insert oversized breads, food wrappers, metal foil packages, metal utensils into the toaster.
- Do not allow spillages of food such as cheese etc inside the toaster.
- Do not insert bread slices with any spreads such as margarine or butter already applied.



LOCATION OF CONTROLS



A – Non-Stick Scalloped Cooking Plates

Place the sandwich onto the plates. The non-stick surface makes for easier removal of sandwiches and hassle-free cleaning and care.

B – Cut and Seal Action

During use, the shape of the plates create a clean, easy to slice, split through the centre of the sandwich as well as sealing the edges of the sandwich for easy consumption.

C – Power Indicator (RED)

Once the unit is plugged in, the red power indicator will switch on to indicate the heating element is operational.

D – Temperature Indicator (GREEN)

The sandwich toaster is only ready for cooking when the green temperature indicator switches on. During cooking, the temperature indicator will continuously switch on and off as it is controlled by the thermostat to keep a constant temperature.

E – Locking Lid

Pushing the lid down during use and locking the lid into place helps to cook thoroughly through the sandwich and seal the edges effectively.

F – Carry Handle

The carry handle allows for easy storage and transportation. CAUTION! Do not use the carry handle during cooking.

G – Mains cord

Connect the mains cord to a suitable 220-240v~50Hz power supply to operate the unit.



OPERATION

■ BEFORE FIRST USE

1 **CLEAN** the non-stick cooking plates with a damp cloth and then **WIPE DRY**.

2 **POSITION** the sandwich toaster on a **FLAT, DRY** and **STABLE** surface.

■ BEFORE COMMENCING TOASTING

1 **CONDITION** the non-stick cooking plates by **SMEARING** them with butter, margarine, cooking fat or oil. **WIPE** off any excess. Butter is recommended as margarine or oils can leave a film on the plates that can be difficult to remove.

2 **CONNECT** the mains cord to a suitable 220-240v~50Hz power supply, ensuring that it **CANNOT** be caught by passers by.

3 The **RED** power indicator will **SWITCH ON** immediately after connecting the mains cord to the power supply.

4 **LEAVE** the lid closed for **3-5 MINUTES** whilst the plates heat up to the optimum temperature for cooking.

5 Once the optimum temperature is achieved, the **GREEN** temperature indicator will **SWITCH ON** to indicate that the sandwich toaster is **READY** for cooking.

***Note:** the temperature is thermostatically controlled, meaning that the heating element will switch on and off intermittently to keep the temperature at a controlled and consistent level. This is indicated by the green temperature indicator switching on and off during cooking.*

***Note:** during first use the heating element may emit an odour. This is not harmful and is caused by protective oils during production and will subside within 10-20 seconds (approx).*



■ TOASTIES

- 1** Whilst the Sandwich Toaster is heating up to its optimum temperature, **PREPARE** the filling.
- 2** For a golden toasted effect, it is recommended that butter is **SPREAD** on the **OUTSIDE** of the bread.
- 3** **POSITION** a slice of bread in either the left or right cooking plate with the **BUTTER** side **FACING DOWN**, scoop the fillings with a spoon and spread onto the un-buttered side of the bread.
- 4** Place the other side of bread on **TOP** of the **FILLINGS** with the **BUTTERED** side facing **UP**.
- 5** **REPEAT** this process on the other cooking plate for multiple sandwiches.
- 6** **CAREFULLY CLOSE** the lid and **LOCK** it shut. (Do not force it as this may damage the product.)
- 7** The cut and seal action will **AUTOMATICALLY CUT** the sandwiches in half and **SEAL** the edges.
- 8** **COOK** until the bread is **GOLDEN BROWN**.
- 9** **UNPLUG** the toaster and **CAREFULLY** remove the toasted sandwiches, using a wooden spatula. Take care not to touch the hot surfaces.

SERVING SUGGESTIONS

Cheese & Baked Beans
Bacon & Tomato
Cheese & Tomato
Spaghetti Bolognese
Salmon Pate

■ FRENCH BREAD

- 1** **BEAT** eggs in a bowl and **ADD** salt, sugar and cinnamon to taste.
- 2** **SOAK** bread slices into mix before **PLACING** onto Sandwich Maker.
- 3** **COOK** until the bread is **GOLDEN BROWN**.

Use single slices on Sandwich Maker or to add fillings follow instructions for TOASTIES but use pre-soaked bread in place of buttered bread.



■ SWEET & SAVOURY PUFF PASTRY

- 1** Whilst the Sandwich Toaster is heating up to its optimum temperature, **PREPARE** the pastry and filling.
- 2** **CUT** pre-rolled **PUFF PASTRY** into size of bread slice. Will require 2 slices per pastry.
- 3** **ADD** a small amount of butter or vegetable oil to each of the bottom sections of the toaster.
- 4** **POSITION** a slice of pastry in either the left or right cooking plate and **SCOOP** the fillings with a spoon on top of the pastry into each of the two **CREVICES**.
- 5** Now **PLACE** the second pastry **SLICE** on top of the fillings, so that it is squared with the underneath pastry.
- 6** **CLOSE** the lid and **ALLOW** to cook for a minute or two, until the surface shows some browning.
- 7** **UNPLUG** the toaster and **CAREFULLY** remove the pastry, using a wooden spatula. Take care not to touch the hot surfaces.

Note: Pitta bread may also be used.

SERVING SUGGESTIONS

SWEET

Chunky Apple Sauce
Raspberry Jam
Marmalade

Note: Sprinkle pastry with SUGAR for extra taste.

SAVOURY

Pre-cooked Mince Beef with Carrots
Cheese & Diced Ham
Salmon Pate



■ OMELETTES

- 1** Whilst the Sandwich Toaster is heating up to its optimum temperature, **PREPARE** the omelette mix.
- 2** **BEAT** eggs in a mixing jug until fluffy. **ADD** cheese or other ingredients to desired flavour.
- 3** **ADD** a small amount of butter or vegetable oil to each of the bottom sections of the toaster.
- 4** Once melted, **POUR** the beaten egg mix into the two bottom sections.
- 5** **CLOSE** the lid and **ALLOW** to cook for a minute or two, until the surface shows some browning.

SERVING SUGGESTIONS

Cheese & finely chopped tomatoes
Chopped Ham
Bacon pieces and chopped mushrooms
Cheese & Diced Onion
Broccoli & Stilton

DO NOT

Do not use metal or plastic utensils to remove or clean the Sandwich Toaster. This will damage the non-stick surface.

WARNING

Fillings will become very hot. Please take caution and allow cooling before eating.



CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

- 1** After use, and before cleaning, **UNPLUG** the unit from the AC Mains and **WAIT** for the appliance to **COOL**.
- 2** **WIPE** the **INSIDES** and the **EDGES** of the plates with absorbent paper towelling or a soft cloth.
- 3** Should any filling be **DIFFICULT** to **REMOVE**, **POUR** a small amount of **COOKING OIL** onto the plates and **WIPE OFF** after **5 MINUTES** when the food residue has **SOFTENED**.
- 4** **WIPE** the **OUTSIDE** with only a **SLIGHTLY MOISTENED** cloth, **ENSURING** that no moisture, oil or grease enters the appliance.

DO NOT

Do Not clean the inside or outside of the unit with any abrasive scouring pads or steel wool as this will damage the finish.

CAUTION

- NEVER IMMERSE THE TOASTER IN WATER OR ANY OTHER LIQUID.
- NEVER USE A METAL IMPLEMENT TO DISLodge CRUMBS OR BROKEN PIECES OF BREAD.

■ STORAGE

Only store the product in environments ranging from 5°C to 23°C ambient temperature. Failure to comply could result in damage to the product.

WEEE/ENVIRONMENTAL PROTECTION




■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



UK PLUG REWIRING

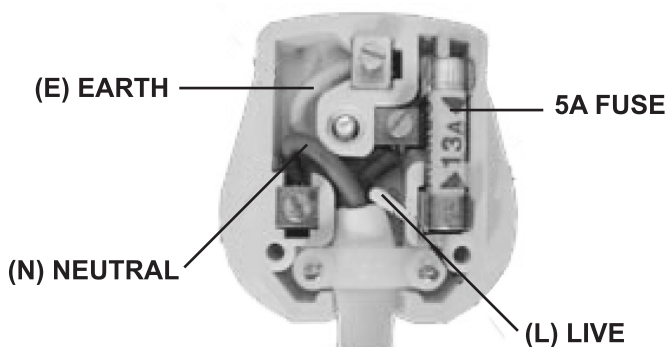


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 5 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



kitchenperfected™ **CUSTOMER SERVICES**

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Kitchen Perfected products, visit www.lloytron.com

WARRANTY

An additional manufacturer's warranty is not provided with this product. If the product develops a manufacturing fault in any way, then under Statutory Rights you must stop use and return it to the retailer in which it was purchased.



Distributed by Lloytron Plc, Laltex House, Leigh, England WN7 3XH