



OPERATING INSTRUCTIONS

Popcorn Maker



MODEL: E3901RD

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 1200w Power Consumption
- Hot Air Chamber
- 45g/50ml Measuring Cup / Butter Dish
- Large Output Chute



SPECIFICATIONS

Operating Voltage:	220-240v AC 50/60Hz
Power Consumption:	1200w



IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Caution should be taken when emptying the popcorn maker due to hot oil or water for the popcorn.
- **DO NOT** add water, oil, sugar, syrup or anything other than corn kernels to this machine. Any flavours must be added afterwards.
- **DO NOT** use continuously. Use for a maximum of 5 minutes and then allow cooling for 10 minutes.
- **DO NOT** place any parts in a Dishwasher, including chute and measuring cup
- **DO NOT** wash the base with water.
- **HOT AIR** is blown from this appliance; caution should be heeded near the chute. Do not keep hands or face near the chute.

OPERATION

1. Place the Popcorn Maker on a level surface.
2. Before first use, it is recommended to wipe the Popcorn Maker and accessories with a damp cloth.
3. Measure Popcorn Kernels using the Measuring Cup provided. One full measure per session is enough. More than one full measure could overflow the Popcorn Maker and disturb the proper functioning of the Popcorn Maker.
4. Pour the Popcorn Kernels into the Aluminum Heat Chamber through the CORN-IN-LET.
5. Replace the Measuring Cup into position inside the Top Cover after every use.
6. Place a large bowl under the Spout so that the edge of the bowl is touching the body of the Popcorn Maker. It is important that the Popcorn ejects down the Spout into the bowl and not re-directed, blocked or otherwise interfered with, since the Popcorn is hot and premature contact may cause minor discomfort.
7. Switch On the Popcorn Maker. After a few moments the continuous popping action will automatically feed Popcorn from the Aluminium Heat Chamber out through the Spout until all has popped. This process will last about 3 minutes.
8. Turn off the Popcorn Maker and remove the mains plug from the mains supply when popping has stopped.
9. If more Popcorn is required, remove the Popcorn remaining in the Aluminium Heat Chamber. Pay attention not to get burnt when handling the Top Cover as this part as well as the Measuring Cup is very hot when the Popcorn Maker is functioning.

NOTE: Wait for approx. 10 to 12 minutes before using the Popcorn Maker again to allow the unit to cool.

WARNING: Do not open the lid for a further 2 minutes after the popping cycle has stopped as Kernels may continue to pop when power is turned off.

WARNING: This appliance is not a toy. Please do not leave children unattended near the appliance while in use, or while it is cooling after use. Never open the lid during the popping cycle.

WARMING BUTTER IN BUTTER DISH:

If butter is required place a maximum of (2 tablespoons) in a single layer in the measuring cup. Place on top of the transparent cover and watch. When popping has stopped switch the unit off and allow a further 3 minutes for the butter to finish melting on top of the unit. For best results we recommend using room temperature butter or margarine.

CAUTION: Never put the butter into the Aluminum Heat Chamber.

CLEANING AND CARE

MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

CLEANING AND MAINTENANCE

- Before cleaning, remove the mains plug from the mains supply.
- Make sure the Popcorn Maker has cooled down completely before cleaning.
- Clean the plastic parts of the Popcorn maker with a damp cloth. Never use abrasive products as they could damage the Popcorn maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.

STORAGE

When the Popcorn Maker is not in use, disconnect the Popcorn Maker and store in a safe, dry place, out of reach of children.

RECIPES

These Recipe ideas are a guide only. The butter/measuring cup supplied is equivalent to 50ml or 45g of Corn Kernel.

CHEWY CARAMEL PECAN POPCORN

- 45g un-popped popping corn
- 200g condensed milk
- 60g soft brown sugar
- 75g caster sugar
- 65g butter, chopped
- 50-60g pecans, toasted, roughly chopped

1. Preheat oven to 180°C. Line a large baking tray with baking paper.
2. Cook popcorn according to directions in popcorn maker.
3. In a small saucepan combine the condensed milk, sugars and butter. Cook, stirring constantly, over a medium heat until the butter has melted. Cook, stirring for a further 3 minutes.
4. Combine the caramel mixture and popcorn together; spread out onto baking tray.
Bake in oven for 3 minutes; stir then bake for a further 2 minutes. Remove from oven, stir. Allow to cool.
5. Break into chunks and enjoy!

Makes approximately 8 cups

CHOC CHEWY POPCORN

- 45g un-popped popping corn
- 4 x 60g Mars® Bar
- 90g butter

1. Preheat oven to 180°C. Line a large baking tray with baking paper.
2. Cook popcorn according to directions in popcorn maker.
3. Chop Mars R bar and butter; place in a medium saucepan and cook, stirring over a low heat until melted.
4. Combine the chocolate mixture and popcorn together; spread out onto baking tray. Bake for 4 minutes; stir. Bake for a further 2 minutes then remove from oven, stir and allow to cool.
5. Break into chunks and enjoy!

Makes approximately 8 cups

TOFFEE POPCORN CRUNCH

- 45g un-popped popping corn
- 85g firmly packed brown sugar
- 60g butter or margarine
- 1 ½ tablespoons honey
- ¼ teaspoon bicarbonate of soda
- ¼ teaspoon vanilla essence
- 50g-60g macadamia nuts, toasted

1. Preheat oven to 160°C. Line a large baking tray with baking paper.
2. Cook popcorn according to directions in popcorn maker. Place popcorn onto baking tray.
3. In a small saucepan, combine sugar, butter and honey; cook, stirring until mixture boils. Reduce heat; simmer for 3 minutes. Remove from heat and stir through soda and vanilla. Pour mixture over popcorn; add nuts and stir through to coat evenly.
4. Bake in oven for 3 minutes; stir then bake for a further 2 minutes. Remove from oven, stir. Allow to cool.
5. Break into chunks and enjoy!

Makes approximately 8 cups

RECIPES

ROCKY POPPY ROAD

- 45g un-popped popping corn
- 2 x 375g milk chocolate melts
- 100g pink & white mini marshmallows
- 75g shredded coconut

1. Grease and line a 20cm x 30cm lamington pan. Line base and sides with baking paper, extending 5cm along long edges of the pan.
2. Cook popcorn according to directions in popcorn maker.
3. Stir chocolate in a heatproof bowl over a small saucepan of simmering water until smooth; cool slightly.
4. Combine popcorn, marshmallows, coconut together in a large bowl. Pour over melted chocolate; mix well to combine.
5. Spoon mixture into the prepared pan; pressing down gently. Allow to cool to room temperature.
6. Cut into pieces and enjoy!

Makes 48 pieces

CINNAMON MUNCH

You will need a candy thermometer for this recipe

- 45g un-popped popcorn
- 120g butter, chopped
- 300g soft brown sugar
- 175g maple syrup
- 175ml water
- 2 ½ teaspoons cinnamon
- 1 teaspoon salt

1. Cook popcorn according to directions in popcorn maker.
2. Line a large baking tray with baking paper; spread popcorn evenly over tray.
3. Combine butter, sugar, syrup, water, cinnamon and salt in a medium saucepan. Cook, stirring, on a medium heat until the butter has melted and the sugar has dissolved. Using a pastry brush and hot water, brush down the sides of the saucepan to remove any sugar. Increase heat and bring to the boil. Boil, uncovered, without stirring until the temperature reaches 150°C on a candy thermometer.
4. Pour the hot toffee mixture over the popcorn and carefully stir through. Allow to cool to room temperature.
5. Break or cut into chunks and enjoy!

Makes approximately 8 cups


WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

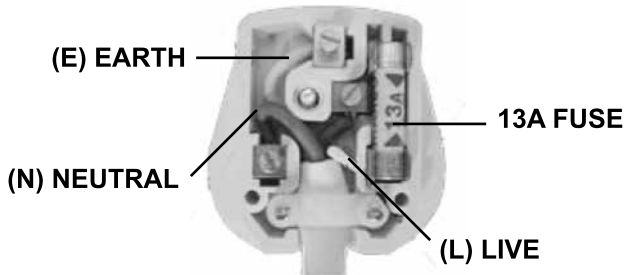


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at www.lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K