



OPERATING INSTRUCTIONS

Electric Griddle



MODEL: E4302BK

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Power Consumption: 2000w
- Detachable Controller
- Variable Temperature Control
- Grease Drip Tray
- Non-Stick Griddle
- Griddle Size: 24.5 x 45cm



SPECIFICATIONS

Operating Voltage:	220-240v ~ 50Hz
Power Consumption:	2000w



IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

 
 
- Save these instructions.
- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.
- Do not cover the appliance whilst in operation.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Do not operate in the presence of explosive and/or flammable fumes.
- Ensure adequate space around, above and beneath to permit free circulation of air around the appliance.
- Do not place near or come in contact with flammable material (curtains, draperies, furnishings, wallpaper etc) whilst in operation.
- Burns can occur from touching the hot metal parts. Use handles or knobs provided.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Suitable heat resistant containers should be used with this appliance. Do not use containers that may melt or crack with the high temperature.

LOCATION OF PARTS

1. Cooking Plate (This complete fixture becomes HOT)
2. Handles
3. Socket
4. Thermostat Controller
5. Indicator Light
6. Temperature Dial
7. Power Cord and Plug
8. Drip Tray
9. Ventilation Slots in Base

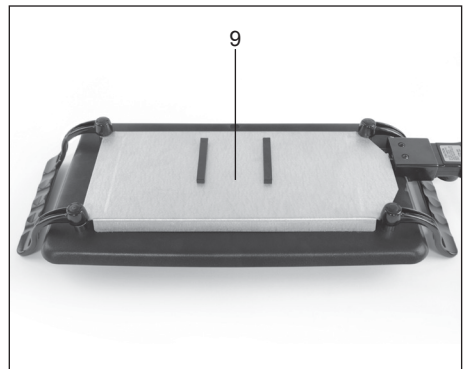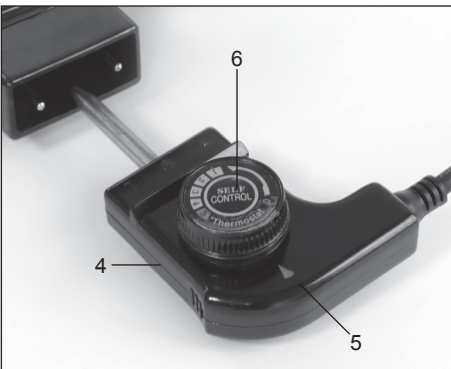

OPERATION

PREPARATION BEFORE USE

1. Clean the cooking plate with a soft dry cloth. Place your griddle on a level and stable surface near the electrical socket.
2. Check that the voltage marked on the product corresponds with your supply voltage. Ensure the controller is in the "Off" position before plugging it in.
3. For use, the Griddle should be operated at MAX temperature, No. 5, for approximately 10 minutes. This removes any protective oils that are used during production.
4. Allow to cool and follow the cleaning instructions.

NOTE: When using the griddle for the first time, there may be a smell of smoke coming from the surface of the cooking plate. This is normal because of the protective coating in production.

HOW TO USE

1. Plug the "Thermostat Controller" into the socket and ensure the dial is set to "Off" position.
2. Plug the mains cord into the mains supply.
3. Choose your desired temperature by turning the dial, the indicator will illuminate to advise that the cooking plate is heating up.

HEATING LEVELS	
Warm	100-120C (Red Gradient)
1	120C
2	150C
3	180C
4	210C
5	240C

4. Once your desired temperature as been reached the indicator light will go off, and the unit will maintain that temperature setting.
5. Very little fat/Oil is needed during cooking process
6. It is better to marinate or coat your food before placing on the griddle for cooking.
7. Residue Fat / Oil from the food will be collect at the front of the cooking plate and drained into the "Drip Tray" situated at the bottom of the griddle. DO NOT USE without the Drip Tray.

WARNING! Do not use metal utensils with this product; only use wooden or heat resistant plastic utensils to avoid scratching the non-stick surface. DO NOT! Cut the food with any sharp utensils on the griddle this will also damage the non-stick surface.

8. The thermostat can be removed if you wish to serve your food off the griddle itself. Please use extreme caution when removing the food as the griddle can get very hot. Always use the handles provided and care should be taken as not to spill fat from the Drip Tray or allow the Drip tray to become detached from the unit.

CAUTION : HOT SURFACE – DO NOT TOUCH. USE OF OVEN GLOVES IS RECOMMENDED.

CLEANING AND CARE

MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

WARNING! Before performing any maintenance or cleaning on this appliance, disconnect the appliance from the electricity supply.

1. Remove the "Thermostat Controller" from the unit.
2. Allow the unit to cool before cleaning.
3. DO NOT submerge any part in water. Not suitable for dishwashers.
4. Remove and empty the Drip tray. Waste Oil must be disposed carefully and not in a sink.
5. The Dip Tray can be cleaned in hot soapy water.
6. The Cooking Plate must be cleaned using an absorbent kitchen cloth.
7. Wipe the outside of the unit down with a damp soapy cloth and dry with a soft cloth.

DO NOT USE STEEL WOOL, SCOURING PADS OR ABRASIVE CLEANERS ON NON-STICK SURFACES.

 
WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

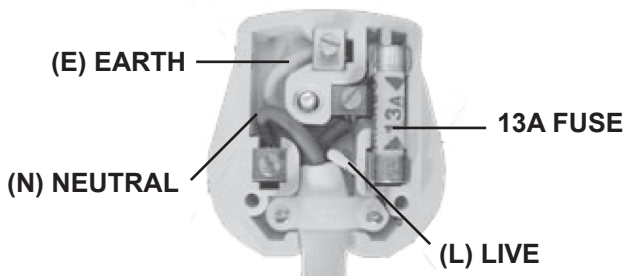


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K