

# 30ltr MINI OVEN with Twin Cooker Hobs



Model. **E4514**

## OPERATING INSTRUCTIONS

### INTRODUCTION

Thank you for the purchase of this quality LLOYTRON product. Used carefully and in accordance with the instructions set out below, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

### FEATURES

- 30 Litre Nominal Capacity, 27.5Ltr Liquid Capacity, 20.6Ltr Food Capacity
- Grille Rack and Baking Tray
- 60 Minute Timer
- Variable Temperature Control – up to 250C
- Manual Heating Element selection
- Power On & Heat On Indicator Lights
- 1500 Watt Power Oven, Large Hob 800 Watt, Small Hob 500 Watt, 240v~ 50Hz
- Non-Slip Rubber Feet



### UK PLUG REWIRING

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

#### IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

<b>BLUE</b>	:	<b>NEUTRAL (N)</b>
<b>BROWN</b>	:	<b>LIVE (L)</b>
<b>GREEN &amp; YELLOW</b>	:	<b>EARTH (E)</b>

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **"N"** or coloured **BLACK**.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **"L"** or coloured **RED**.


The wire which is coloured **GREEN & YELLOW** must be connected to the terminal which is marked with the letter **"E"** or  or coloured **GREEN**.

**DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG**

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

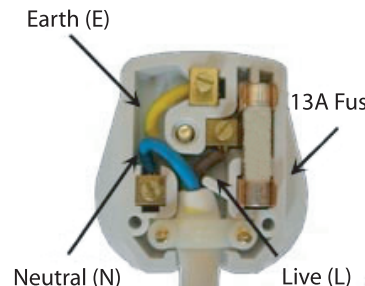

### LOCATION OF CONTROLS



### IMPORTANT SAFEGUARDS AND PRECAUTIONS



### SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not place any part of the electric oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
8. Unplug from outlet when not in use, or before cleaning.
9. To disconnect, turn the control to STOP, then unplug the plug. Always hold the plug, but never pull the cord.
10. Do not cover BAKE TRAY or any part of the oven with metal foil. This may cause overheating of the oven.
11. Do not clean with metal scouring pads.
12. Oversized foods or metal utensils must not be inserted in an electric oven as they may create a fire or risk of electric shock.
13. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
14. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
15. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
16. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
17. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
18. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, do not use.
19. Do not use outdoors.
20. Do not use appliance for other than intended use.
21. This appliance is for HOUSEHOLD USE ONLY.
22. The temperature of the door or the outer surface may be higher when the appliance is working.

### HOW TO USE

#### PREPARATION BEFORE USE

Before using your electric oven for the first time, be sure to:

1. Read all instructions included in this manual.
2. Make sure oven is unplugged and Time Knob is in the "OFF" position.
3. Remove all accessories. Wash in hot soapy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new Electric Oven with Grill Rack and Food Tray.
5. It may result in smell or smoke for the first use. This is normal. It is due to the protective substance on heating elements, which avoids salt effects during shipping from factory. So it is recommended to operate oven dry for about 15 minutes at the first, moreover, make sure to keep good ventilation of the room

Please familiarise yourself with the following oven functions and accessories prior to first use:

- **Temperature Knob:** Choose desired temperature from 0C to 250C.
- **Heating Element Selection:** Choose whether to cook from top, bottom or all oven.
- **Timer Knob:** Turn control to the left (counter-clockwise) and the oven will STAY ON until manually shut off. To activate timer, turn to right (clockwise) for other use. A bell will sound at end of programmed time.
- **Cooker / Hob Switches:** Each Switch will illuminate when on and will provide maximum power to each individual hob as indicated.
- **Power Indicator:** It is illuminated whenever oven is turned on.
- **Grill Rack:** Automatically slide-off / on when open / close the Glass Door. For toasting, baking, and general cooking in casserole dishes and standard pans.
- **Food Tray:** For use in broiling and roasting meat, poultry, fish, and various other foods.

Note that maximum temperature will only be obtained when both of the Upper element and the Lower element is turn on. This function is ideal for cooking bread, pizza, and fowl in general.

#### Operation

- Place food to be cooked directly onto Wire Rack / in Food Tray firstly and then onto Wire Rack.
- Close the oven door.
- Select proper temperature by the Temperature Knob.
- Preset proper cooking time and start the oven. Timing accordingly and checking progress with meat thermometer to ensure cooked.
- Make sure to turn Timer Knob to "O" for turning off the oven when cooking is completed.

#### Cooker / Hob Operation:

- Select desired Cooker Hob by The Cooker / Hob Switches. They will illuminate when ON. The temperature is MAX only and can not be varied.

NOTE: ALL toasting timing is based on meats at refrigerator temperature. Frozen meats may take considerably longer. Therefore, use of a meat thermometer is highly recommended.

### CLEANING AND CARE

#### MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

Warning! Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

### CLEANING AND CARE

#### CLEANING:

To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid. The exterior surface of the appliance should be cleaned with a clean damp cloth only. The oven features a Quick-Clean internal coating. If desired, wipe walls with damp cloth moistened with mild detergent. Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door with a clean damp cloth, and dry with a paper or cloth towel. Clean exterior with damp cloth.

DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE.

ALWAYS UNPLUG THE OVEN AND ALLOW IT COOLING BEFORE CLEANING

DRY ALL PARTS AND SURFACES THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING!

#### STORAGE:

Unplug unit, allow cooling, clean before storing. Store Electric Oven in its box in a clean, dry place. Never store appliance while it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage area on the bottom of the back of the oven. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.



### CAUTION RISK OF ELECTRIC SHOCK



#### DO NOT OPEN

The Lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure: that may be of sufficient magnitude to constitute a risk of electric shock to person.



#### CAUTION!

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety. Children Should be supervised to ensure that they do not play with this appliance.

### WEEE / ENVIRONMENTAL PROTECTION



#### Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

### 2 YEAR GUARANTEE



THESE STATEMENTS DO NOT AFFECT YOUR STATUTORY RIGHTS AS A CONSUMER.

This product has been manufactured under the strictest of quality control procedures, and using the highest quality of materials, to ensure excellent performance and reliability. It will give very good and long lasting service, provided it is properly used and maintained.

The product is guaranteed for two years from the date of original purchase. If any defect arises due to faulty materials or poor workmanship, the faulty product must be returned to the original place of purchase. Refunds or replacement is at the discretion of the store.

LLOYTRON plc offer this two year guarantee under the following conditions:

- 1) The product must be returned to the retailer with original proof of purchase.
- 2) The product must be installed and used in accordance with the instructions contained in this operating manual.
- 3) It must be used only for domestic purposes.
- 4) It does not cover wear and tear, malicious damage, misuse, neglect, in expert repairs or consumable parts.
- 5) Lloytron plc has no responsibility for incidental or consequential loss or damage.
- 6) Lloytron plc are not liable to carry out any type of servicing work, under the guarantee.
- 7) Valid in the UK and Eire only.



Made for Lloytron PLC, Leigh, Lancashire, UK WN7 3XH

For details of other great Lloytron products, please see our website:

[www.lloytron.com](http://www.lloytron.com)

