Q LLOYTRON®

OPERATING INSTRUCTIONS

25w Citrus Juicer



MODEL: E5204WH

If you have any queries about this product, there are three ways to contact our customer service department:



08454 81 8808



customerservice@lloytron.com



www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com** Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K.

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

• Power: 25w

· Bowl Capacity: 500ml

· Clear Lid for easy viewing

• 2 Sized Cones (Large / Small)

· Automatic Clockwise / Anticlockwise rotation

· Safety Cut Out Switch



SPECIFICATIONS

Operating Voltage: 220-240v~ 50/60Hz

Wattage: 25w



IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- · Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- · Only for use indoors.

O DO NOT

Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

O DO NOT

Do not use for any purposes other than the appliances intended use.

- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

O DO NOT

Do not use if any part of this appliance is damaged in any way.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless
 advised in this manual.
- This appliance should only be used on a flat surface.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

- This appliance can be used by children aged from 8
 years and above and persons with reduced physical,
 sensory or mental capabilities or lack of experience and
 knowledge if they have been given supervision
 or instruction concerning use of the appliance in a
 safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- · Ensure correct assembly of all parts before use.

O DO NOT

Do not operate in the presence of flammable fumes or mix flammable materials.

O DO NOT

Do not allow children to use this appliance without supervision.

LOCATION OF CONTROLS



A - Motor Unit

The Motor Unit is what operates the product. Requires 220-240v~50Hz Mains Outlet.

B - Juice Jug

This collects the Juice during operation ready for pouring into a glass via the built in Spout.

C - Filter

The filter is used to collect any unwanted fleshy pieces of fruit, leaving juice nice and smooth.

D – Juicing Cone

This splits in two to reveal small or large juicing cones depending on the size of the fruit.

E - Lid

Keep the unit covered when not in use to avoid dust entering the product.



ASSEMBLY



PLACE the Motor Unit on to a FLAT, STABLE surface.



PLACE the Juice Jug onto the base with the spindle inserted through the central hole. TWIST the Juice Jug clockwise until it CLICKS SECURELY into place.



POSITION the filter on top of the Juice Jug opening. This will sit nicely in the opening.



DECIDE on which Juicing Cone you will need to use (small or large depending on size of fruit) by PULLING the Large Juicing Cone AWAY from the Small Juicing Cone.



TAKE the Juicing Cone and SLOT it onto the Hexagonal shape of the spindle. PUSH DOWN until it CLICKS SECURELY into place.



POSITION the lid on top of the Juicing Cone. The lid must be removed before use.

OPERATION



PLUG the mains cord into a suitable 220-240v~50Hz mains power supply.



2 PREPARE fruit by WASHING it and CUTTING in half.



3 SELECT the correct sized cone dependant on the size of the fruit. Small cone = Limes, Lemons, Satsuma's etc. Large Cone = Grapefruits, Oranges etc.



4 Use one hand to HOLD the base of the juicer and use the other hand to PRESS the fruit FIRMLY onto the cone.



5 The Motor will operate automatically. The motor will change direction on each operation.



6 Use the handle to PICK the unit up and POUR juice into a glass via the Spout.

⚠ CAUTION

Do not use continuously for more than 15 seconds. Pause for 15 seconds before re-using. This is to avoid the motor from burning out.

CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

⚠ WARNING

Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

CLEANING

1 DISASSEMBLE the unit by following the assembly instructions in **REVERSE** order.

2 CLEAN the components INDIVIDUALLY using warm, soapy water.

3 DRY each component thoroughly BEFORE reassembly.

O DO NOT

Do Not submerge the Motor Unit in a body of water or under running water.

O DO NOT

Do Not put any part of this product into a dishwasher.


WEEE/ENVIROMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

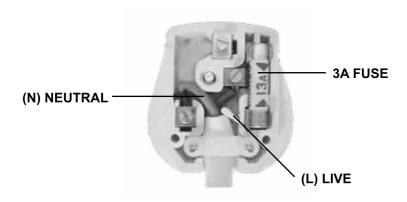

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER LIVE (L) OR NEUTRAL (N) WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.







© LLOYTRON CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:



08454 81 8808



customerservice@lloytron.com



www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com** Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K