

kitchenperfected®

---

OPERATING INSTRUCTIONS

---

# Compact Multi-Chopper



---

MODEL: E5413

---

# thank you

Thank you for the purchase of this quality **KITCHEN PERFECTED** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference. Remove all packaging before use.

---

## FEATURES

---

- Power: 100w max.
- Food capacity: 150g
- Liquid capacity: 300ml
- Transparent safety lid
- Safety cut out switch
- Single speed
- Stainless steel chopping blade

---

## SPECIFICATIONS

---

Operating Voltage: 220-240v ~ 50Hz

Wattage: 100w

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- Save these instructions.
- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Blades are very sharp, even when not in use. Caution should be taken when cleaning or handling blades.
- Ensure correct assembly of all parts before use.
- Blades should be checked regularly for any damage or cracks.
- Do not use when empty or below the minimum mark.
- Do not operate in the presence of flammable fumes or mix flammable materials.
- Do not allow children to use this appliance without supervision.

---

## PARTS DESCRIPTION

---

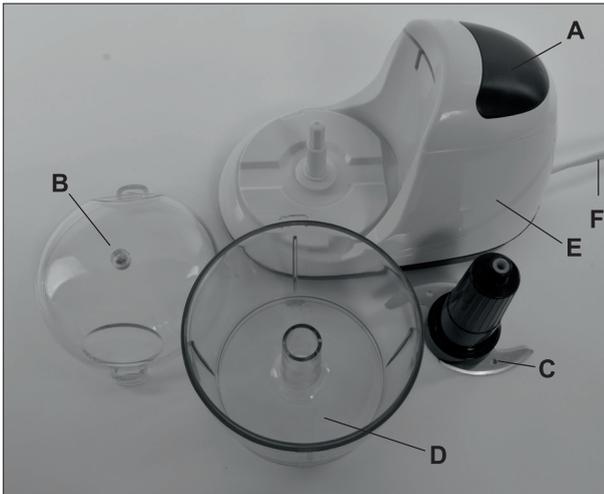

- A - On/Off Switch
- B - Transparent Lid
- C - Stainless Steel Blade
- D - Transparent Plastic Bowl
- E - Motor Unit
- F - Power Cord

---

## ASSEMBLY

---



**1.** Place Part D onto the base on Part E, ensuring that it slots securely into place. Once secure, twist Part D clockwise to lock it into place.



**2.** Place Part C onto the spindle protruding from the centre of Part D. This will slot into place securely. Proceed to fill the bowl with any food or liquid that is required.



**3.** Take Part B and fit it securely onto the top of Part D. Twist Part B clockwise to lock it into place. You will hear a click to indicate that it has successfully locked into place. Then plug Part F into the mains wall socket

---

## OPERATION

---

Before first use, wash the bowl in warm water, rinse and dry well. Chopping is a very fast process. The motor drives the blades at a high speed to ensure that thorough chopping is achieved. Make sure that whenever you use your mini chopper it is standing on a flat, clean and dry surface. Before chopping, please make sure that all parts are correctly assembled.

- 1.** Once the assembly stages have been completed, press down on the On/Off switch to operate the motor.
- 2.** After use, unplug the appliance and wait for the blades to stop spinning completely.

**Note:** Do Not operate continuously for more than 1 minute at a time. Allow time to cool between each use. Ensure both the Bowl and the Lid are locked securely into place otherwise the unit will not operate. The operation can be carried out 3 times with short intervals. After the third time, allow a rest period of 15 minutes.

---

## CHOPPING/MIXING RECOMMENDATIONS

---

<b>FOOD</b>	<b>MAXIMUM QUANTITY</b>	<b>MAXIMUM TIME</b>
Almonds	100g	15 Secs
Boiled Eggs	150g	10 Secs
Breadcrumbs	20g	15 Secs
Garlic	150g	Pulse
Gruyere	100g	15 Secs
Ham	150g	15 Secs
Hazlenuts	100g	15 Secs
Ice Cream	150g	20 Secs
Ice Cubes	4-5 Small Ice Cubes	Pulse
Light Batter	0.4L	15 Secs
Onions	150g	Pulse
Parsley	30g	10 Secs
Pepper	0.2L	30 Secs
Shallots	150g	Pulse
Spice	0.2L	30 Secs
Soup	0.4L	30 Secs
Steak	150g	15 Secs
Wallnuts	100g	15 Secs

---

## CLEANING AND CARE

---

**Important:** Never put the appliance under a tap or in a dishwasher but clean it with a damp sponge. Handle the blades carefully when cleaning. The blades are extremely sharp.

- Unplug the appliance.
- Remove Part B by twisting it anti-clockwise
- Remove Part C from Part D before removing Part D by twisting it anti-clockwise
- Rinse Parts B, C and D under running water.
- Leave all parts to dry naturally
- Wipe clean Part E with a damp sponge or cloth. NEVER IMMERSE IN WATER.
- NOTE: THIS ITEM IS NOT DISHWASHER SAFE

### TIPS TO PROLONG THE LIFE OF YOUR MINI CHOPPER

1. Make sure there is something in the Bowl each time you use the unit. The chopper bearings may be damaged if run on a "No-load" basis.
2. Cut cooked meats into one-centimetre cubes before adding into the Bowl.
3. Remember that a Mini Chopper cannot process raw meat.
4. Ensure that the food being chopped is not too thick or heavy for the motor to handle. If it seems to be having difficulty, turn off, remove the lid and add a little liquid or scrape the mixture down towards the Blades with a soft rubber spatula.
5. Do not use the Bowl for storing foods or beverages

---

## WEEE/ENVIRONMENTAL PROTECTION

---




### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

---

## FITTING A NEW UK PLUG

---

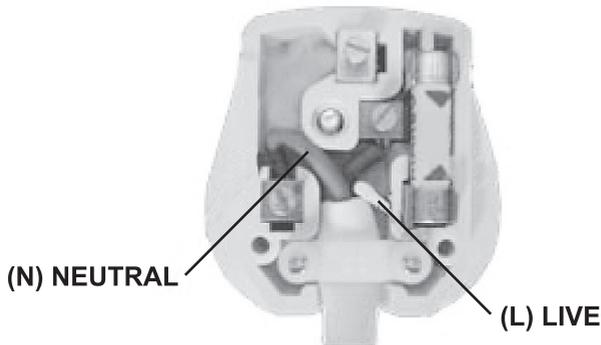

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ **IMPORTANT:**

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ **DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG**

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

---

kitchenperfected **CUSTOMER SERVICES**

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)

To find out more about Kitchen Perfected products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86