

kitchenperfect[®]

OPERATING INSTRUCTIONS

300w Hand Mixer with Bowl



MODEL: E5434

thank you

Thank you for the purchase of this quality **KITCHEN PERFECTED** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 300W max Power Consumption
- 5 Speed Control
- Turbo Function
- Chrome beater attachments
- Chrome dough hook attachments
- 2.5Ltr Removable rotating bowl (max Food content 2.0ltr)
- Locking Mixer Stand

SPECIFICATIONS

Operating Voltage: 220-240v~50Hz
Power Output: 300w max

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
 - For Household Use only. Not intended for commercial use.
 - Only for use indoors.
 - Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
 - Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- DO NOT**

 - Do not use outside or in damp conditions.
 - Do not use for any purposes other than the appliances intended use.
 - Do not use if any part of this appliance is damaged in any way.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
 - Always unplug when not in use.
 - If the supply cord is damaged, do not use. Check before each use!

This appliance is not intended to be operated by means of an external timer or separate remote control system.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

 **WARNING**

- Blades are very sharp, even when not in use. Caution should be taken when cleaning or handling blades.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Ensure correct assembly of all parts before use.
- Blades should be checked regularly for any damage or cracks.

 **DO NOT**

- Do not operate without whisks or beaters under load conditions.
- Do not operate in the presence of flammable fumes or mix flammable materials.
- Do not allow children to use this appliance without supervision.

LOCATION OF CONTROLS



A – Motor Unit

B – Whisk Beaters

C – Mixing Bowl

D – Mixer Stand

E – Locking Button

F – 5 Speed Switch

G – Turbo Function

H – Attachments Release Button

I – Dough Hooks

J – Mains Cord

OPERATION

■ BEFORE FIRST USE

Before handling the Beaters/Dough Hooks, check that the unit is unplugged from the mains supply and the speed control is in OFF position at 0.

■ USING MIXER STAND

1. Place bowl onto the stand.
2. Without any beaters/hook attached, push the motor unit into the unit holder. It will be a tight fit and will clip into place.
3. Now push the attachment stems of either the beaters or hooks into the hand mixer holes and rotate until they lock into position. This will also hold the motor unit into place.
4. After installing the beaters / hooks pull down on each stem gently to ensure they are secured.
5. Plug into the power socket.
6. Add ingredients and turn the speed to the desired setting.
7. The bowl will automatically rotate to assist mixing whilst the mixer is in operation.
8. To lift the beaters/hooks from the bowl, switch to OFF (0), press the lock button and tilt the mixer backwards. CAUTION, do not tilt whilst in operation.
9. Press the Lock button again and push the mixer back into the bowl before operating again.

WARNING!

Do not allow any clothing etc to become trapped on the teeth of the bowl.
Do not place hands in the bowl when in use.
Do not tilt the mixer whilst in operation.

■ USING HAND MIXER

1. Ensure mixer is unplugged from power socket.
2. Remove from stand if necessary.
3. Re-insert the beaters or hooks as described above.
4. Use Hand Mixer without the Stand as desired.

Note: *TURBO function increases speed to maximum on settings 1, 2 or 3.*

DO NOT

Do not operate mixer for more than 60 seconds without leaving to cool for 60 seconds.

CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

1. After use, and before cleaning, unplug the unit from the power supply and wait for the appliance to cool.
2. Remove the beaters or dough hooks and these can be cleaned in hot soapy water, before towel drying.
3. Bowl can also be cleaned in hot soapy water and towel dried.
4. The mixer stand and mixer motor units must be cleaned with a damp cloth and then air dried.

DO NOT

Do not abrasive cleaners, alcohol, or solvents to clean this appliance.

CAUTION

Never immerse the appliance in water or any other liquid.

■ STORAGE

Always store this appliance and cord in a moisture-free area. Do not wrap the cord of the charging adaptor around the appliance. Do not store in temperatures below 5°C or above 35°C.


WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

FITTING A NEW UK PLUG

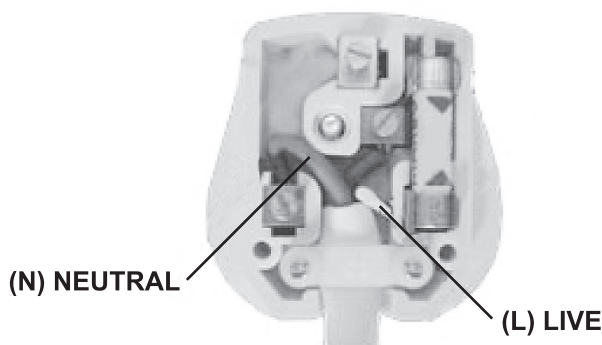

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug.
Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

kitchenperfected **CUSTOMER SERVICES**

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Kitchen Perfected products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86