

 **LLOYTRON<sup>®</sup>**

**OPERATING INSTRUCTIONS**

# Salad Maker



**MODEL: E5450RD**

# thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

## FEATURES

- Power Consumption: 150w
- Easy Use
- Easy Clean Design
- Large Power Button
- Transparent Food Shute
- Grates, Chops, Slices and Grinds
- Complete with 6 Cutting Blade accessories:
  - Rough Grinder (Yellow)
  - Thick Slicer (Blue)
  - Fine Slicer (Green)
  - Thick Grater (Orange)
  - Fine Grater (Purple)
  - French Fry Cutter (Red)



## SPECIFICATIONS

Operating Voltage: 220-240v~ 50/60Hz  
Power Consumption: 150w



## IMPORTANT SAFEGUARDS AND PRECAUTIONS

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Blades are very sharp, even when not in use. Caution should be taken when cleaning or handling blades.
- Ensure correct assembly of all parts before use.
- Blades should be checked regularly for any damage or cracks.
- Do not allow children to use this appliance without supervision.
- Always unplug before changing blades, cleaning or removing jammed food.
- Do not allow hair, drapes, clothing or other materials to become caught by the blades.
- Do not use for very hard products such as nutmegs, coffee beans or cereals etc
- Do not use for meat. This appliance is not a meat grinder!
- Do not reach into the feeding tube with hands or other implements, always use the plunger provided.
- Do not use continuously. Every 2 minutes allow cooling for 1 minute.

# LOCATION OF CONTROLS

- 1 Food Plunger
- 2 Feeding Shute / Holder
- 3 On/Off Switch
- 4 Motor Unit
- 5 Locking Nut
- 6 Cutting Blades

## ACCESSORIES

- Rough Grinder (Yellow)  
For hard cheese (eg Paresan), chocolate, dry bread/rolls, hazelnuts, walnuts, almonds or coconuts
- Thick Slicer (Blue) or Fine Slicer (Green)  
For carrots, courgettes, potatoes, cucumbers, peppers, onions, turnips, cabbage, apples or hard cheese
- Thick Grater (Orange) or Fine Grater (Purple)  
For carrots, courgettes, potatoes, cucumbers, peppers, chocolate or hard cheese
- French Fry Slicer (Red)  
For Potatoes, Peppers, Courgettes etc



# OPERATION

## BEFORE FIRST USE

Wipe all parts with damp cloth and dry with soft clean cloth. This removes any residue that maybe on the product and blades from production.

## HOW TO USE

- Insert the Feeding Shute/Holder into the Motor body by holding at a slight angle and then twisting anti-clockwise until it lock into place with the Feeding Shute upright.
- Insert the Food Plunger into the Feeding Shute.
- Now select a suitable Cutting Blade.
- Remove the locking Nut from inside the Feeding Shute/Holder by twisting clockwise.
- Insert the selected Cutting Blade so that it fits snug.
- Lock into place using the Locking Nut and twist anti-clockwise
- Stand onto a level non-slip work surface and provide a bowl underneath the Cutting Blade to collect the food.
- Plug into the mains supply, ensuring correct voltage for the appliance.
- You are now ready, to chop, slice, dice, grate or grind your food.
- Insert your chosen food into the Feeding Shute and press gently with the Food Plunger whilst pressing the On/Off switch with the other hand.
- When you let go of the On/Off switch the unit will stop.
- Never use for long periods of time, this can cause the unit to overheat. Every 2 minutes pause for 1 minute to allow the motor to cool down.



## CLEANING AND CARE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning. Always ensure the appliance is unplugged before cleaning.

### **MOTOR UNIT**

Clean with a dry soft cloth only.

Do not wash with detergent or use solvent or abrasive cleaners.

### **CUTTING BLADES/FEEDING SHUTE AND FOOD PUSHER**

Clean with mild detergent and wipe dry with a clean soft cloth.

Care should be taken when handling the Cutting Blades, they are sharp and can cause injury.

Do not place in Dishwasher.

Do not use solvent or abrasive cleaners.


## WEEE/ENVIRONMENTAL PROTECTION



### Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

## UK PLUG REWIRING

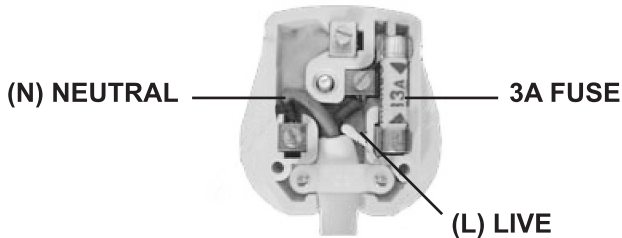

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

### IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)  
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

### DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



## LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

**call: 08454 81 8808**

**email: [customerservice@lloytron.com](mailto:customerservice@lloytron.com)**

**web: [www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find more details on a wide range of Lloytron products please visit our website at [www.lloytron.com](http://www.lloytron.com)  
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K