

kitchenperfected™

---

**OPERATING INSTRUCTIONS**

---

# 120W Coffee/ Spice Grinder



---

**MODEL: E5605**

---

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Kitchen Perfected products please visit our website at [www.lloytron.com](http://www.lloytron.com)  
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K

# thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- 120w Power Consumption
- 80g Food Capacity
- Clear Lid for easy viewing
- Safety Cut Out Switch
- Stainless Steel Chopping Blade
- Easy One Hand Operation
- Retractable Cable Tidy

---

## SPECIFICATIONS

---

Operating Voltage: 220-240v~ 50Hz

Wattage: 120w

Ambient Operating Temperature: 5°C to 23°C

**Note:** Do not operate if ambient temperature is outside this range as this may damage the product.

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

**⊘ DO NOT**

Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

**⊘ DO NOT**

Do not use for any purposes other than the appliances intended use.



- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

**⊘ DO NOT**

Do not use if any part of this appliance is damaged in any way.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Blades are very sharp, even when not in use. Caution should be taken when cleaning or handling blades.
- Ensure correct assembly of all parts before use.
- Blades should be checked regularly for any damage or cracks.

**⊘ DO NOT**

Do not use when empty or below the bottom of the blades.

**⊘ DO NOT**

Do not operate in the presence of flammable fumes or mix flammable materials.

**⊘ DO NOT**

Do not allow children to use this appliance without supervision.



---

## LOCATION OF CONTROLS

---



### **A – Transparent Lid**

The transparent lid allows users to check the progress of the coffee/spice grinding without having to remove the lid.

### **B – Operation Switch**

Press and hold to operate the stainless steel chopping blade. Do Not operate continuously for more that 30 seconds at a time.

### **C – 80g Food Capacity Bowl**

The bowl will allow up to 80g capacity of coffee beans or spices. Do not fill above the max mark or below the bottom of the blades.

### **D – Retractable Cable Tidy**

This allows for easy, trouble free storage.



---

# OPERATION

---

## CAUTION

This appliance operates at very high speeds and is fitted with a safety cut-out switch. DO NOT CIRCUMVENT THIS SAFETY SWITCH. DO NOT USE CONTINUOUSLY FOR MORE THAN 30 SECONDS.

## ■ PREPARATION BEFORE USE

Before first use, clean the Bowl with a damp sponge or cloth, rinse and dry well. Grinding is a very fast process. The motor drives the Blades at a high speed to ensure that thorough chopping is achieved. Make sure that whenever you use your Grinder it is standing on a flat, clean, dry surface. Before chopping, please make sure that all parts are correctly assembled.

## ■ CORD STORAGE

This unit comes with an integral cord storage system.



**1** To lengthen the cord, **GENTLY PULL** on the plug to unwind. The lid will spin **ANTI-CLOCKWISE** as the cord unwinds.



**2** After use, **REWIND** the cord by continuously **TURNING** the lid **CLOCKWISE** until it is **REWOUND FULLY**.

*Note: please examine the cord carefully for any signs of damage.*

## ■ OPERATION

- 1** **KEEP** unit unplugged.
- 2** **REMOVE** Lid, and **PLACE** Coffee Beans or Spices into the Bowl.
- 3** **REPLACE** Lid, ensuring switch is in **CORRECT** position.
- 4** **PLUG** unit into Mains Socket.
- 5** **HOLD** Lid and Unit **FIRMLY**.
- 6** **PRESS** and **HOLD** switch to operate.

## CAUTION

Do not use continuously for more than 30 seconds. If required to grind for longer periods, operate for 30 seconds, and then wait 1 minute intervals.

*Note: This is to avoid the motor from burning out.*



---

## CLEANING AND CARE

---

### ■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

#### WARNING

Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

### ■ CLEANING

Never put the Unit under a tap or in a dishwasher, but clean it with a damp sponge. Handle the Blades carefully when cleaning. They are extremely sharp.

- 1 UNPLUG** the appliance.
- 2 RINSE** the Lid under running water.
- 3 LEAVE** all parts to **DRY NATURALLY**.
- 4 WIPE CLEAN** the unit with a damp sponge or cloth

*Note: Never immerse in water.*

*Note: This item is not dishwasher safe.*

### ■ STORAGE

Only store the product in environments ranging from 5°C to 23°C ambient temperature. Failure to comply could result in damage to the product.



---

## WEEE/ENVIRONMENTAL PROTECTION

---




### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

---

## UK PLUG REWIRING

---

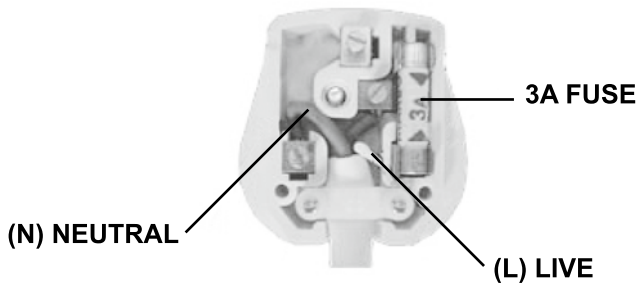

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)  
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug.  
Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.





---

## LLOYTRON® CUSTOMER SERVICES

---

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Kitchen Perfected products please visit our website at [www.lloytron.com](http://www.lloytron.com)  
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K