

kitchenperfect<sup>®</sup>

---

OPERATING INSTRUCTIONS

---

# Wet & Dry Coffee/Spice Grinder



---

MODEL: E5610SS

---



# thank you

Thank you for the purchase of this quality **KITCHEN PERFECTED** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

## FEATURES

- Power: 200w Max.
- 70g Food Capacity
- Easy One Touch Operation
- Stainless Steel Blades
- Powerful Quiet Motor
- Integral Cord Tidy
- Transparent Lid
- Removeable Grinding Cup

## SPECIFICATIONS

Operating Voltage: 220-240v~ 50Hz  
Wattage: 200w

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

#### DO NOT

- Do not use outside or in damp conditions.
  - Do not use for any purposes other than the appliances intended use.
  - Do not use if any part of this appliance is damaged in any way.
- 
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
  - Keep away from hot surfaces, such as gas or electric hobs and ovens etc

This appliance is not intended to be operated by means of an external timer or separate remote control system.



- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- Always unplug when not in use.
- If the supply cord is damaged, do not use. Check before each use!
- This appliance should only be used on a flat surface.

**The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

#### **WARNING**

- Blades are very sharp, even when not in use. Caution should be taken when cleaning or handling blades.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Ensure correct assembly of all parts before use.
- Blades should be checked regularly for any damage or cracks.

#### **DO NOT**

- Do not operate for more than 30 seconds.
- Do not operate in the presence of flammable fumes or mix flammable materials.
- Do not allow children to use this appliance without supervision.



---

## LOCATION OF CONTROLS

---



- A. Motor Body
- B. Grinding Cup
- C. Grinding Cup Sealable Lid
- D. Safety Switches
- E. Transparent Splash Lid
- F. Stainless Steel Blades
- G. Integral Cord tidy

---

## OPERATION

---

### CAUTION

This appliance operates at very high speeds and is fitted with a safety cut-out switch. Do not circumvent this safety switch. Do not use continuously for more than 30 seconds.



## ■ PREPARATION BEFORE USE

Before first use, wash the Bowl in warm water, rinse and dry well. Grinding is a very fast process. The motor drives the Blades at a high speed to ensure that thorough chopping is achieved. Make sure that whenever you use your Grinder it is standing on a flat, clean, dry surface. Before chopping, please make sure that all parts are correctly assembled.

## ■ CORD STORAGE

The unit comes with an integral cord storage system. To remove the cord, gently unwind the cord under the base, and rewind after use. Do not use the grinder without unwinding the cord fully.

**Note:** Please carefully examine the cord for any signs of damage.

## ■ USING THE GRINDER

1. Ensure the cord is full unwound before use.
2. The Grinding Cup can be removed by holding the motor body and then twisting the grinding cup anticlockwise and pulling from the motor unit.
3. To refit the Grinding Cup push into the Motor Body and then twist clockwise.
4. Always ensure the lid for the Grinding Cup is fitted before use.
5. Before first use, remove the Grinding Cup and wash in hot soapy water, rinse and allow to dry naturally.
6. Place any herbs, spices or coffee beans into the Grinding Cup but do not over fill past the MAX mark.
7. Ensure the lid for the Grinding Cup is sealed and fitted properly by pushing onto the Grinding Cup firmly.
8. Inset the Grinding Cup back into the Motor unit.
9. Place the Splash Lid over the cup.
10. Plug the Grinder into the wall socket and turn the power on.
11. When you press down on the Splash Lid, it operates several safety micro-switches that will operate the grinder.
12. Grinding is a very fast process and takes a few seconds.
13. Do not operate the Grinder for more than 30 seconds continuously. After 30 seconds of operation, allow the motor unit to cool down for 1 minute to avoid overheating. After 3 times of operation in the sequence, stop and let the motor cool down for 30 minutes.

### **WARNING**

The Grinder will not operate unless the three switches are activated by the lid. This is a safety feature.



---

## CLEANING AND CARE

---

### ■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

#### WARNING

Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

### ■ CLEANING

Never put the Unit under a tap or in a dishwasher, but clean it with a damp sponge. Handle the Blades carefully when cleaning. They are extremely sharp.

- Unplug the appliance.
- Rinse the Lid under running water.
- Leave all parts to dry naturally.
- Wipe clean the unit with a damp sponge or cloth: Never immerse in water.
- This item is not dishwasher safe.

#### DO NOT

**DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE.**

---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT


Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



---

## FITTING A NEW UK PLUG

---

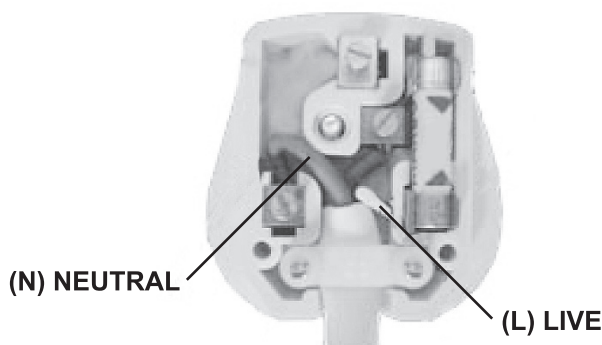

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug.  
Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



---

kitchenperfected **CUSTOMER SERVICES**

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Kitchen Perfected products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86