

 **LLOYTRON[®]**

OPERATING INSTRUCTIONS

‘Coral’

1200w

Dry Iron



MODEL: E7050

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 1200 watts power
- Dry Iron
- Non-Stick Soleplate
- Adjustable Thermostat Control
- Tangle Free Cord (1.9m)

LOCATION OF PARTS

1. Power Indicator Light
2. Temperature Control Dial
3. Non-Stick Soleplate





IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Save these instructions.
- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**
- **Children shall not play with this appliance.**
- **Cleaning and user maintenance shall not be made by children without supervision.**

- The Iron must not be left unattended while it is connected the mains supply.
- Do not allow children to come in reach of the cord, even when not in use.
- Do not operate if the iron has been dropped.
- Do not leave unattended while connected to ironing board.
- Burns can occur from touching the hot metal parts.
- Allow to cool before storing.
- Do not wrap the cord around the iron, loosely loop the cord for storage.

OPERATION

IRONING TIPS

1. Sort the articles to be ironed according to the fabric. Ironing instructions are usually stitched onto an inside seam of the garment and these should be followed at all the times. Start your ironing with the fabrics requiring the lowest heat setting.
2. If you are unsure of the fibre content of a garment, test a small area (a seam or inside hem) before ironing.
3. When in doubt, start with low heat. If wrinkles remain, gradually increase heat to find the best setting for good results without damaging the fabric.

FIRST USE OF YOUR IRON

1. Before using for the first time, check if the voltage rating on the base plate corresponds to the mains voltage in your home.
2. Remove any labels or stickers on the iron.
3. Some parts of the iron have been slightly greased and as a result the iron may smoke slightly when switched on for the first time. After a short while, however, this will cease.

Warning: The iron must not be left unattended while it is connected to the supply

DRY IRON

1. Stand the iron on the heel rest, and then plug the iron in.
2. Turn the control knob to 'MIN'.
3. Adjust the dial to the proper temperature control.
4. When the pilot lamp goes out, it indicates the iron has reached the required temperature.

STORAGE

Be sure the iron is unplugged first. Let iron cool completely before storing. Do not wrap cord around iron.

TEMPERATURE CONTROL

Turn your temperature control dial to the position you desire according to the following fabric indications:

● Synthetics
Synthetiques
Chemiefasern

● ● Silk/Wool
Soie/Laine
Seide/Wolle

● ● ● Linen/Cotton
Toile/Coton
Leinen/Baumwolle

CLEANING AND CARE

MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

WARNING! Before performing any maintenance or cleaning on this appliance, disconnect the appliance from the electricity supply.

CLEANING! The exterior surface of the appliance should be cleaned with a damp cloth only

DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 13-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.


WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

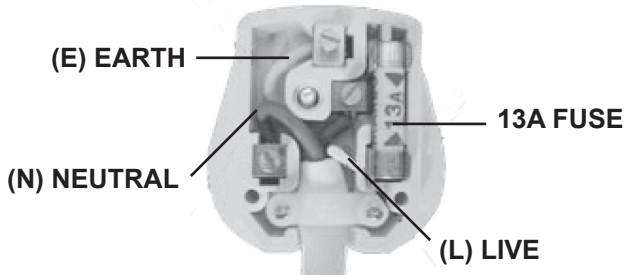


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED. The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at www.lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K