

FOR EASY LIVING
homelife[®]

OPERATING INSTRUCTIONS

Coral

Dry Iron



MODEL: E7051

thank you

Thank you for the purchase of this quality **HOMELIFE** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Power: 1200w Max.
- Dry iron
- Non-stick soleplate
- Adjustable thermostat control
- Cord Length: 2.0m



SPECIFICATIONS

Operating Voltage: 220-240v~50Hz
Power Consumption: 1200w Max.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.



www.lloytronhelpdesk.com

- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- The iron must be used and rested on a stable surface.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.



CAUTION: Hot Surface


- The iron must not be left unattended while it is connected to the mains supply.
- The iron must be used and rested on a flat, stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is flat and stable.
- The iron is not to be used if it has been dropped, if there are any visible signs of damage.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Burns can occur from touching the hot metal parts.
- Allow to cool before storing.

DO NOT

- Do not allow children to come in reach of the cord, even when not in use.
- Do not wrap the cord around the iron.
- Do not leave unattended while connected to ironing board.



LOCATION OF CONTROLS

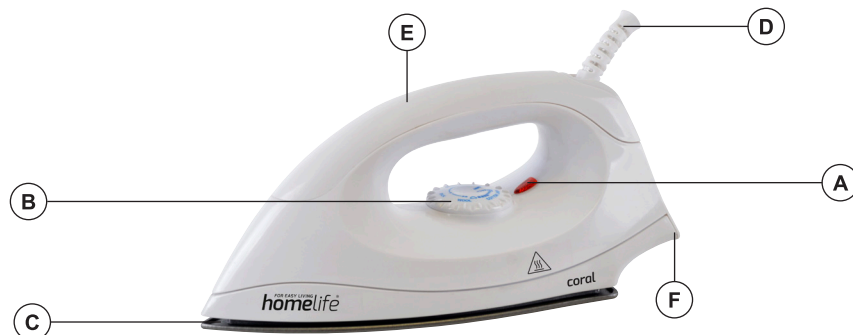

A - Pilot Lamp

The light illuminates to indicate that the heating element is warming up to the temperature setting required. Once the correct temperature is reached, the pilot lamp will turn off.

B - Adjustable thermostat control dial

Adjusting the dial allows users to set the temperature to particular settings dependant upon the types of fabrics being ironed.

C - Non-stick soleplate

Pressing the soleplate onto fabrics will iron out creases once the iron has heated up. This iron has a non-stick soleplate, allowing users to iron fabrics without the worry of damaging fabrics.

D - Power cord

Connect the power cord to a suitable 220-240v~50Hz mains socket to operate the iron.

E - Handle

Gripping the handle allows users to have greater stability and control over the iron during use.

F - Heel rest

Standing the iron vertically on the heel rest allows users to set the iron aside safely.

OPERATION

■ BEFORE FIRST USE

- 1** **BEFORE** using the iron for the first time, **CHECK** if the voltage rating on the base plate corresponds to the mains voltage in your home.
- 2** **REMOVE** any removable labels or stickers on the iron.
- 3** Some parts of the iron have been slightly greased during production and as a result the iron may smoke slightly during first use. This is perfectly **NORMAL** and after a short amount of time the smoking will **STOP**.



WARNING

The iron must not be left unattended while it is connected to the mains supply.

■ **IRONING TIPS**

Ironing instructions are usually stitched onto an inside seam of the garment. These instructions should be followed at all times.

- 1** **SORT** the garments according to the **TYPE** of fabric before ironing.
- 2** **START** your ironing with the fabrics that require the **LOWEST** heat setting.
- 3** If you are **UNSURE** of the fabric content of a garment, **TEST** a small area (a seam or inside hem) **BEFORE** ironing.
- 4** When in doubt, **START** with a low heat. If the wrinkles remain, **GRADUALLY INCREASE** the heat to find the best heat setting for good results without damaging the fabric.

■ **DRY IRON**

- 1** **STAND** the iron on the heel rest and **PLUG** the power cord into a suitable mains supply.
- 2** **TURN** the adjustable thermostat control dial **ANTI-CLOCKWISE** fully to '**MIN**'.
- 3** Based on the type of fabric being ironed, **ADJUST** the control dial **CLOCKWISE** to the suitable temperature setting and allow the iron a few minutes to warm up.
- 4** After a while, the pilot lamp will turn **OFF**, indicating that the correct temperature for the chosen setting has been reached. At this point, ironing of garments **CAN BEGIN**.

***Note:** the pilot lamp will intermittently switch on/off to indicate that the thermostatic heating control is operational.*

■ **CARE AND USE**

AVOID ironing over zippers, buttons and rivets on jeans etc. as they will scratch the soleplate. **IRON AROUND** these types of features instead.

DO NOT

Do not disassemble or attempt to repair the iron yourself.

DO NOT

Do not wrap the cord around the base of the iron or the heel rest during storage, as this type of manipulation may damage the cord.



TEMPERATURE CONTROL

Turn your temperature control dial to the position you desire according to the following fabric indications:

● Synthetics	● ● Silk/Wool	● ● ● Linen/Cotton
● Synthétiques	● ● Soie/Laine	● ● ● Toile/Coton
● Chemiefasern	● ● Seide/Wolle	● ● ● Leinen/Baumwolle

SPECIAL INSTRUCTIONS

1 To avoid circuit overload, **DO NOT** operate another high wattage appliance on the same circuit at the same time as using the iron.

2 If an extension cord is absolutely necessary, a **13A-AMPERE** cord should be used. Cords rated for less amperage may overheat. Care should be taken to position the cord so that it cannot be pulled or tripped over.

DO NOT

Do not wrap the cord around the base of the iron or the heel rest during storage, as this type of manipulation may damage the cord.

CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

WARNING

Before performing any maintenance or cleaning on this appliance, disconnect the appliance from the electricity supply.

■ CLEANING


The exterior surface of the appliance and the soleplate should be cleaned with a clean damp cloth only.

DO NOT

Do not use abrasive cleaners on any part of the appliance.



FITTING A NEW UK PLUG

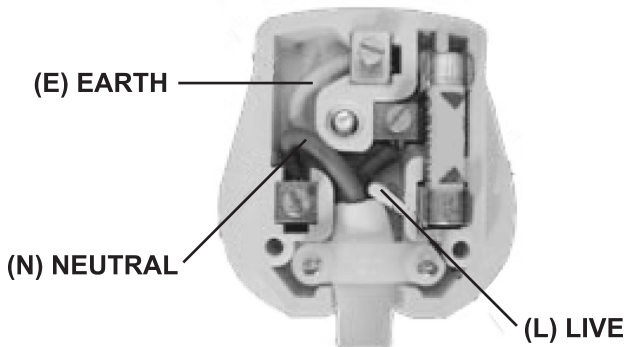


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 7 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

FOR EASY LIVING
homelife® CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Homelife products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH

Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86