

 **LLOYTRON[®]**

OPERATING INSTRUCTIONS

Ripple 1200w Steam Iron



MODEL: E7303

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Max 1200 watts power
- 220-240v~ 50Hz
- Shot of Steam, Steam, Spray or Dry Ironing options
- Vertical Steam Capability
- Non-Stick Sole Plate
- Adjustable Temperature Control
- Spray Button and Nozzle
- The unit is designed and manufactured to conform to British Safety Standards, and also to EMC Regulations.



IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.
- The iron must not be left unattended while it is connected to the mains supply.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- Do not allow children to come in reach of the cord, even when not in use.
- Do not operate if the iron has been dropped.
- Do not leave unattended while connected to ironing board.
- Burns can occur from touching the hot metal parts, hot water or steam.
- Caution should be advised when turning the iron upside down as there may be hot water in the water reservoir.
- Push steam button a few times and lightly shake iron after use to ensure all water is drained from reservoir.
- Allow to cool before storing.
- Do not wrap the cord around the iron. Loosely loop cord for storage.

OPERATION



OPERATION

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 13-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

IRONING TIPS

1. Sort the articles to be ironed according to the fabric. Ironing instructions are usually stitched onto an inside seam of the garment and these should be followed at all the times. Start your ironing with the fabrics requiring the lowest heat setting.
2. If you are unsure of the fibre content of a garment, test a small area (a steam or inside hem) before ironing.
3. When in doubt, start with low heat. If wrinkles remain, gradually increase heat to find the best setting for good results without damaging the fabric.

HOW TO FILL WITH WATER

Note: Remove the supply cable plug from the socket-outlet before filling the reservoir with water.

Confirm that the steam button is in the MIN position when filling the water tank. Fill the tank to the "MAX" line. Do not overfill. Check the correct water level in the tank in the position shown.

FIRST USE OF YOUR IRON

1. Before using for the first time, check if the voltage rating on the base plate corresponds to the mains voltage in your home.
2. Remove any labels or stickers on the iron.
3. Some parts of the iron have been slightly greased and as a result the iron may smoke slightly when switched on for the first time. After a short while, however, this will cease.
4. Normal tap water can usually be used for ironing, but if you live in a hard water area, to ensure optimum performance of your iron, we recommend using distilled or de-ionised water.

Warning: The iron must not be left unattended while it is connected to the supply

USING AS A STEAM IRON

1. Unwrap the cord. Be sure the iron is unplugged from the outlet before filling with water.
2. Turn the selector switch to minimum.
3. Stand the iron on its heel rest.
4. Fill the iron with water. Be careful to never fill over the "MAX" line on the water tank.
5. Plug the iron in.
6. Set the dial to the required position and the pilot lamp will illuminate.
7. In this setting, the iron can be used as a steam iron when the pilot lamp goes out. The lamp will illuminate and go out regularly during ironing as an indication that the temperature control is working properly.
8. Slide the Steam Controller to the desired position to create required steam. Stand the iron on heel rest when rearranging clothing or while not in use. Steaming will stop when the iron is placed on heel rest.

USING THE STEAM BURST BUTTON

Be sure there is water in the tank and the Temperature Control Dial is on steam.

1. Using the iron Horizontally. Lift the iron and press the steam burst button. You may need to press the button a few times after filling to activate the pump. The burst steam facility can be used only when ironing with high ironing temperatures.
2. Using the iron Vertically. The burst function can also be used when the iron is held in the vertical position to remove creases from hanging clothes, curtains, etc.

USING THE SPRAY BUTTON

As long as there is enough water in the water tank, you may use the spray button at any temperature setting on both steam and dry ironing. Press the button several times to activate the pump while you are ironing.

USING AS A DRY IRON

The iron can be used as a dry iron, even if there is water in the water tank. Do not put water in the water tank when the iron is to be used as a dry iron for MANY HOURS.

1. Stand the iron on the heel rest, and then plug the iron in.
2. Turn the steam control knob to 'MIN'.
3. Adjust the dial to the proper temperature control.
4. When the pilot lamp goes out, it indicates the iron has reached the required temperature.

CARE AND USE INSTRUCTIONS

1. Avoid Ironing over zippers, rivets on jeans, etc., as they will scratch the soleplate. Iron around them instead.
2. Water and its minerals vary widely by geographic location. If you live in a hard water area, to ensure optimum performance of your iron, we strongly recommend the use of distilled or de-ionised water, which is readily available in retail stores.
3. Do not disassemble or repair your iron yourself.

TO EMPTY AND STORE

Be sure the iron is unplugged first. Pour out any remaining water by shaking the iron. Make it a habit to empty the iron after each use. After emptying the water tank, store the hot iron in an upright position, so that any moisture remaining will evaporate quickly. Let iron cool completely before storing.

TEMPERATURE CONTROL

Turn your temperature control dial to the position you desire according to the following fabric indications:

● Synthetics
● Synthetiques
● Chemiefasern

● ● Silk/Wool
● ● Soie/Laine
● Seide/Wolle

● ● ● Linen/Cotton
● ● ● Toile/Coton
● Leinen/Baumwolle

CLEANING AND CARE

MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.



WARNING! Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

CLEANING

The exterior surface of the appliance and the soleplate should be cleaned with a clean damp cloth only.

DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE.


WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

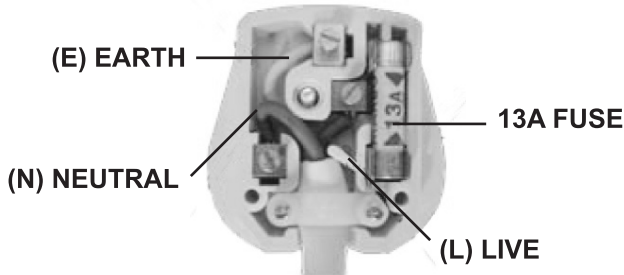


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED. The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at www.lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K