

---

# HOTELPRO™

---

---

## OPERATING INSTRUCTIONS

---

Hotel Pro

# Steam Iron



**SPECIALLY DESIGNED FOR HOTEL USE!  
INSTRUCTIONS MUST BE KEPT WITH IRON!**

---

**MODEL: E7308**

---

# thank you

Thank you for the purchase of this quality **HOTEL PRO** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- Power: 1200w max.
- Steam options: steam & dry ironing
- Steam rate: 15g per min
- Non-stick soleplate
- Tank capacity: 90ml
- Cord length: 2.0m



---

## SPECIFICATIONS

---

Operating Voltage: 220-240v~50Hz

Power Consumption: 1200w Max.

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.



- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- The iron must be used and rested on a stable surface.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.



### **CAUTION: Hot Surface**

- The iron must not be left unattended while it is connected to the mains supply.
- Burns can occur from touching the hot metal parts, hot water or steam.
- Allow to cool before storing.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- Push steam button a few times and lightly shake iron after use to ensure all water is drained from reservoir.
- The iron is not to be used if it has been dropped, if there are any visible signs of damage or if it is leaking.
- keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.

### **DO NOT**

- Do not use outside or in damp conditions.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- Do not allow children to come in to reach of the cord, even when not in use.
- Do not leave unattended while connected to ironing board.
- Do not wrap the cord around the iron.

### **CAUTION**

Should be advised when turning the iron upside down as there may be hot water in the water reservoir.



---

## LOCATION OF CONTROLS

---



### A - Pilot Lamp

The light illuminates to indicate that the heating element is warming up to the temperature setting required. Once the correct temperature is reached, the pilot lamp will turn off.

### B - Adjustable thermostat control dial

Adjusting the dial allows users to set the temperature to particular settings dependant upon the types of fabrics being ironed.

### C - Non-stick soleplate

Pressing the soleplate onto fabrics will iron out creases once the iron has heated up. This iron has a non-stick soleplate, allowing users to iron fabrics without the worry of damaging fabrics.

### D - Power cord

Connect the power cord to a suitable 220-240v~50Hz mains socket to operate the iron.

### E - Handle

Gripping the handle allows users to have greater stability and control over the iron during use.

### F - Heel rest

Standing the iron vertically on the heel rest allows users to set the iron aside safely.

### G - Steam button

Pressing the steam button will release steam from the iron for a much smoother, crease-free finish to the garments.

### H - Water Spout

Pouring water through the water spout will fill up the water tank. Do not fill past the 'Max' mark.



---

# OPERATION

---

## ■ BEFORE FIRST USE

- 1** **BEFORE** using the iron for the first time, **CHECK** if the voltage rating on the base plate corresponds to the mains voltage in your home.
- 2** **REMOVE** any removable labels or stickers on the iron.
- 3** Some parts of the iron have been slightly greased during production and as a result the iron may smoke slightly during first use. This is perfectly **NORMAL** and after a short amount of time the smoking will **STOP**.
- 4** Normal tap water can usually be used for ironing. However, if you live in a hard water area, it is recommended that distilled or de-ionised water is used to ensure optimum performance of this product.

### **WARNING**

The iron must not be left unattended while it is connected to the mains supply.

## ■ IRONING TIPS

Ironing instructions are usually stitched onto an inside seam of the garment. These instructions should be followed at all times.

- 1** **SORT** the garments according to the **TYPE** of fabric before ironing.
- 2** **START** your ironing with the fabrics that require the **LOWEST** heat setting.
- 3** If you are **UNSURE** of the fabric content of a garment, **TEST** a small area (a seam or inside hem) **BEFORE** ironing.
- 4** When in doubt, **START** with a low heat. If the wrinkles remain, **GRADUALLY INCREASE** the heat to find the best heat setting for good results without damaging the fabric.

## ■ FILLING THE WATER TANK

- 1** **ENSURE** that the steam button is set to '**OFF**' when filling the water tank.
- 2** **STAND** the iron on the heel rest.



**3** **OPEN** the cover to **REVEAL** the water spout and **CAREFULLY POUR** water into the spout.

**4** **FILL** the water tank to the '**MAX**' mark.

**5** **CLOSE** the water spout cover to stop any spillages during use.

 **DO NOT**

Do Not overfill past the 'Max' mark.

*Note: remove the power cord from the mains supply before filling the water tank.*

## ■ USING AS A STEAM IRON

**1** **ENSURE** the power cord is **UNPLUGGED** from the mains supply before filling the water tank.

**2** **STAND** the iron on the heel rest.

**3** **TURN** the adjustable thermostat control dial **ANTI-CLOCKWISE FULLY** to the '**OFF**' position.

**4** **FILL** the water tank to the '**MAX**' mark. **DO NOT OVERFILL** past the '**MAX**' mark.

**5** **PLUG** the power cord into a suitable mains power supply.

**6** Based on the type of fabric being ironed, **ADJUST** the control dial **CLOCKWISE** to the suitable temperature setting and **ALLOW** the iron a few minutes to warm up.

**7** After a while, the pilot lamp will turn **OFF**, indicating that the correct temperature for the chosen setting has been reached. At this point, ironing of garments **CAN BEGIN**.

**8** **USING** the iron **HORIZONTALLY**, **LIFT** the iron and **PRESS** the steam button. You may need to **PRESS** the button a **FEW TIMES** after filling the tank to activate the pump.

**9** **PRESS** the steam button **ONCE** to activate steam. **PRESS** the steam button **AGAIN** to deactivate the steam.

*Note: the pilot lamp will intermittently switch on/off to indicate that the thermostatic heating control is operational.*

*Note: The steam feature can only be used when ironing on high temperature settings.*



## ■ DRY IRON

- 1** **STAND** the iron on the heel rest and **PLUG** the power cord into a suitable mains supply.
- 2** **TURN** the adjustable thermostat control dial **ANTI-CLOCKWISE** fully to 'MIN'.
- 3** Based on the type of fabric being ironed, **ADJUST** the control dial **CLOCKWISE** to the suitable temperature setting and allow the iron a few minutes to warm up.
- 4** After a while, the pilot lamp will turn **OFF**, indicating that the correct temperature for the chosen setting has been reached. At this point, ironing of garments **CAN BEGIN**.

*Note: the pilot lamp will intermittently switch on/off to indicate that the thermostatic heating control is operational.*

## ■ CARE AND USE

- 1** **AVOID** ironing over zippers, buttons and rivets on jeans etc. as they will scratch the soleplate. **IRON AROUND** these types of features instead.
- 2** Depending upon geographical location, water content can vary widely, as can the mineral content within water. If you live in a **HARD WATER AREA**, it is **RECOMMENDED** that **DISTILLED** or **DE-IONISED** water is used to ensure optimum performance of this product.

### DO NOT

Do not disassemble or attempt to repair the iron yourself.

### DO NOT

Do not wrap the cord around the base of the iron or the heel rest during storage, as this type of manipulation may damage the cord.

## ■ TO EMPTY AND STORE

- 1** **ENSURE** the iron is **UNPLUGGED** before attempting to empty the water tank.
- 2** **TURN** the iron upside down and **POUR** any remaining water out of iron via the water spout.
- 3** After emptying the water tank, **STAND** the hot iron in an **UPRIGHT** position on the heel rest so that any remaining moisture will evaporate quickly.
- 4** **LEAVE** the iron to **COOL COMPLETELY** before putting it away into storage.

*Note: caution should be advised when turning the iron upside down as there may be hot water in the water reservoir.*



---

## TEMPERATURE CONTROL

---

Turn your temperature control dial to the position you desire according to the following fabric indications:

● Synthetics  
● Synthétiques  
● Chemiefasern

● ● Silk/Wool  
● ● Soie/Laine  
● Seide/Wolle

● ● ● Linen/Cotton  
● ● ● Toile/Coton  
● Leinen/Baumwolle

---

## SPECIAL INSTRUCTIONS

---

**1** To avoid circuit overload, **DO NOT** operate another high wattage appliance on the same circuit at the same time as using the iron.

**2** If an extension cord is absolutely necessary, a **13A-AMPERE** cord should be used. Cords rated for less amperage may overheat. Care should be taken to position the cord so that it cannot be pulled or tripped over.

**⊘ DO NOT**

Do not wrap the cord around the base of the iron or the heel rest during storage, as this type of manipulation may damage the cord.





---

## CLEANING AND CARE

---

### ■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

#### WARNING

Before performing any maintenance or cleaning on this appliance, disconnect the appliance from the electricity supply.

### ■ CLEANING

The exterior surface of the appliance and the soleplate should be cleaned with a clean damp cloth only.

#### DO NOT


Do not use abrasive cleaners on any part of the appliance.



---

## UK PLUG REWIRING

---

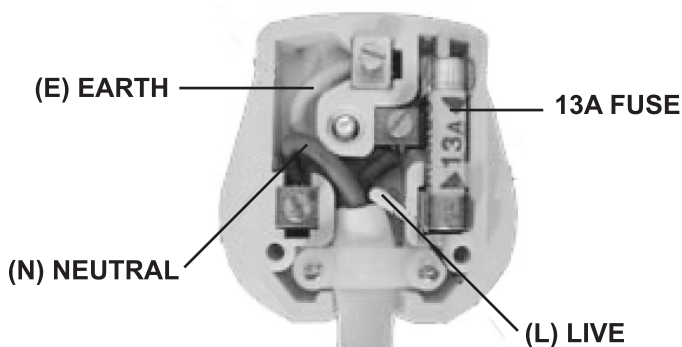

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.  
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  $\oplus$  or coloured GREEN.

### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



---

## **HOTELPRO™** CUSTOMER SERVICES

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Hotel Pro products, visit [www.lloytron.com](http://www.lloytron.com)

### **WARRANTY**

An additional manufacturer's warranty is not provided with this product. If the product develops a manufacturing fault in any way, then under Statutory Rights you must stop use and return it to the retailer in which it was purchased.



Distributed by Lloytron Plc, Laltex House, Leigh, England WN7 3XH