

FOR EASY LIVING  
**homelife**<sup>®</sup>

---

OPERATING INSTRUCTIONS

---

Typhoon  
**Steam Iron**



---

MODEL: E7705

---

# thank you

Thank you for the purchase of this quality **HOMELIFE** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- Max 2200 watts power
- Steam Options: Steam, Shot of Steam, Vertical Steam, Spray & Dry Ironing
- Self Clean Function
- Anti Drip
- Anti Calc
- Steam Rate: 40g Per Minute
- Shot of Steam Rate: 140g Per Minute
- Stainless Steel Soleplate
- Tank Capacity: 300ml
- Cord Length: 2.0m



---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.

- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- The iron must be used and rested on a stable surface.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.



### **CAUTION: Hot Surface**

- The iron must not be left unattended while it is connected to the mains supply.
- Burns can occur from touching the hot metal parts, hot water or steam.
- Allow to cool before storing.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- Push steam button a few times and lightly shake iron after use to ensure all water is drained from reservoir.
- The iron is not to be used if it has been dropped, if there are any visible signs of damage or if it is leaking.
- keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.

### **DO NOT**

- Do not use outside or in damp conditions.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- Do not allow children to come in to reach of the cord, even when not in use.
- Do not leave unattended while connected to ironing board.
- Do not wrap the cord around the iron.

### **CAUTION**

Should be advised when turning the iron upside down as there may be hot water in the water reservoir.

---

## LOCATION OF CONTROLS

---



- A - Spray Button
- B - Burst of Steam Button
- C - Steam Rate
- D - Water Spout
- E - Spray Nozzle
- F - Temperature Control Dial
- G - Indicator Light
- H - Self Clean Button

---

## SPECIFICATIONS

---

Operating Voltage: 220-240v~50Hz  
Power Consumption: 2200w Max.

---

# OPERATION

---

## ■ IRONING TIPS

- 1** Sort the articles to be ironed according to the fabric. Ironing instructions are usually stitched onto an inside seam of the garment and these should be followed at all the times. Start your ironing with the fabrics requiring the lowest heat setting.
- 2** If you are unsure of the fibre content of a garment, test a small area (a seam or inside hem) before ironing.
- 3** When in doubt, start with low heat. If wrinkles remain, gradually increase heat to find the best setting for good results without damaging the fabric.

## ■ HOW TO FILL WITH WATER

**Note:** Remove the supply cable plug from the socket-outlet before filling the reservoir with water.

Confirm that the steam button is in the MIN position when filling the water tank. Fill the tank to the "MAX" line. Do not overfill. Check the correct water level in the tank in the position shown.

## ■ FIRST USE OF YOUR IRON

- 1** Before using for the first time, check if the voltage rating on the base plate corresponds to the mains voltage in your home.
- 2** Remove any labels or stickers on the iron.
- 3** Some parts of the iron have been slightly greased and as a result the iron may smoke slightly when switched on for the first time. After a short while, however, this will cease.
- 4** Normal tap water can usually be used for ironing, but if you live in a hard water area, to ensure optimum performance of your iron, we recommend using distilled or de-ionised water.

### **WARNING**

The iron must not be left unattended while it is connected to the supply.

## ■ USING AS A STEAM IRON

- 1** Unwrap the cord. Be sure the iron is unplugged from the outlet before filling with water.
- 2** Turn the selector switch to minimum.
- 3** Stand the iron on its heel rest.
- 4** Fill the iron with water. Be careful to never fill over the "MAX" line on the water tank.
- 5** Plug the iron in.
- 6** Set the dial to the required position and the pilot lamp will illuminate.
- 7** In this setting, the iron can be used as a steam iron when the pilot lamp goes out. The lamp will illuminate and go out regularly during ironing as an indication that the temperature control is working properly.
- 8** Slide the Steam Controller to the desired position to create required steam. Stand the iron on heel rest when rearranging clothing or while not in use. Steaming will stop when the iron is placed on heel rest.

## ■ USING THE STEAM BURST BUTTON

Be sure there is water in the tank and the Temperature Control Dial is on steam.

- 1** Using the iron Horizontally. Lift the iron and press the steam burst button. You may need to press the button a few times after filling to activate the pump. The burst steam facility can be used only when ironing with high ironing temperatures.
- 2** Using the iron Vertically. The burst function can also be used when the iron is held in the vertical position to remove creases from hanging clothes, curtains, etc.

## ■ USING THE SPRAY BUTTON

As long as there is enough water in the water tank, you may use the spray button at any temperature setting on both steam and dry ironing. Press the button several times to activate the pump while you are ironing.

## ■ USING AS A DRY IRON

The iron can be used as a dry iron, even if there is water in the water tank. Do not put water in the water tank when the iron is to be used as a dry iron for MANY HOURS.

- 1** Stand the iron on the heel rest, and then plug the iron in.
- 2** Turn the steam control knob to 'MIN'.

**3** Adjust the dial to the proper temperature control.

**4** When the pilot lamp goes out, it indicates the iron has reached the required temperature.

#### ■ **ANTI - DRIP FUNCTION**

This Prevents the continuous dripping of water onto garments while ironing and is built into the iron.

#### ■ **ANTI - CALC FUNCTION**

This built-in device reduces the amount of calcium deposits from hard water being accumulated inside the iron and around the steam holes.

#### ■ **SELF CLEAN FUNCTION**

Pressing the self-cleaning button blows air through the steam vents to blow out mineral deposits; doing this regularly will prevent these deposits from ejecting themselves on your nice black shirt.

#### ■ **CARE AND USE INSTRUCTIONS**

**1** Avoid Ironing over zippers, rivets on jeans, etc., as they will scratch the soleplate. Iron around them instead.

**2** Water and its minerals vary widely by geographic location. If you live in a hard water area, to ensure optimum performance of your iron, we strongly recommend the use of distilled or de-ionised water, which is readily available in retail stores.

**3** Do not disassemble or repair your iron yourself.

#### ■ **TO EMPTY AND STORE**

Be sure the iron is unplugged first. Pour out any remaining water by shaking the iron. Make it a habit to empty the iron after each use. After emptying the water tank, store the hot iron in an upright position, so that any moisture remaining will evaporate quickly. Let iron cool completely before storing.

---

## TEMPERATURE CONTROL

---

Turn your temperature control dial to the position you desire according to the following fabric indications:

● Synthetics  
● Synthétiques  
● Chemiefasern

● ● Silk/Wool  
● ● Soie/Laine  
● ● Seide/Wolle

● ● ● Linen/Cotton  
● ● ● Toile/Coton  
● ● ● Leinen/Baumwolle

---

## CLEANING AND CARE

---

### ■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

#### WARNING

Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

### ■ CLEANING

The exterior surface of the appliance and the soleplate should be cleaned with a clean damp cloth only.


#### DO NOT

Do not use abrasive cleaners on any part of this appliance.

---

## FITTING A NEW UK PLUG

---

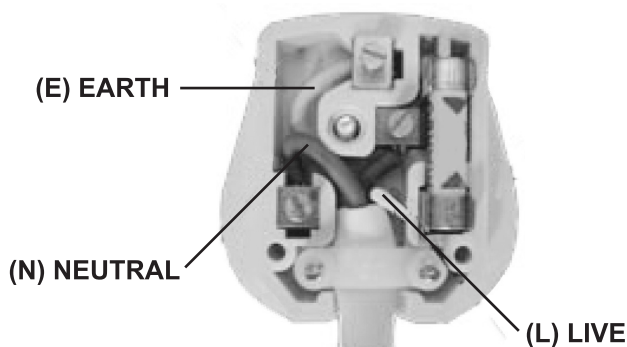

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

|                   |             |
|-------------------|-------------|
| BLUE:             | NEUTRAL (N) |
| BROWN:            | LIVE (L)    |
| GREEN AND YELLOW: | EARTH (E)   |

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.  
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

---

FOR EASY LIVING  
**homelife**® **CUSTOMER SERVICES**

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Homelife products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire, D02 AY86