



OPERATING INSTRUCTIONS

Bagless Vacuum Cleaner



MODEL: E8012GR

If you have any queries about this product, there are three ways to contact our customer service department:



08454 81 8808



customerservice@lloytron.com



www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Capacity: 0.5 Litre
- 120w Suction Power
- 600w Power Motor
- Air Flow: 1.2m/min
- Filter: HEPA
- Integrated Crevice Tool.
- Improved Brush with Wheel Base
- On/off Switch on Handle and Unit.
- Weight: 1.6Kg
- 5m Cord Length



SPECIFICATIONS

Operating Voltage: 220-240v~50Hz

Power Consumption: 600w Max.

Suction Power: 120w



www.lloytronhelpdesk.com

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

DO NOT

Do not use for any purposes other than the appliances intended use.

- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

DO NOT

Do not use if any part of this appliance is damaged in any way.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a stable surface.

⊘ DO NOT

Do not run appliance over cord.

⊘ DO NOT

Do not operate the system with a damaged cord or plug, or if the appliance or any other part of the system has been dropped or damaged.

- To avoid the risk of electric shock, do not disassemble or attempt to repair the bagless convertible stick vacuum. Return the unit for examination and repair. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the bagless convertible stick vacuum is used.
- Close supervision is necessary for any appliance being used near children.

⊘ DO NOT

Do not leave the Vacuum unattended while connected.

⊘ DO NOT

Do not pick up any combustible liquids or solvents.

⊘ DO NOT

Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.

- Keep hair, loose clothing, fingers and other parts of body away from openings and any moving parts.

⊘ DO NOT

Do not use without filter in place.

- Use extra care when cleaning on stairs.

⊘ DO NOT

Do not leave the bagless convertible stick vacuum plugged in when un-attended.

- Unplug the electrical cord when not in use and before servicing.

⊘ DO NOT

Do not allow to be used as a toy.

- Close attention is necessary when near children, pets or plants.
- Use only as described in this manual.
- Use only manufacturer's recommended accessories.

⊘ DO NOT

Do not pull cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.

⊘ DO NOT

Do not run vacuum cleaner over the cord.


- Clean on a regular basis to avoid overheating and blockages.

⊘ DO NOT

Do not use for liquids of any kind.



LOCATION OF CONTROLS

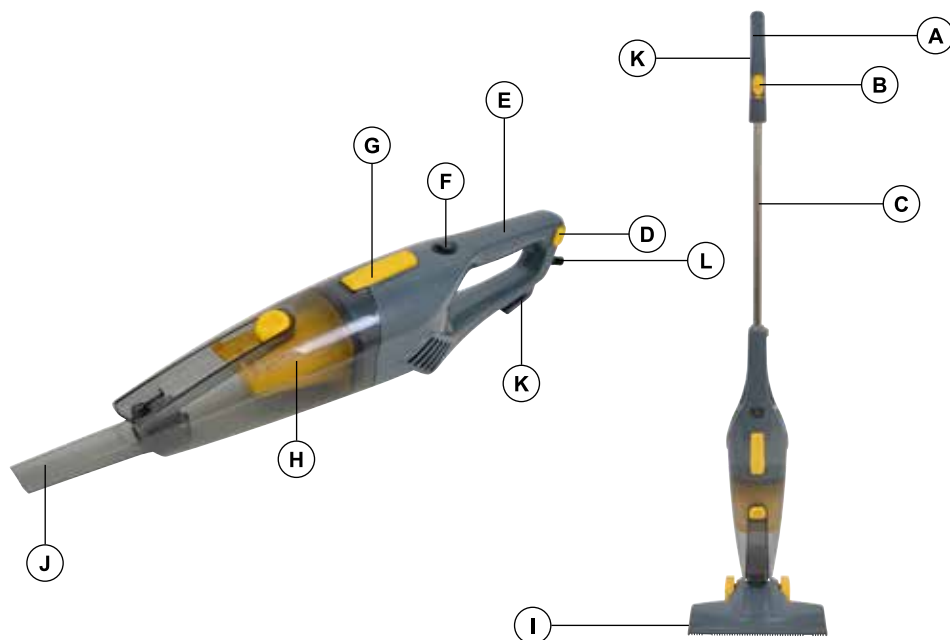

A - Upright Handle Grip

Use the handle grip to manoeuvre the vacuum cleaner in the upright mode.

B - Upright Handle Grip On/Off Switch

This model has an on/off switch on the Handle Grip for ease of use in the upright mode.

C - Upright Handle Stem

Fit the Handle Stem to the vacuum cleaner for use in the upright mode.

D - Handle Stem Release Button

Press and hold the button whilst pulling the Handle Stem up to remove it. Removing the Handle Stem allows users to manoeuvre the vacuum cleaner in handheld mode.

E - Handheld Mode Vacuum Handle

Use this handle when using the vacuum cleaner in handheld mode.

F - On/Off Switch

Toggle the switch to 'on' to operate the vacuum cleaner in handheld mode.

G - Dust Container Release Catch

Release the catch to access the HEPA filter for emptying and cleaning. Make sure that the catch is pressed back into place when clipping the dust container back into place.

H - Dust Container/HEPA Filter

The improved HEPA has a mesh outer filter to avoid filter blockages. Carefully empty the HEPA filter when it is full.

I - Floor Brush

The improved floor brush allows for smoother guiding and improved performance.

J - Integrated Crevice Tool

Release the catch to unfold the crevice tool. This is useful for manoeuvring the vacuum cleaner into small, difficult spaces.

K- Cord Tie Hooks

Wrap the cord around the hooks for ease of storage.

L - Mains Cord


Connect the mains cord to a suitable 220-240v~50Hz mains power supply.




OPERATION

Always remove the mains cord from the power supply before attempting to assemble/disassemble any removable parts or accessories. This general purpose vacuum cleaner can be used on hard floors and carpeted floors.


■ UPRIGHT MODE

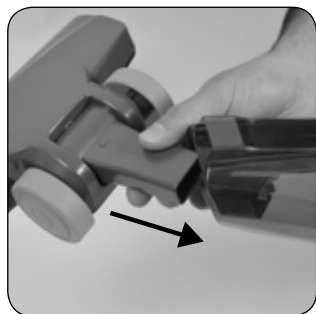


1 SELECT the floor brush accessory and **INSERT** it into the nozzle at the front of the vacuum cleaner.

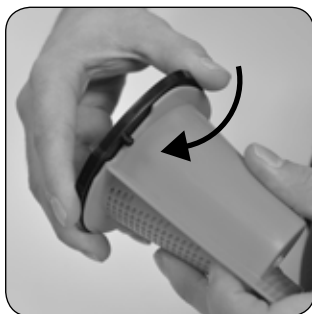

2 INSERT the HEPA filter into the mesh outer filter and **TWIST** it **CLOCKWISE** to lock it into place before inserting it into the dust container. Be sure to **CHECK** that it **FITS SECURELY** in the dust container.

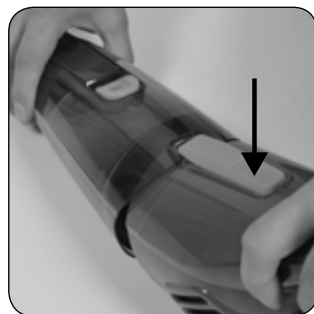

3 INSERT the motor unit of the vacuum cleaner into the dust container and **PRESS** the dust container release catch to **LOCK** it into place.

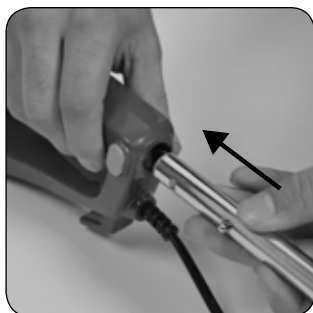


4 INSERT the handle stem into the designated hole at the top of the handheld mode vacuum handle. You should hear a 'click' to indicate that it has locked into place.




5 To OPERATE the vacuum cleaner, toggle the On/Off switch to '**ON**', located on the upright handle grip.



■ HANDHELD MODE

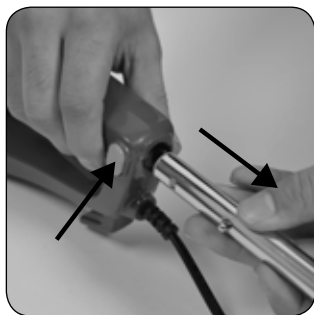


1 To **REMOVE** the handle stem, **PRESS** and **HOLD** the handle stem release button whilst **PULLING** the handle stem up to remove it. Removing the handle stem allows users to manoeuvre the vacuum cleaner in handheld mode.

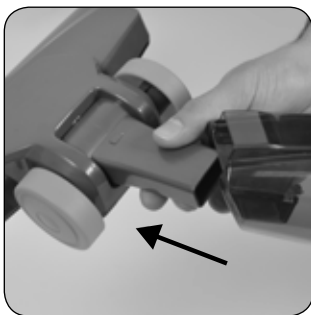


2 **REMOVE** the floor brush accessory by **GENTLY PULLING** it away from the nozzle at the front of the vacuum cleaner.




3 **INSERT** the HEPA filter into the mesh outer filter and **TWIST** it **CLOCKWISE** to lock it into place before inserting it into the dust container. Be sure to **CHECK** that it fits **SECURELY** in the dust container.

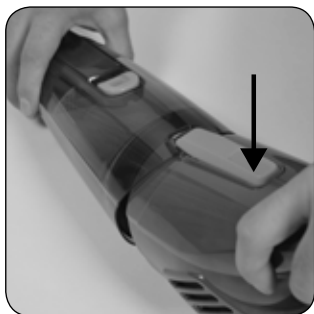

4 **INSERT** the motor unit of the vacuum cleaner into the dust container and press the dust container release catch to **LOCK** it into place.

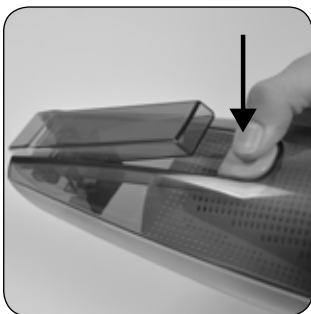

5 **RELEASE** the catch on the integrated crevice tool and **OPEN** it out until it is **FULLY EXTENDED**.

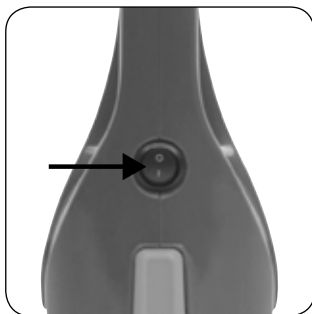


6 To **OPERATE** the vacuum cleaner, toggle the On/Off switch to '**ON**', located on the vacuum cleaner motor unit.




CLEANING AND CARE

■ REMOVING/EMPTYING THE HEPA FILTER

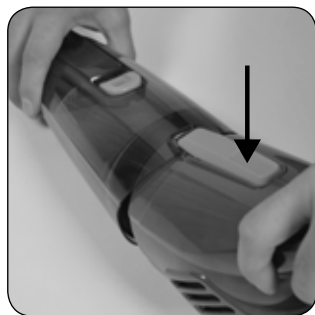

1 PRESS the dust container release switch to **REMOVE** the motor unit from the dust container.

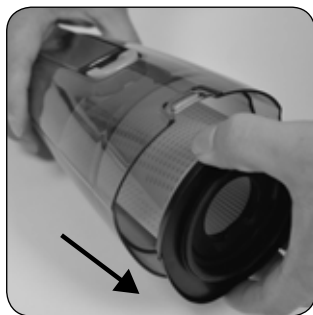


2 GENTLY LIFT the HEPA filter from the dust container.




3 REMOVE the HEPA filter from the mesh outer filter by **TWISTING** it **ANTI-CLOCKWISE**.



4 EMPTY any dust from the HEPA filter, mesh outer filter and dust container. **RINSE** it under cold water and leave to **DRY NATURALLY** for up to 24 hours **BEFORE** re-assembly. **USE** a damp cloth with a mild detergent solution to **WIPE** the inside of the dust container.

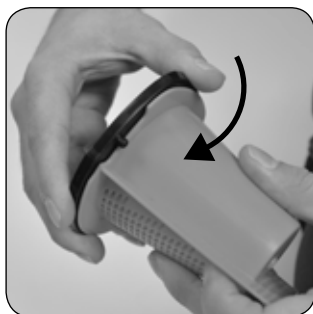

5 INSERT the HEPA filter back into the mesh outer filter and **TWIST CLOCKWISE** to **LOCK** it into place, before **INSERTING** it into the dust container, ensuring that it **FITS** into place **SECURELY**.

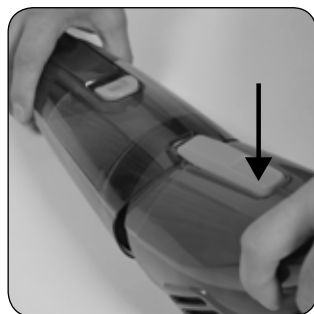

6 INSERT the motor unit of the vacuum cleaner into the dust container and **PRESS** the dust container release catch to **LOCK** it into place.

⊘ DO NOT

Do not assemble if the HEPA filter is wet.

⊘ DO NOT

Do not machine wash.



TROUBLE SHOOTING

Problem	Possible Cause	Possible Solutions
The appliance does not work.	<ul style="list-style-type: none"> • The main plug may not be properly into the wall socket. • There is no power in the wall socket. 	<ul style="list-style-type: none"> • Push hard on the plug to make sure it is well placed. • Check the fuse or cut-off the power and check if fuse should be changed. • Contact a qualified and authorised employee of the after-sales service.
The vacuum cleaner has little, or no, power.	<ul style="list-style-type: none"> • The dust container is not correctly installed. • The dust container is full. • One, or several, filters are blocked. 	<ul style="list-style-type: none"> • Put the dust container back in the appliance again, making sure it is properly placed. • Empty the dust container. • Clean and rinse the filter (s) with warm or cold water. • Turn off the appliance and unplug. Check if the suction end and/or the accessories are not blocked in any way.
Dust comes out of the vacuum cleaner.	<ul style="list-style-type: none"> • The dust container is not correctly installed. • The dust container is full. 	<ul style="list-style-type: none"> • Put the dust container back in the appliance again, making sure it is properly placed. • Empty the dust container.
The accessories do not suck in any dust.	<ul style="list-style-type: none"> • A dust container is full. • One, or several, filters are blocked. • The suction end is blocked. 	<ul style="list-style-type: none"> • Clean the dust container. • Clean and rinse the filter (s) with warm or cold water. • Turn off the appliance and unplug. Check if the suction end and/or the accessories are not blocked in any way.



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.




■ MOTOR UNIT DISPOSAL

Dispose of the motor separately from the rest of the product. Unscrew all screws to open up the product and remove the motor. Always check with local government guidelines for proper disposal method.



UK PLUG REWIRING

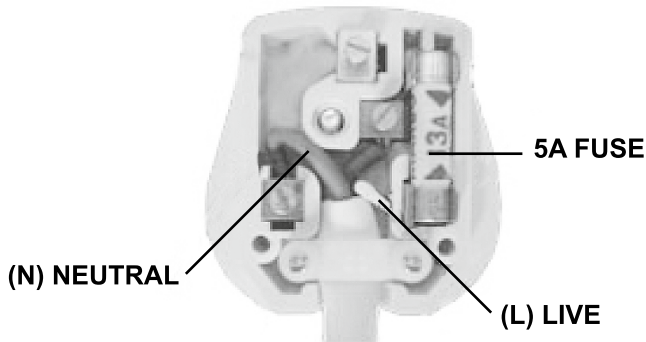

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 5 Amp fuse in a 13 Amp type (BS1363) plug.
Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.





LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K