

FOR EASY LIVING
homelife®

OPERATING INSTRUCTIONS

Wet & Dry Cordless Hand Held Vacuum



MODEL: E8014

thank you

Thank you for the purchase of this quality **HOMELIFE** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Modern slim line design with powerful 80w suction
- Multi-Surface Wet or Dry Cleaning
- Lightweight 600g
- Wall mountable or Free Standing
- Running Time: 30 minutes approx
- Charging Time: 4 hours
- Easy Empty Bagless Dust Container
- Washable HEPA Filter to reduce allergies
- Electronic Overcharge Protection
- Multifunction LED:
 - Low Power = Green
 - High Power = Blue
 - Charging = Red Flashing
 - Full Charge = Blue

SPECIFICATIONS

- Motor Power: 80w
- Low Voltage Adaptor: Input 100v-240V~ / Output: 14v DC
- Rechargeable 2000mAh 11.1v Lithium ion Battery
- Dust Capacity: 350ml
- Liquid Capacity: 100ml
- Run Time: 20min approx. on Turbo, 30 min approx. on Normal
- Vacuum Power: 4.5kPa on Turbo, 2.5kPa on Normal
- Noise Level: 80 db

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Children from 3 years and less than 8 years shall only switch on/off the appliance provided it is placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

WARNING

- Do not use for any purposes other than the appliances intended use.
- Do not touch the power cord or plug with wet hands.
- Do not use the appliance to vacuum inflammable substances, like cigarettes and hot ashes.
- Keep the openings free to avoid blockage, like hair and loose clothing that may reduce air flow.
- Do not use without HEPA filter or filter cone in place.
- Turn off the appliance before unplugging and after using.
- If the appliance or cord is damaged, do not use anymore, It must be repaired by a qualified service agent.
- This appliance is not intended to be used with a separate timer or remote control system.
- Only use the charging adaptor supplied with this vacuum. Others may damage the battery pack.


IMPORTANT: Do not allow dust container to overfill. 100ml for liquid, 450ml for dust.



UNPACKING THE APPLIANCE

1. Remove the appliance from the package.
2. Remove all packaging material such as films, filler, cable ties and cardboard.
3. Check the delivery contents for completeness.
4. Should the package contents be incomplete or damages be found, do not take the appliance into operation. Take it immediately back to the dealer.
5. Remove the transport lock from the on/off switch.

LOCATION OF CONTROLS

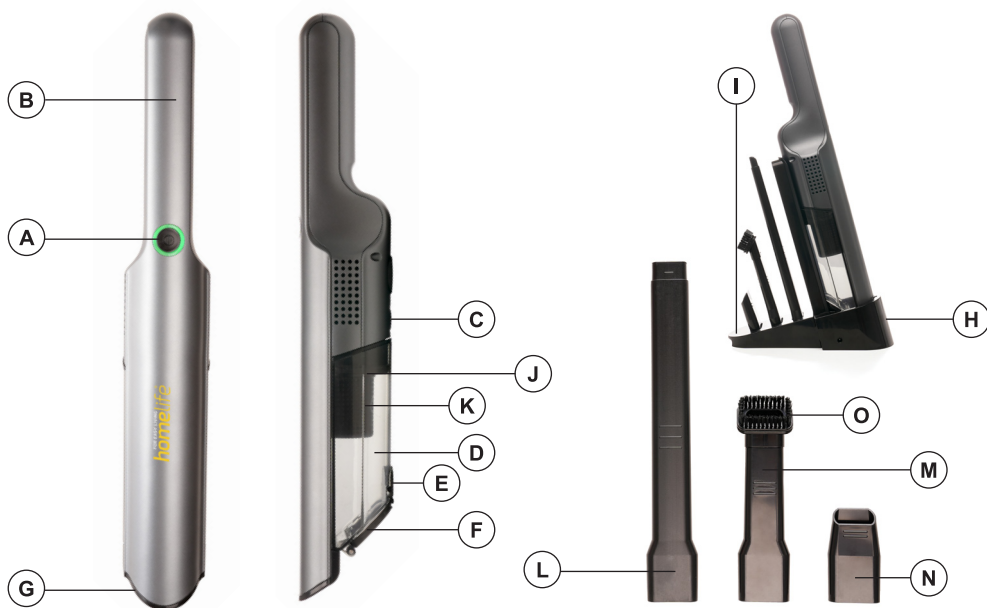

- A - On/Off switch with Multifunction LED
B - Handle
C - Push Button for Unlocking the Dust Container
D - Dust Container
E - Opener/Locking of the Flap
F - Opening Flap
G - Connector for the accessories
H - Connection socket for the Power Supply Unit
I - 2-piece Multifunction stand (Wall Mount/
Charging Station and Accessory Holder)
J - HEPA filter with Sealing ring

- K - Coarse Filter
L - Crevice Nozzle, Long
M - Crevice Nozzle, Medium Length
N - Crevice Nozzle, Short
O - Brush Attachment

WITHOUT ILLUSTRATION

- 1x Power Supply Unit
2x Plug
2x Screw



NOTES FOR USE

- The appliance is suitable for quickly vacuuming small amounts of dry dirt or dust.
- Dirty filters reduce the suction power of the vacuum, so we recommend regular cleaning of the existing dirt filters.
- The appliance is operated via the charged battery. Charging is carried out via the power supply unit supplied, which is connected to the charging station. Direct mains operation with the power supply unit is not possible.

■ NOZZLE ATTACHMENTS

- The nozzle attachments are easy to attach and detach by push fit.
- Attach the brush attachment to a crevice nozzle.

■ 2-PIECE MULTIFUNCTION STAND

- If you want to set up the multifunction stand, connect the charging station and the accessory holder to each other at the plug connection.
- You can place the appliance and the accessories in it.
- If you connect the power supply unit to the connection socket, the multifunction stand also serves as a charging station.
- If you prefer to use the charging station as a wall mount, disconnect it from the accessory mount again.

ATTACH THE CHARGING STATION TO THE WALL

Mount the charging station near a power socket, and within reach of the cable length.

1. Measure the distance between the two slotted holes of the mount and drill two holes in the wall at this distance. Check for pipes and electrical cables first.
2. Insert the plugs into the wall.
3. Turn the screws into the plugs with a screwdriver so that they protrude approx. 3-4mm.
4. Hang the wall mount on the screws.



CHARGING THE RECHARGEABLE BATTERY

1. Switch off the appliance.
2. Place the appliance in the charging station.
3. Connect the power supply unit to the connection socket.
4. Charge the appliance for 4.5 hours before using it for the first time.
 - During the charging process, the LED on the switch flashes red.
 - When the battery is fully charged, the LED on the switch lights up blue continuously.
 - The LED goes out when you disconnect the mains plug from the socket or when you remove the appliance from the charging station.
 - It is normal for the appliance to heat up during charging.
5. Stop all further charging after 4.5 hours at the latest or when the LED lights up solid blue.

WARNING

Always disconnect the mains plug from the socket after charging.

USING THE APPLIANCE

On/Off Switch with Multifunction LED

SWITCH	FUNCTION	LED	MEANING
Press 1x Briefly	Switch on Appliance	Lights Green	Power Level 1
Press and Hold Longer		Lights Blue	Power Level 2
Press 1x Briefly	Switch off Appliance	Is Off	

The LED on the switch flashes for approx. 30 seconds during operation when the end of the rechargeable battery capacity is reached. The appliance then switches off. Recharge the rechargeable battery.

■ OPERATING

1. Remove the appliance from the charging station.
2. Attach a nozzle. You can also attach the brush attachment to one of the two crevice nozzles.
3. Switch on the appliance with the switch.
4. If you want to vacuum at the higher power level, keep the switch pressed for approx. 3 seconds during operation.
5. Observe the MAX marking on the dust container. The maximum capacity is 350ml for dust and 100ml for liquid.



■ END OF OPERATION

1. Switch off the appliance.
2. Empty the dust container. Clean the filter unit after each use to restore the appliance to full performance the next time you use it.
3. Then place the appliance in the charging station.

MAINTENANCE

■ EMPTYING THE DUST CONTAINER

1. If necessary, detach the crevice nozzle from the appliance.
2. Hold the appliance with the opening flap over a dustbin.
3. Empty the contents of the dust container. To do this, press the locking on the dust container to open the flap.



4. Close the flap again. The locking mechanism on the dust container must engage.

■ THE FILTER SYSTEM

The filter system is located in the dust container and consists of:

- HEPA filter with seal ring
- Coarse filter

To clean the filter system, proceed as follows:

1. Empty the dust container as described before.
2. Dismantling the filter system,
 - 2.1 Grasp the appliance with one hand so that you can press the **PUSH** button with your thumb. With the other hand, pull the dust container upwards at the same time. You can also place the appliance on a stable surface.



- 2.2** Remove the filter system. Pull the HEPA filter out of the coarse filter.
- 3.** Cleaning the filters,
- 3.1** Hold both filters over the dustbin can and tap out the dust. You may also brush out the HEPA filter.
In case of heavy staining, clean the filters under running water.
- 3.2** Let the filters air-dry completely before refitting them!
- 3.3** Wipe the dust container with a damp cloth and then wipe dry.
- 4.** Mounting the Filter System,
- 4.1** Put the HEPA filter back into the coarse filter. Press the HEPA filter with the sealing ring firmly into the coarse filter as far as it will go.
- 4.2** Place the filter system completely assembled into the dust container.
- 4.3** Reattach the dust container to the hand-held unit. First place the dust container with the catches in the recesses at the bottom of the housing. Press the dust container against the housing. It must audibly click into place.

CLEANING

WARNING

Never immerse the motor housing in water for cleaning. It could cause an electric shock or fire.

CAUTION

- Do not use a wire brush or other abrasive objects.
- Do not use sharp or abrasive cleaning agents.
- The individual components are not suitable for cleaning in the dishwasher.

- The housing of the appliance and the accessories can be wiped with a slightly damp cloth.
- You can wipe the power supply unit with a dry cloth.

■ STORAGE

- Clean the appliance as described and allow it to dry completely.
- Always store the appliance out of the reach of children in a well-ventilated and dry place.
- The storage temperature should be between 10°C and 20°C.
- We recommend storing the appliance in its original packaging if you do not intend to use it for a long period of time.
- Life of the rechargeable battery: Even when switched off, the rechargeable battery discharges continuously. If the appliance is out of use a longer period of time, charge the rechargeable battery at least once every 4 to 6 weeks.



TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTION
The appliance is without function.	The rechargeable battery is low.	Charge the rechargeable battery.
	The rechargeable battery is faulty.	Contact our service or your dealer.
During operation, the LED on the switch flashes for approx. 30 seconds. The appliance then switches off.	The rechargeable battery is low.	Charge the rechargeable battery.
Weak suction power.	The battery is almost low.	Charge the rechargeable battery.
	The dust container is full.	Empty the dust container.
	The filters are dirty.	Clean the filters as described under "Maintenance".
		<div>⚠ CAUTION</div> <ul style="list-style-type: none"> • Only resume operation with dry filters!
The battery rechargeable does not hold a charge.	The rechargeable battery has reached the end of its life.	Contact your dealer.



TECHNICAL DATA

Model: E8014GR

Net Weight (Handheld unit, charging Station, power supply unit): approx. 0.83kg

Protection class (appliance): III

Protection class (Power supply unit): II

Rechargeable Battery: 3x3.7v, 2000mAh Li-Ion 22.2Wh

Operating time: 30 minutes maximum

Charging time: approx. 4.5 hours

■ PRODUCT SPECIFICATION IN ACCORDANCE WITH REGULATION (EU) 2019/1782 POWER SUPPLIES

INFORMATION ABOUT THE POWER SUPPLY USED	VALUE	UNIT
Model Identifier	E8014	
Input Voltage	100-240	V~
Input Alternating Current Frequency	50-60	Hz
Output Voltage AC/DC	14.0	V DC
Output Current	0.5	A
Output Power	7.0	W
Average Efficiency in Operation	79.9	%
Low Load Efficiency (10%)	*	%
No-Load Power Consumption	0.06	W

* Not applicable due to an output power of less than 10w.

The relevant load conditions are as follows:

Percentage of nameplate output current

Load Condition 1	100% ± 2%
Load Condition 2	75% ± 2%
Load Condition 3	50% ± 2%
Load Condition 4	25% ± 2%
Load Condition 5	10% ± 1%
Load Condition 6	0% (no-load condition)



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



FOR EASY LIVING
homelife® **CUSTOMER SERVICES**

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about HomeLife products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire, D02 AY86