

FOR EASY LIVING
homelife[®]

OPERATING INSTRUCTIONS

Bagless Cyclone Vacuum



MODEL: E8101

thank you

Thank you for the purchase of this quality **HOMELIFE** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Powerful 800w cyclone suction
 - Multi-Surface Cleaning
 - Compact & Lightweight
 - Easy Empty Bagless Dust Container
 - Washable Sponge Filter
 - Auto Cord Rewind
 - Extra long 4.5m (approx.) cord length
- Includes:
- Chrome telescopic tube
 - High efficiency floor brush
 - 2in1 crevice nozzle
 - 1.4m approx. flexible hose
 - Washable Sponge filter
 - Hose tidy holder

SPECIFICATIONS

- Operating Voltage: 220-240v~50Hz
 - Power Output: 800w max
 - Cord Length: 4.5m approx.
 - Dust Cup Capacity: 1.5ltr
 - Suction Power: 86w (Max)
 - Vacuum Power: 17kpa
 - Noise Level: 78 db
- Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.



- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Children from 3 years and less than 8 years shall only switch on/off the appliance provided it is placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.



WARNING

- Do not use outside or in damp / wet conditions.
- Do not use for any purposes other than the appliances intended use.
- Do not touch the power cord or plug with wet hands.
- Do not use the appliance to vacuum inflammable substances, like cigarettes and hot ashes.
- Keep the openings free to avoid blockage, like hair and loose clothing that may reduce air flow.
- Turn off the appliance before unplugging and after using.
- Never allow children to use this appliance.
- If the appliance or cord is damaged, do not use anymore, It must be repaired by a qualified service agent.
- Never pull the power cord to disconnect the plug attached to this appliance from its mains socket.
- This appliance is not intended to be used with a separate timer or remote control system.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

- Do not remove the plug from the socket by pulling the cable or the appliance itself.
- Do not run the appliance over the power cable.
- Do not the appliance to vacuum lighted matches, cigarette ends or hot ash.
- Do not use the appliance on wet surfaces.
- Do not place it near a heat source
- Do not use the appliance to vacuum needles, drawing-pins or sharp items.



LOCATION OF CONTROLS



A - Tube Handle

B - Flexible hose

C - Wind-force adjuster/Suction Release

D - Adjustable Tube

E - Floor brush for hard and soft floor

F - Flexible hose connector

G - Dust container

H - Cord crewing button

I - ON/OFF button

J - Carriage

 


ASSEMBLING THE VACUUM CLEANER

Always remove the plug from the power socket before fitting or removing accessories!

■ FITTING THE FLEXIBLE TUBE


Insert the flexible tube into the air intake duct on the appliance, and press until it clicks into position.

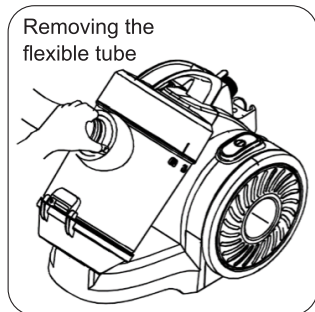

Remove the plug from the power socket.

To release the flexible tube, press the button on the end of the tube firmly and pull from the air intake duct.

■ FITTING THE EXTENSION TUBES AND ACCESSORIES

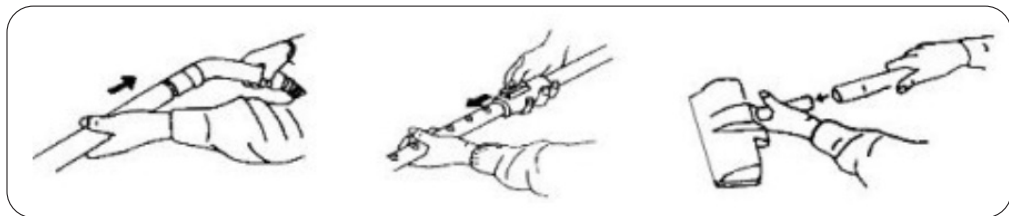

■ REMOVING THE EXTENSION TUBES AND ACCESSORIES

To remove the accessories, pull firmly apart.




INSTRUCTION FOR USE

Before using the appliance, unwind length of cable and insert the plug into the power socket.


A YELLOW mark on the power cable shows the ideal cable length.

Do not extend the cable beyond the RED mark.

To rewind the power cable, press the rewind button witch on hand, and guide inside with the other hand to ensure that it does not whip, causing damage. If the power cable can't rewind completely. Please pull out the power cable slightly and press the re-winder button again. You can repeat the rewinding steps until the cable is rewind completely.

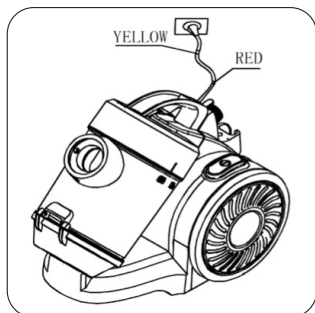

Press the ON/OFF button to switch the appliance on.

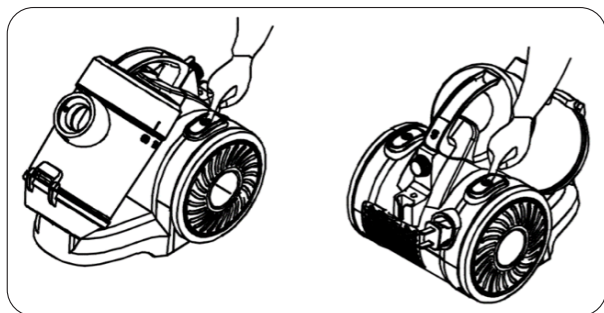


If an object becomes blocked in the pipe or in the brush, opening the Suction Release or turning off the appliance can sometimes release the blocked object.









HOW TO CLEAN THE DUST CONTAINER

1. After removing the flexible tube, press the container release button on the handle. This will remove the dust container from the carriage.
2. You can empty the Dust Container by pushing the clip at the bottom of the container which releases the hinged bottom and empties the dust.
3. Close by simply closing the hinged bottom and the clip will automatically engage.

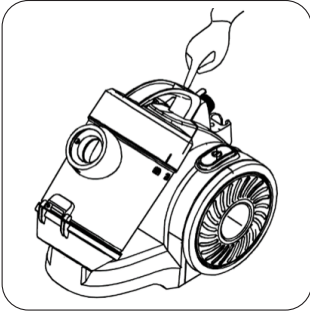


TO CLEAN THE FILTERS

1. Holding the Dust Container, twist the handle anticlockwise to remove the cover of the Dust Container.
2. This exposes the Sponge filter, which can be cleaned by brushing gently with a soft bristled brush and rinsed in warm water, then allowed to dry.
3. Pull out the second filter and cyclone segregator. Empty any debris and clean with a soft bristled brush.
4. Reassemble by inserting the cyclone segregator back into the Dust Container, place the Sponge filter on top (white surface visible) and then reattach the Cover with the release button opposing the Flexible Hose Connector and the twist clockwise to lock into place.
5. Reattach the Dust Container back onto the Carriage by clipping into place.

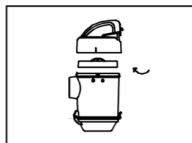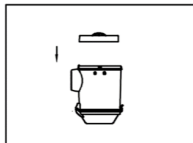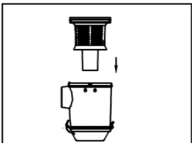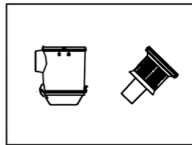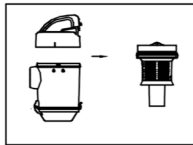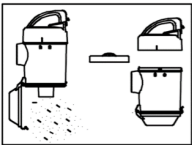


USING THE CLEANING ACCESSORIES

Pos. 1: bristles extended, for hard floors
Dual-position carpet/floor brush

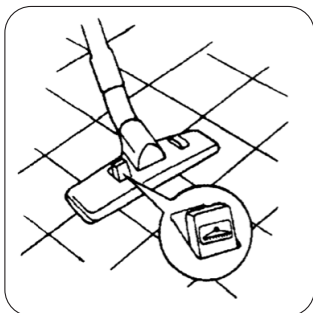

Pos. 2: bristles retracted, for carpets

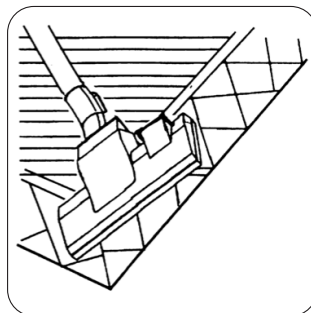


Narrow nozzle

For cleaning radiators, comers, edges Drawers etc.




Small brush

For cleaning curtains, shelves, books, lamps and other delicate objects.

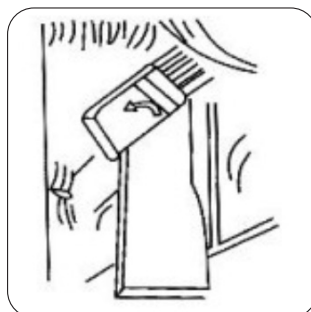


ATTENTION

In order to reach high-level efficiency cleaning, please clean the floor brush regularly and remove any debris or hair from the bristles.

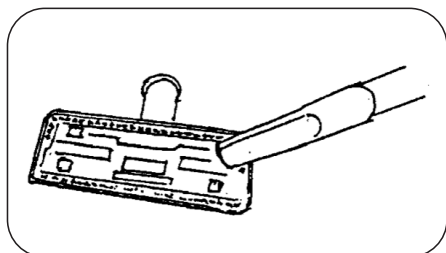

AFTER USING

 You may fix the stand for floor brush onto the vacuum cleaner.

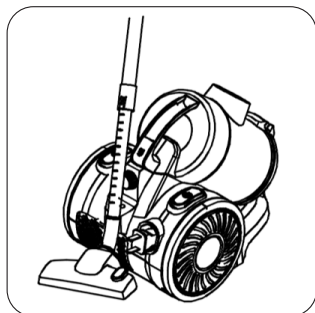

WEEE/ENVIROMENTAL PROTECTION




■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



FITTING A NEW UK PLUG

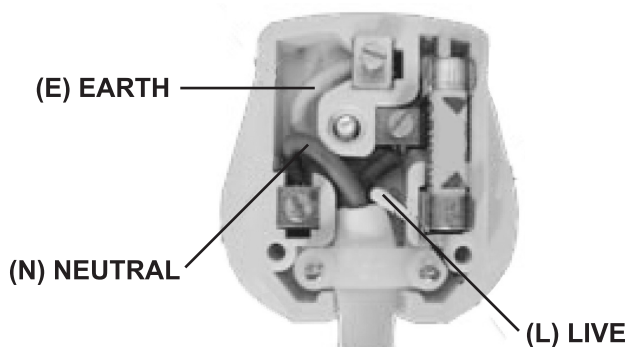


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



FOR EASY LIVING
homelife® **CUSTOMER SERVICES**

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about HomeLife products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86