

FOR EASY LIVING
homelife®

OPERATING INSTRUCTIONS

Bagless Upright Vacuum

HURRICANE AX85



MODEL: E8201

thank you

Thank you for the purchase of this quality **HOMELIFE** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Powerful 850w cyclone suction
 - Multi-Surface Hard & Soft Floor Cleaning
 - Lightweight
 - Easy Empty Bagless Dust Container
 - Washable HEPA Filter Sponge
 - Air Driven Pet & Stair Brush
 - Extra long 6m (approx.) cord length
- Includes:
- High efficiency floor brush
 - 2in1 crevice nozzle
 - 2m approx. flexible hose
 - Washable Hepa/Sponge filter
 - Quick Release Cord Storage
 - Hose tidy holder

SPECIFICATIONS

- Power: 850w
 - Voltage: 220-240v 50Hz
 - Cord Length: 6m approx.
 - Dust Cup Capacity: 1.6ltr
 - Vacuum Power: 12kpa
 - Noise Level: 78 db
- Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.



- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Children from 3 years and less than 8 years shall only switch on/off the appliance provided it is placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

 


WARNING


- Do not use outside or in damp / wet conditions.
- Do not use for any purposes other than the appliances intended use.
- Do not touch the power cord or plug with wet hands.
- Do not use the appliance to vacuum inflammable substances, like cigarettes and hot ashes.
- Keep the openings free to avoid blockage, like hair and loose clothing that may reduce air flow.
- Do not use without dirt container and filters in place.
- Look on your vacuum cleaner and follow all label and marking instructions.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor.
- Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or sawdust or use in areas where they may be present.
- Keep the vacuum cleaner on the floor. Only the hand-held vacuum cleaners may be set on furniture.
- Vacuum cleaner must be in the upright position to lift the rotating brush off the carpet when doing above floor cleaning.
- Do not use an extension cord with this vacuum cleaner.
- Store the vacuum cleaner indoors. Put the vacuum cleaner away after use to prevent tripping hazards.
- Turn off the appliance before unplugging and after using.
- Never allow children to use this appliance.
- If the appliance or cord is damaged, do not use anymore, It must be repaired by a qualified service agent.
- Never pull the power cord to disconnect the plug attached to this appliance from its mains socket.
- This appliance is not intended to be used with a separate timer or remote control system.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.



LOCATION OF CONTROLS

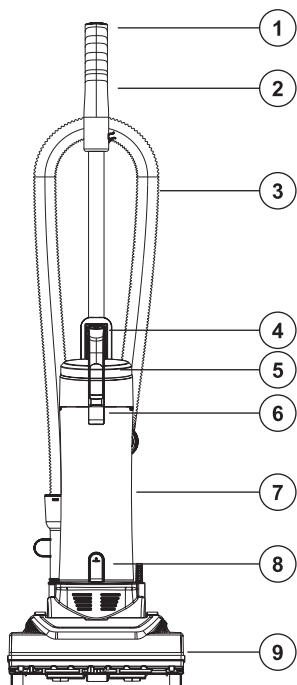

 - 1 - Handle Grip
- 2 - Cord Guide
- 3 - Hose/Stretch Hose
- 4 - Dirt Container Release Button
- 5 - Carry Handle
- 6 - Filter Access Button
- 7 - Dirt Container
- 8 - Dirt Cup Bottom Release Button
- 9 - Nozzle/Floor Brush
- 10 - Hose Guide

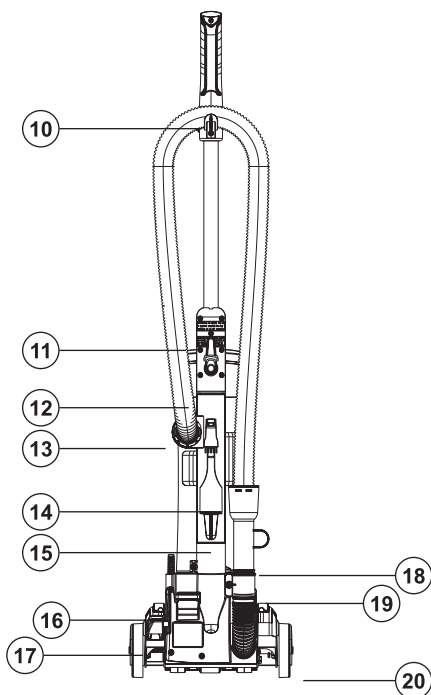


- 11 - Upper Cord Wrap
- 12 - Power Cord
- 13 - Hose Connection
- 14 - Crevice Tool/2-in-1 Tool
- 15 - Lower Cord Hook
- 16 - Power On/Off Pedal
- 17 - Handle Release Pedal
- 18 - Hose Handle
- 19 - Lower Hose Clog Cleanout
- 20 - Wheels




ASSEMBLING THE VACUUM CLEANER

 Attach back panel to nozzle

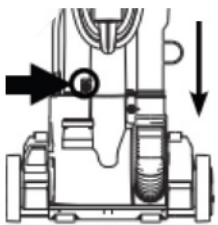


Attach the back panel to the nozzle so that the lower hose is on the right side. To secure, insert one screw into the back of the cleaner.

 
Handle assembly

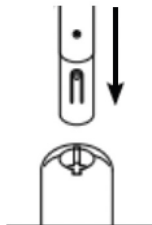


Insert handle into body of cleaner.

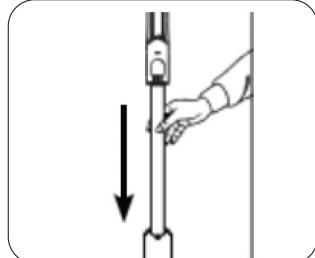 

 
Push down firmly until handle locks into place.

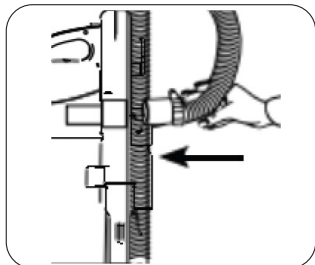

 Squeeze the hose tabs and insert hose into the hose connection to the dirt container on the right side.

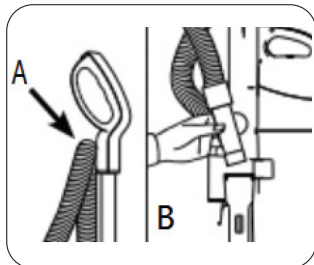


 Wrap hose around hose guide (A) and insert end into lower hose clog cleanout (B).

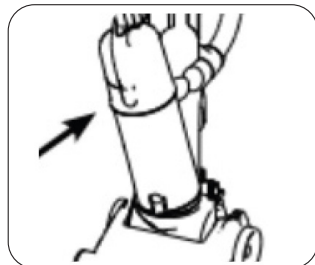


Tip bottom of dirt container into cleaner and push forward. Dirt container lid will snap into handle.

 Cord release

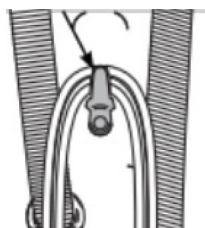


Turn the Quick Cord Release for easy cord removal. Store cord in cord guide (see "features", Diagram 2 for location) to keep out of the way while vacuuming.

 Handle release

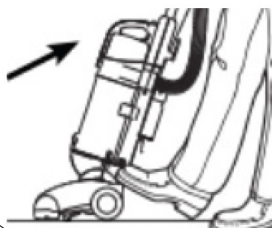

 To release handle, push the handle release pedal located on the lower left side of the cleaner.

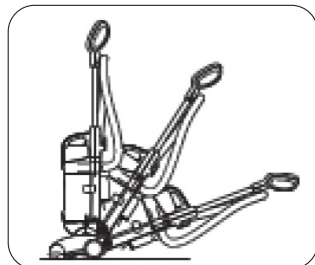


Move the handle and adjust it to the desired position for (A) operating the cleaner, and (B) lowering handle to clean under furniture.

DUST CANISTER REMOVAL & REFITTING


WARNING

To reduce the risk of injury from moving parts - unplug before removing or replacing filter.

 
Note: For best performance, replace HEPA filter every 6 months.

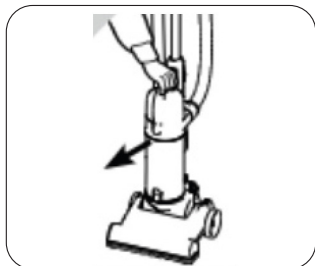

 Depress the Dirt container Release Button on top of dirt container lid to remove dirt container.

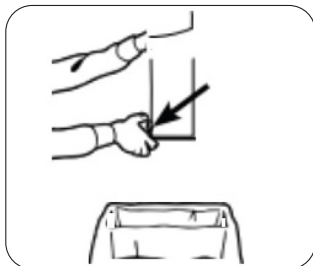

 Press the Dirt container Bottom Release button to dump the garbage.

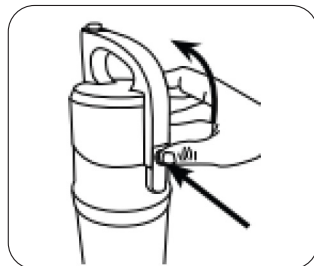


Press the buckle to remove the filter.

BRUSH REMOVAL & REFITTING


Tool required: Phillips screwdriver

WARNING

 
To reduce the risk of injury from moving parts - unplug before changing belt or Brush roll.

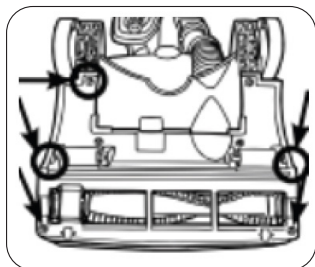

 Lay cleaner flat and flip cleaner to expose brush base. Base should lay flat and face up. To remove brush guard, use Phillips screwdriver to remove the five screws. Arrows show location of screws.

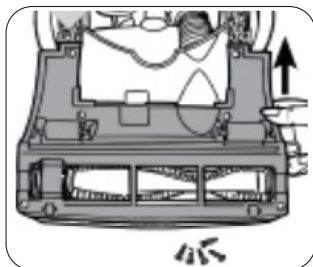


Lift and remove brush guard.

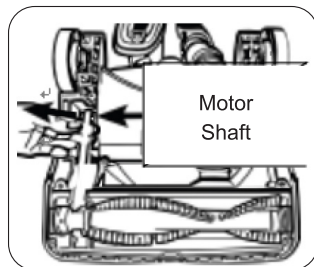 


Slide belt off motor shaft.




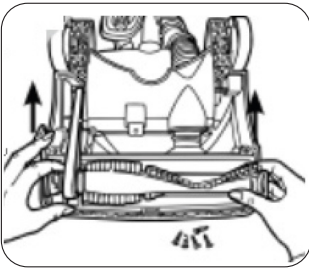 

 
Lift and remove brush roller.
Dispose of old belt.

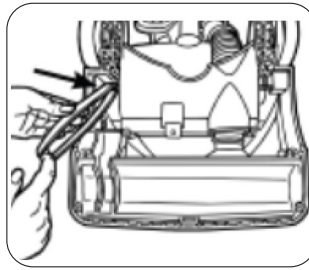


Slide belt onto motor shaft.

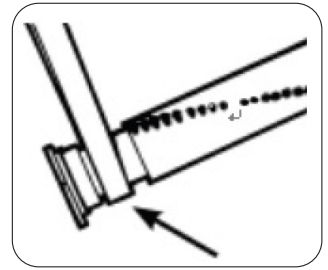 

 
Place new belt in area of brushroll
without bristles.

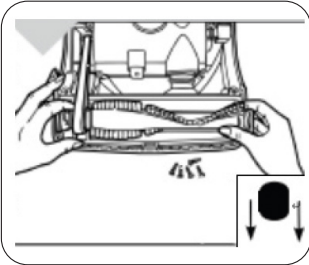

 With new belt in place, pull and
slide brushroll into nozzle making
sure that the brushroll end cap
open the left is in the correct
orientation (7a inset). Rotate
brushroll manually to make sure
belt is properly aligned.

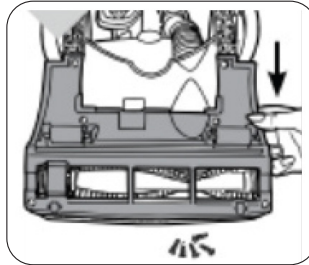

 Reattach brush guard by
carefully sliding back into place.
Interlock rollers and nozzle guard
by tilting rollers down towards the
base while replacing the nozzle
guard.

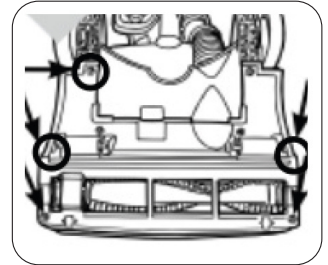

Be sure to replace all five screws.

 
CLOG MAINTENANCE

Tool required: Phillips screwdriver


WARNING

To reduce the risk of injury from moving parts - unplug before cleaning clog.

Note: first check brushroll for clog, if clog persists, then check lower hose.

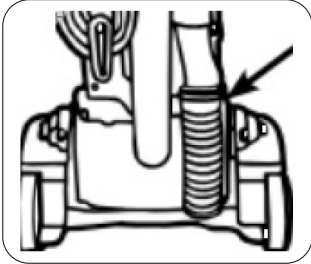

Locate lower hose/clog cleanout.

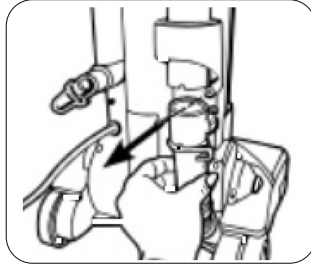 

Remove one screw and pull lower hose down and away from cleaner. Remove obstruction.



 
Replace lower hose and replace one screw.

HOSE AND TOOL USAGE


CAUTION

If unit is lifted from floor to use hose, loose items may become entangled in the rotating brushroll.


To use hose and attachments.

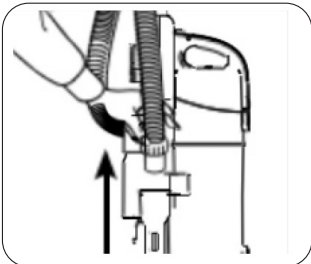

Remove the hose from hose caddy.

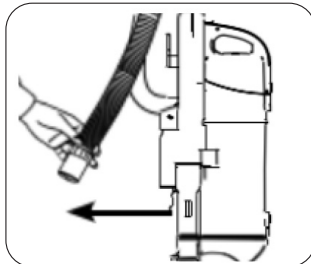 

 Choose any of the handy accessories or use the hose alone.

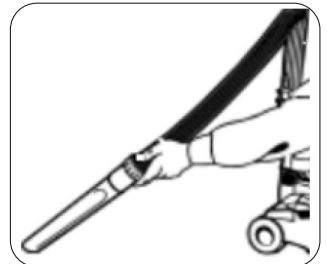

Simply push the attachment firmly onto the hose end. To remove tool, twist and pull apart gently.



TROUBLESHOOTING

WARNING

To reduce risk of personal injury - unplug cleaner before servicing.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Cleaner won't run	1. Power cord not firmly plugged into outlet.	1. Plug unit in firmly.
	2. Needs service.	2. Take to service center.
	3. Thermal protector activated.	3. Unplug cleaner - allow to cool.
The cleaner won't pick-up or low suction	1. Dirt container not installed correctly.	1. Review dirt container removal & replacement.
	2. Dirt cup full.	2. Empty dirt container.
	3. Brushroll worn.	3. Replace brushroll.
	4. Broken or worn belt.	4. Replace belt.
	5. Clogged filter.	5. Remove filter and clean.
	6. Nozzle/brushroll clogged.	6. Check nozzle/brushroll; remove obstruction/clog.
Dust escaping from cleaner	7. Hose clogged.	7. Remove hose; remove clog.
	1. Dirt container full.	1. Empty dirt container.
	2. Dirt cup not installed correctly.	2. Review dirt container removal & replacement.
	3. Hose not installed correctly.	3. Review hose installation.
	4. Filter not installed correctly.	4. Review filter removal & replacement

WEEE/ENVIROMENTAL PROTECTION

 


■ **DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT**

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



FITTING A NEW UK PLUG

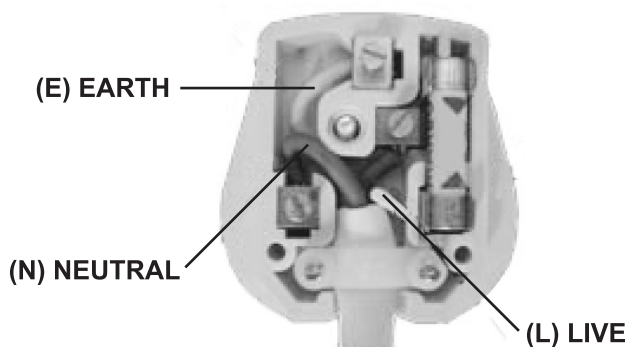


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



FOR EASY LIVING
homelife® **CUSTOMER SERVICES**

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about HomeLife products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86