

# STAYCOOL®

---

OPERATING INSTRUCTIONS

---

## Portable 4" Clip/Desk Fan



---

MODEL: F1905

---

# thank you

Thank you for the purchase of this quality **STAYCOOL** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- Compact design
- USB 5v powered
- 3 fan speed settings



---

## SPECIFICATIONS

---

- Operating Voltage: USB 5v DC, 1000mAh to 2100mAh
- USB Power Source required.



[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### READ AND SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Before plugging into any power source, please check the rating voltage and power requirements as shown on the Rating Marks for this appliance.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water or allow to get wet..
- This unit works best in non-polluted areas. Large dust/dirt particles may reduce the life of this unit.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with this appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

• Children of less than 3 years should be kept away unless continuously supervised.

• Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

• Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

#### DO NOT

- Do not place in direct sunlight for extended periods of time or in extreme areas such as very high temperature or humidity.
- Do not block the Inlet or Outlet grille.
- Do not place near open flames, fire sources, heater or other electrical appliances.



---

## OPERATION

---

1. Take from packaging and charge using a USB charger for 6-8 hrs
2. Clip on or free stand on a flat surface
3. Press On button once to turn fan at slow speed
4. Press again for medium speed
5. Press again for fast speed
6. Press a fourth time to turn off, or press and hold button to turn off at any stage.
7. A full battery would last over 4hrs of continuous use on fast speed

**Note:** Strong clip opens to 4cm and has rubber grip to prevent damage



---

## CHARGING

---

1. Plug into any USB 5vDC Power source with the current above 1000mAh using the Micro USB cable
2. During the charging process a Red LED will illuminate
3. When full charged the LED will turn Blue
4. When the Battery power becomes low, the Blue LED will flash to indicate charging required, before shutting down

### **WARNING**

Do not use chargers greater than 2100mAh. Faster charging can damage the battery.



---

## CLEANING AND CARE

---

- There are no serviceable parts inside this product that require your attention or servicing. Do not try to open the outer case.
- Before cleaning the unit, please make sure it is disconnected from any power source, and you have removed the water from the tank and the unit.
- The outside case and be cleaned using a slightly damp lint-free cloth [a small amount of detergent can be used if required].
- To remove any dust particles etc. form inside the front grill, or the rear air intakes, you can use a regular vacuum cleaner.
- Always make sure the unit is completely dry before using.
- With sensible care and attention this fan will give you many years of good service.



---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



### ■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



---

## **STAYCOOL<sup>®</sup> CUSTOMER SERVICES**

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Staycool products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Plc, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86