## **STAY WARM**

#### **OPERATING INSTRUCTIONS**

# 1500w Ceramic Heater



## **BEFORE OPERATION**

CHECK THAT THIS UNIT HAS NOT BEEN DAMAGED IN TRANSIT AND THAT THE FAN OPERATES. THINK SAFETY!

THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASSIONAL USE.

DO NOT USE WITH EXTENSION LEADS OR TIMERS.

MODEL: F2202

## thank you

Thank you for the purchase of this quality **STAYWARM** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

#### **FEATURES**

- · Powerful, efficient heating & cooling
- Two heat settings (750w & 1500w)
- · Cold blow Fan option
- · Mechanical variable thermostat with "frost watch" protection
- · On/Off indicator light
- · Overheat Safety Protection
- Tip-over switch



### **TECHNICAL SPECIFICATIONS**

Rated Input: 220-240V ~ 50Hz

Power Output: 1500W

Dimensions: 29 x 19 x 15cm (approx.)

## **IMPORTANT SAFEGUARDS AND PRECAUTIONS**

#### **READ AND SAVE THESE INSTRUCTIONS**

- · For Household Use only.
- · Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- · Always unplug when not in use.



The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

#### O DO NOT

- Do not use if the appliance is damaged or malfunctions.
- · Do not place near or come in contact with flammable material (curtains, draperies, furnishings, wallpaper etc) whilst in operation.
- Do not use for any purposes other than the appliances intended use.
- Do not twist or kink the cable, or wrap it around the appliance.
- Do not plug or unplug the appliance with wet hands.
- Do not use outside or in damp conditions, including Greenhouses
- Do not cover the appliance whilst in operation.
- Do not operate by use of an external programmable timer, remote control system or other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not leave unattended when in use.
- · Do not use in vehicles
- Do not use this heater in the immediate surroundings of a bath, a shower, washbasin or a swimming pool.
- Do not use an extension lead of any kind.



**WARNING!** In order to avoid overheating, do not cover.



#### **MARNING**

- Keep the appliance at least 100cm away from any facing wall or other objects, including people.
- Always keep the appliance on the floor.
- · Always check the product for damage before operation. If damaged, DO NOT USE.
- Keep away from hot surfaces, such as gas or electric hobs or ovens.
- If supply cord is damaged, do not use. Check before each use.
- To prevent damage to the cord, do not let it pass over sharp corners, edges or hot surfaces.
- This heater must not be located immediately below a socket outlet.

#### **A** CAUTION

Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

#### **№ WARNING**

Do not use on thick pile or nylon carpets, Linoleum flooring or other sensitive floor coverings. Heat from under the heater may cause damage.



#### LOCATION OF CONTROLS



#### A - Heat Setting Dial

Turn the dial to toggle between the cool blow function, 2 heat settings and 'off'.

#### **B** - Power Indicator

When the heater is switched on, the power indicator will light up to confirm that there is power to the unit.

#### C - Thermostat Control Dial

This allows users to set the temperature to their desired settings

#### D - Fan and Heating Element

This is where the heat is produced and output into the surrounding air

#### E - Carry Handle

The carry handle is built into the unit and allows for easy transportation.

#### F - Oscillation Button

Pressing the oscillation button will cause the unit to oscillate 60° continuously, distributing the warm air from the heater more evenly and effectively around the room.

#### G - Tip-Over Switch

Switch under the unit that prevents operation when knocked over



#### **OPERATION**

#### BEFORE FIRST USE

#### **⚠ WARNING**

- Always check the unit before use for any damage to the fan or casement.
- During first use, the heating element may omit a slight smoke or vapour. This is completely normally and is caused by a protective oil used in production. This will last for approximately 10 seconds. The oil and vapour is harmless but it is recommended to keep away from sensitive skin.

#### O DO NOT

Do Not Use with an Extension Lead.

#### OPERATION



1 UNPACK the unit CAREFULLY, TAKING CARE not to drop the heater. CHECK the unit for transit damage before use. DO NOT use if damaged!



**2** CONNECT the mains cord to a suitable 220-240v~50Hz mains supply.



**3** OPERATE the unit using the heat setting dial. For the 1500w heat setting, **SWITCH** the heat setting dial to 'II'.



**4** For the 750w heat setting, **SWITCH** the heat setting dial to 'I'.



**5** To **OPERATE** the unit as a cooling fan, **SWITCH** the heat setting dial to the cool blow function.



6 USE the thermostat control dial to set the TEMPERATURE LEVEL for the surrounding air temperature. The heater will operate until the surrounding air temperature is at the set level. It will then SWITCH ON and OFF INTERMITTENTLY to keep the surrounding air temperature at a CONSISTENT level.

#### **■ FROST WATCH PROTECTION**

In order to avoid the temperature dropping under approx +5 Degrees Celsius in a room (for instance when you are absent for a long time), you can turn the knob to the minimum for 'Frost Watch' protection. The heater will automatically switch itself ON, until the room temperature is at approx. +5 Degrees Celsius.

#### OSCILLATION

Press the oscillation button at the top of the heater to turn on or off the oscillation. Always ensure the area is not blocked when oscillating and keep at least 1m away from all obstacles in all directions.

#### ADDITIONAL SAFETY FEATURES

This product is fitted with an additional safety feature. If for any reason this Fan Heater over-heats then a thermal cut out is activated which immediately removes the power to this product. In this circumstance, the product should be checked for physical damage, i.e. fan not working or operating slowly or a broken heating element. If damaged then the product must not be used and you should consult an electrician or retailer.

If the thermal cut-out has accidentally activated by a high ambient temperature then the thermostat will automatically reset by, allowing to cool for 2 minutes.

**Note:** You must always take care that there is sufficient distance for safety (at least 100cm) between the heater and the facing wall or other objects. The airflow must not be impeded by anything.

This product is fitted with a safety tip-over switch that prevents the heater from operating if moved or knocked over.

#### O DO NOT

Do not use on thick pile carpets.



#### **CLEANING AND CARE**

#### MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

#### 

Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply and is turned off

#### CLEANING

1 Any ventilation slots should be occasionally **CLEANED** with a **CLEAN, DRY** paint brush.

The exterior surface should be **CLEANED** with a **DAMP CLOTH** only.

#### O DO NOT

Do Not use steel wool, scouring pads or abrasive cleaners on non-stick surfaces.

#### STORAGE

Allow the appliance to cool before storing away.

#### O DO NOT

Do not wrap cord around appliance.

Do not store in temperatures outside of 5°C - 23°C.


Failure to comply could cause damage to the product.

## **TECHNICAL INFORMATION**

Model Number:	F2202		
Item	Symbol	Value	Unit
Heat Output			
Nominal Heat Output	P <sub>nom</sub>	1.5	kW
Minimum Heat Output (indicative)	P <sub>min</sub>	1.4	kW
Maximum Continuous Heat Output	P <sub>max,c</sub>	1.7	kW
Auxiliary Electricity Consumption			
At Nominal Heat Output	el <sub>max</sub>	0	kW
At Minimum Heat Output	el <sub>min</sub>	0	kW
In Standby Mode	elsв	0	kW
Type of Heat Input			
Manual heat charge control, with integrated thermostat			☐ Yes <b>⊠</b> No
Manual heat charge control with room and/or outdoor temperature feedback			☐ Yes <b>⊠</b> No
Electronic heat charge control with room and/or outdoor temperature feedback			☐ Yes <b>⊠</b> No
Fan assisted heat output			☐ Yes <b>⊠</b> No
Type of Heat Output/Room Temperature Control			
Single stage heat output and no room temperature control			☐ Yes 🗷 No
Two or more manual stages, no room temperature control			☐ Yes 🗷 No
With mechanical thermostat room temperature control			ĭ⊠Yes ☐ No
With electronic room temperature control			☐ Yes 🗷 No
Electronic room temperature control plus day timer			☐ Yes 🗷 No
Electronic room temperature control plus week timer			☐ Yes 🗷 No
Other Control Options			
Room temperature control, with presence detection			☐ Yes 🔀 No
Room temperature control, with open window detection			☐ Yes 🔀 No
With distance control option			☐ Yes Mo
With adaptive start control			☐ Yes <b>⊠</b> No
With working time limitation			ĭ Yes ☐ No
With black bulb sensor			☐ Yes <b>⊠</b> No
Contact Details Distributed by Lloytron Plc., Leigh, UK, WN7 3XH			



#### FITTING A NEW UK PLUG

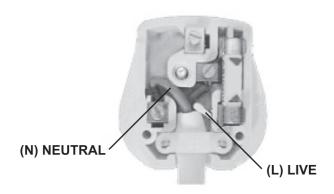

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

#### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

#### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 10 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

### WEEE/ENVIRONMENTAL PROTECTION



#### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

## **STAYWARM** CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



## www.lloytronhelpdesk.com

To find out more about StayWarm products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England. WN7 3XH Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86