

# STAYWARM®

---

## OPERATING INSTRUCTIONS

---

# Oil Filled Radiator



### BEFORE OPERATION

CHECK THAT THIS UNIT HAS NOT BEEN DAMAGED IN TRANSIT.  
THINK SAFETY!

THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR  
OCCASSIONAL USE.

DO NOT USE WITH EXTENSION LEADS.

---

MODEL: F2603

---

# thank you

Thank you for the purchase of this quality **STAYWARM** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- Powerful, efficient heating & cooling
- Three heat settings (800w, 1200w & 2000w)
- Mechanical variable thermostat with “frost watch” protection
- Fan assisted to help with heat circulation
- On/Off indicator light
- Safety Over Heat protection
- Integral Carrying Handle



---

## SPECIFICATIONS

---

Operating Voltage: 220-240v~50Hz

Power Consumption: 2000w max.

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### READ AND SAVE THESE INSTRUCTIONS

- For Household Use only.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Always unplug when not in use.



The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

#### DO NOT

- Do not use if the appliance is damaged or malfunctions.
- Do not place near or come in contact with flammable material (curtains, draperies, furnishings, wallpaper etc) whilst in operation.
- Do not use for any purposes other than the appliances intended use.
- Do not twist or kink the cable, or wrap it around the appliance.
- Do not plug or unplug the appliance with wet hands.
- Do not use outside or in damp conditions, including Greenhouses
- Do not cover the appliance whilst in operation.
- Do not leave unattended when in use.
- Do not use in vehicles
- Do not use this heater in the immediate surroundings of a bath, a shower, washbasin or a swimming pool.
- Do not use an extension lead of any kind.



**WARNING!** In order to avoid overheating, do not cover.



## **⚠ WARNING**

- Keep the appliance at least 100cm away from any wall or other objects, including people.
- Always keep the appliance on the floor.
- Always check the product for damage before operation. If damaged, DO NOT USE.
- Keep away from hot surfaces, such as gas or electric hobs or ovens.
- If supply cord is damaged, do not use. Check before each use.
- To prevent damage to the cord, do not let it pass over sharp corners, edges or hot surfaces.
- This heater must not be located immediately below a socket outlet.

## **⚠ CAUTION**

Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

---

## LOCATION OF CONTROLS

---



### **A - Heat Setting Switches**

Use the heat setting switches to switch between 800w, 1200w or 2000w outputs.

### **B - Thermostat Control Dial**

Use the thermostat control dial to set the temperature level. The heater will operate until the surrounding air temperature is at the set level. It will then switch on and off intermittently to keep the surrounding air temperature at a consistent level.

### **C - Frost Watch Setting**

Turn the thermostat control dial to minimum to

operate the frost watch setting. This is designed not to heat up a room, but to stop the room temperature from falling below 5°C.

### **D - Cord Storage**

This product comes equipped with cord storage for each of storage and transportation.

### **E - Wheels**

This product comes equipped with 4 wheels to easily position in different locations within a room.



# OPERATION

## BEFORE FIRST USE

### ⚠ WARNING


- Always check the unit before use for any damage to the fan or casement.
- During first use, the appliance may emit a slight smoke or vapour. This is completely normal and is caused by a protective oil used in production. This will last for approximately 10 seconds. The oil and vapour is harmless but it is recommended to keep away from sensitive skin.

### ⊘ DO NOT

Do Not Use with an Extension Lead.

## ASSEMBLY

Assemble the body frame and the base plate together as follows:

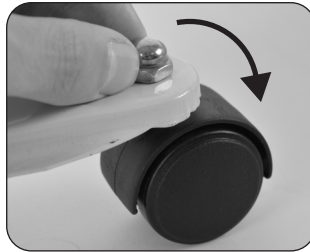


**1** MAKE SURE the heater is **UNPLUGGED** and is in the **OFF** position.

**2** FIT THE castor wheels by **PLACING** through the outer holes in the metal axle (bottom side) and **SECURING** with the enclosed bolts (top side). The flat side is the top of the axle.

**3** TURN the radiator **UPSIDE DOWN** and make sure that it is **SECURE** and does not fall over.



**4** FIT one of the U shaped metal brackets onto the back of the front fin, by **HOOKING** it over the bottom of the fin and hold in place.

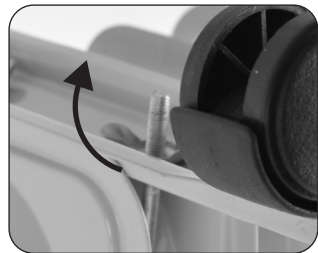

**5** TURN one of the metal axels **UPSIDE DOWN** and fit the U shaped metal bracket, which is now on the unit through the holes on the axel. Secure in place with the wing nuts.





**6** REPEAT the same assembly instructions to fit the back castor wheels.

**7** CHECK all nuts are **SECURELY TIGHTENED** and **TURN** the unit carefully back to its **UPRIGHT POSITION**.

**⚠ WARNING**

Do not operate the heater without the castor wheels attached to the bottom of the unit as there may be a risk of fire. Do not operate the heater if there are signs of oil leakage.

**■ OPERATION**



**1** SELECT a location indoors for the heater, away from electrical power cords, curtains and other furnishings. **DO NOT** place the heater directly beneath an electrical outlet or against paperboard or low-density fibreboard.

**2** PUSH the power switches to the off position and turn the thermostat **LOW** before plugging in the radiator.

**3** PLUG the heater into AC Mains outlet.





**4** The Heat Setting is controlled by the dial. 0 - OFF, I - Low Setting, II - High Setting, III - High Setting.



**5 SWITCH** the heater to desired Heat Setting, Low, Medium or High. The operating temperature is selected by adjustment of the thermostat.



**6** To determine the correct operating temperature for your conditions, when you first switch the unit on, **TURN** the thermostat to its **MAXIMUM POSITION**. When the unit reaches the required temperature, **SLOWLY TURN DOWN** the thermostat, until the unit **SWITCHES OFF**. The temperature will now be kept **CONSTANT**. When the temperature falls the unit will **COME ON AGAIN**.

**⚠ WARNING**

This unit should only be operated in an upright position.

**■ AUTOMATIC SAFETY CUT OFF**

A thermal overload protector is built in to prevent the unit from overheating. When the unit exceeds the specified operating temperature, the heater will automatically shut off. It will only resume operation when the user resets the unit.

**■ RESETTING THE HEATER**

- 1** **TURN** the heat setting to the **OFF** position.
- 2** **UNPLUG** the heater and **WAIT** 10-15 minutes for the unit to **COOL DOWN**.
- 3** **INSPECT** and **REMOVE** any objects on or neighbouring to the heater that may cause high temperature.
- 4** After 10-15 minutes, **PLUG** the unit in again and **OPERATE NORMALLY**.



---

# CLEANING AND CARE

---

## ■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

### WARNING

Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply and is turned off

## ■ CLEANING

**1** Any ventilation slots should be occasionally **CLEANED** with a **CLEAN, DRY** paint brush.

**2** The exterior surface should be **CLEANED** with a **DAMP CLOTH** only.

### DO NOT

Do Not use steel wool, scouring pads or abrasive cleaners on non-stick surfaces.

## ■ STORAGE

Allow the appliance to cool before storing away.

### DO NOT

Do not wrap cord around appliance.

Do not store in temperatures outside of 5°C - 23°C.

Failure to comply could cause damage to the product.





# TECHNICAL INFORMATION


Model Number:		F2603	
Item	Symbol	Value	Unit
<b>Heat Output</b>			
Nominal Heat Output	$P_{nom}$	0,8274	kW
Minimum Heat Output (indicative)	$P_{min}$	0	kW
Maximum Continuous Heat Output	$P_{max,c}$	0,8274	kW
<b>Auxiliary Electricity Consumption</b>			
At Nominal Heat Output	$e_{lmax}$	0	kW
At Minimum Heat Output	$e_{lmin}$	0	kW
In Standby Mode	$e_{lsb}$	0	kW
<b>Type of Heat Input</b>			
Manual heat charge control, with integrated thermostat			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Manual heat charge control with room and/or outdoor temperature feedback			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Electronic heat charge control with room and/or outdoor temperature feedback			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Fan assisted heat output			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
<b>Type of Heat Output/Room Temperature Control</b>			
Single stage heat output and no room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Two or more manual stages, no room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
With mechanical thermostat room temperature control			<input checked="" type="checkbox"/> Yes <input type="checkbox"/> No
With electronic room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Electronic room temperature control plus day timer			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Electronic room temperature control plus week timer			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
<b>Other Control Options</b>			
Room temperature control, with presence detection			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Room temperature control, with open window detection			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
With distance control option			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
With adaptive start control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
With working time limitation			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
With black bulb sensor			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
<b>Contact Details</b>		Distributed by Lloytron Plc., Leigh, UK, WN7 3XH	



---

## FITTING A NEW UK PLUG

---

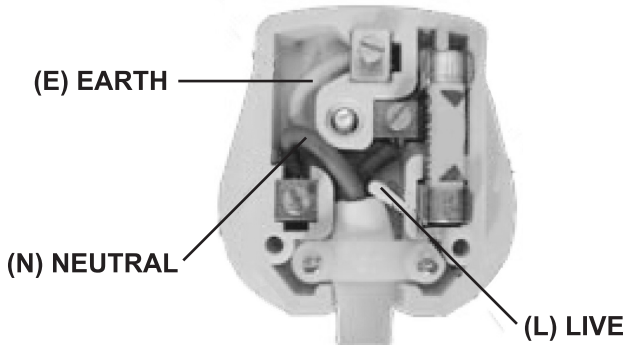


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.  
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 10 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

### ■ OIL DISPOSAL

This product contains oil which must be drained and disposed separately in accordance with the proper treatment, recovery and recycling of oil. Please contact your local authority for correct procedure.



---

## **STAYWARM<sup>®</sup> CUSTOMER SERVICES**

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about StayWarm products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86