

STAYWARM®

OPERATING INSTRUCTIONS

Electric Heated Throw (Over-Blanket)



MODEL: F2851

thank you

Thank you for the purchase of this quality **STAYWARM** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Coral Fleece
- Size: 180 x 130cm
- 9x Heat Settings
- 10x Timer options, including pre-warm
- Auto shut off

SPECIFICATIONS

- Operating Voltage: 220-240v~50Hz
- Power Consumption: 120w max
- Ambient Operating Temperature: 5°C to 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

IMPORTANT INSTRUCTIONS . RETAIN FOR THE FUTURE USE

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains or controller cord, do not let it pass over sharp corners, edges or become trapped in the bed frame.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- If any cord is damaged, do not use. Check before each use!
- If any cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.



Not to be used by very young children (0-3 years)



- The appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature value.



Do not insert pins, needles, safety pins or other sharp items on the blanket.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- If this over-blanket is likely to be used for an extended period, for instance by the user falling asleep, controls should be adjusted to LOW setting which is recommended for continuous use. If the blanket is slept on with the controls set to a higher temperature the user may suffer skin burns or heat stroke.
- Ensure all cords and ties cannot cause a risk of entanglement, strangulation, tripping or treading. The user must ensure that excessive ties and electric cords be arranged in a safe way.


DO NOT


- DO allow the heated throw to dry out and cool down completely prior to storage. Also allow the throw to cool down before folding.
- DO store your blanket with loose folds and not sharp creases to avoid any damage to the wires. Also ensure items are not placed on the electric throw while stored.
- DO follow the cleaning and maintenance instructions when washing/storing the heated throw.
- DO turn off the power and remove the plug when heated throw is not in use and before cleaning. Always turn the power off at the socket before inserting or removing plug. Remove by grasping the plug - do not pull on the cord.
- DO use the heated throw from a power outlet of the voltage (A.C. only) marked on the electric heated throw.
- DO use with the controls provided only.
- DO regularly inspect for signs of wear and tear or damage on the heated throw and cord. If signs of deterioration occur, return product to the retailer immediately for inspection.
- DO as parents and guardians, pre-set controls for young children. Ensure children are supervised to ensure that they do not play with the controls.
- DO take care as temperature of surrounding surfaces may increase when the heated throw is in use.
- DO have the heated throw checked by a qualified person annually.
- DO consider using a safety switch for extra protection, also known as a Residual Current Device (RCD) not exceeding 30mA.





DO NOT

- DO contact the retailer should the heated throw cease heating, as it may have endured a fuse or thermal link rupture.
- DO confirm all parts are present prior to storing the packaging. The bag is not a toy and must not be played with as suffocation may occur.
- DO use as an over-throw only.

 Do not dry clean.

 Do not iron.

 Do not tumble dry.

 Do not bleach or use harsh chemicals or cleaning fluids as they may damage the internal wiring.

WARNING

- Keep the controller/s away from moisture or windows.
- Keep all dogs, cats and other pets away from the blanket.
- Make sure the electric blanket and connectors are completely dry after washing and before switching on. We recommend leaving the electric blanket for a further 24 hours once dry before using. When drying, dry on a washing line. Even though the connectors are washable and waterproof, please make sure that the electrical connectors are also upside down to allow any excess moisture to drain from the connector.
- Examine the blanket frequently for signs of wear or damage. If there are such signs the blanket has been misused or does not work then do not use.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under 3 years of age are not to use this appliance due to their inability to react to overheating.
- This blanket must not be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.

DO NOT


- DO NOT switch the heated throw on if it is damp or wet. All parts must be completely dry prior to use.
- DO NOT use the heated throw with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- DO NOT place the power cord or connector under any stress or strain. The power cord should always remain free from obstructions.
- DO NOT use pins, needles, safety pins or other sharp objects on or near the heated throw where it could cause damage.
- DO NOT dry clean or iron the heated throw.
- DO NOT operate the heated throw with an external timer or separate remote control system.
- DO NOT use the heated throw for any purpose other than its intended use.
- DO NOT place the heated throw on or near a naked flame, heated element, oven or iron as doing so may melt the heating wire insulation.
- DO NOT allow power cord to dangle onto any hot surfaces, over the edge of a table or bench top where it could be damaged or tripped over.
- DO NOT operate the heated throw if it is damaged in any way. If damage is suspected, do not use and immediately return it to the retailer.
- DO NOT immerse any part of the controller, supply cord or plug in water.



⊘ DO NOT

- DO NOT ever use a faulty heated throw, especially if it has frayed or damaged cord or cracked or broken plug.
- DO NOT use the heated throw with infants or children under the age of 3, people with disabilities, limited mobility, anyone who cannot operate the controls properly, persons insensitive to heat or anyone with a medical condition such as; high blood pressure, diabetes, high skin sensitivity or those who cannot understand/follow these directions.
- DO NOT allow pets around the heated throw as sharp teeth and claws may puncture the wire insulation/ damage the heating wires.
- DO NOT leave the heated throw unattended while in use.
- DO NOT use this throw for medical use in hospitals.
- DO NOT attempt to service this electric blanket.
- DO NOT use if the blanket or blanket cord has been damaged as this may lead to overheating, fire or personal injury.
- DO NOT trap or fold cords between the bed slats, mattress, springs or against walls, footboards or bed frame as this may cause damage to the cord.
- DO NOT use more than one heat source on the bed at the same time, such additional electric blankets, mattress pads, heating pads, hot-water bottles etc.

LOCATION OF CONTROLS

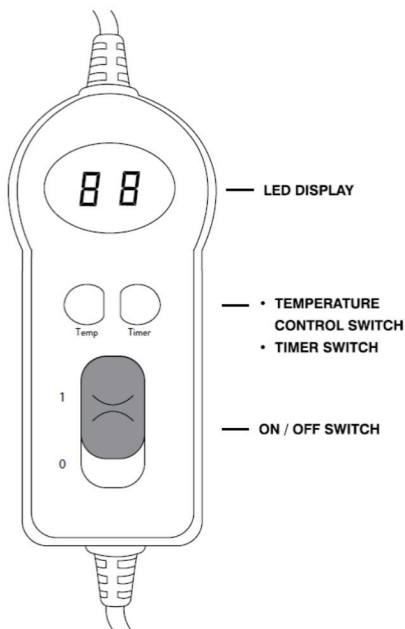

NOTE: THE LEAD BETWEEN THE CONTROLLER AND THROW MAY GET WARM DURING USE. THIS IS NORMAL AND SAFE.



OPERATION

■ USING THE THROW

This heated throw can be used on the couch, or spread out on top of you while lying in bed.

The heated throw may be lightly wrapped around your body. When in use, ensure that the heated throw is never folded or sat on. This may cause the overheat protection system to activate.

Ensure the controller remains uncovered during use and always keep the heated throw flat when switched on, during pre-heating or when unsupervised, even for a short time.

To pre-heat before use, set the controller to maximum heat, "9", then turn the heat down before placing it on your body.

When using your heated throw for the first time, set the temperature to "9" for one hour before intended use. Leave the heated throw to heat and time out on its own.

This process will remove any humidity in the cover and alleviate any odours present from the manufacturing process. This odour is harmless and continual use will eradicate any remaining odour (if present).

It is recommended that the heated throw be used with a residual current safety device (safety switch) with a rated residual current rating not exceeding 30mA.

The heated throw is not to be used by young children unless the controls have been pre-set by a parent/guardian, or unless the child has been adequately instructed on how to operate the controls safely. Ensure that you have read all safety instructions carefully before using.

■ OVERHEATING

The heated throw is equipped with overheat safety protection which ensures that it will turn off if it gets too hot. If this occurs, please contact your retailer.

■ SET UP STEPS

1. Connect the controller supply plug to a suitable 220-240V~ 50Hz power supply. The controller has a programmable timer and 9 heat settings. You can program your throw to operate for 1, 2, 3, 4, 5, 6, 7, 8, 9 or 12 hours.
2. Switch on the heated throw with "0 (OFF)/ 1 (ON)" buttons. Use the "Timer" and "Temp" buttons to adjust to your preferred settings as displayed in the LED display. When the LED shows "H" it means the timer is set for 12 hours.
3. The highest heat setting "9" is only used for pre-heating and can only be programmed for 1 hour. We recommend heat setting "4" for comfortable prolonged use. The default setting for the controller is a 1 hour timer and "0" heat setting.



■ TEMPERATURE SETTINGS

1-3: Overnight use

4-8: Medium Heat

9: Preheat

This setting is recommended for Preheating the bed 1 hour before use with standard bedding.

DO NOT

DO NOT SLEEP WITH YOUR BLANKET ON THIS SETTING.

After 1 hour, please lower the setting manually to avoid over Heat.

Turn the On/Off switch to the “1” position to turn the heated throw on. To set the temperature level, press the button “Temp”.

WARNING

The highest temperature setting (9) is for preheating only and not recommended for continuous operation.

■ TIMER SETTINGS

The “Timer” button can be used to set the operation time. The heated throw will automatically switch off once it reaches this time. Keep pressing the “Timer” button until it reaches the desired operation time.

This blanket has a 12 hour auto shutoff feature for safety considerations.

Press the “Timer” button to select the desired operating hours , the number **1-9** are shown in hours and **H** represent 12 hours. The blanket will operate until the selected time runs out

■ LED LIGHT

There is a LED light which illuminates when the blanket is switched on.



CLEANING AND CARE

■ WASHING

The controller is detachable, allowing it to be removed for safe and easy laundering. Always detach the controller before washing. The heated throw also has waterproof elements making it safe to machine wash. It should not be tumble dried however. Ensure that you select the wash cycle most suitable for the throw, such as the “wool” or “delicate” cycle.

■ PRIOR TO CLEANING

Switch to OFF and ensure the plug has been removed from the power outlet.

Controller must be disconnected before washing. The controller cannot get wet or it will stop working.

Before washing, check that the heated throw is stretched out, maintaining a rectangular shape, and that no heating wires have been squashed together.

■ FOR LOCALISED SOILING

The affected area should be sponged gently using a natural wool detergent or mild soap flakes in lukewarm water, followed by two dabs of the sponge with clean lukewarm water. Lightly compress the treated area between two towels to absorb excess water.

■ WASH INSTRUCTIONS

Do not wring, press water out while flat.

Dry on stable clothesline, do not use pegs.

The connections to the heated throw should be kept free of moisture as much as possible. Do not turn the heated throw on unless it is completely dry.



DO NOT

DO NOT BLEACH OR USE DETERGENTS WITH BLEACH



DO NOT

DO NOT IRON



DO NOT

DO NOT DRY CLEAN



DO NOT

DO NOT TUMBLE DRY



DO NOT

DO NOT SPIN DRY IN A WASHING MACHINE. FLAT DRY ONLY. DO NOT WRING



DO NOT

COLD GENTLE WASH ON WOOL/DELICATE CYCLE– MAXIMUM WASHING TEMPERATURE 30C



■ STORAGE


Do not store above or below 5C-23C, Failure to comply may result in damage to the product.

When not in use, store as follows:

1. When storing the blanket, allow it to cool down before folding.
2. Do not crease the blanket by placing items on top of it during storage.
3. Roll and fold up the blanket and store in the packaging supplied, or a suitable bag or box to prevent crushing. Avoid pressing sharp creases into the blanket when folding.
4. Do not use mothballs or sprays of any kind during storage.
5. Always keep the blanket dry during storage.
6. When removing from storage, always check the blanket for any damage.



FITTING A NEW UK PLUG

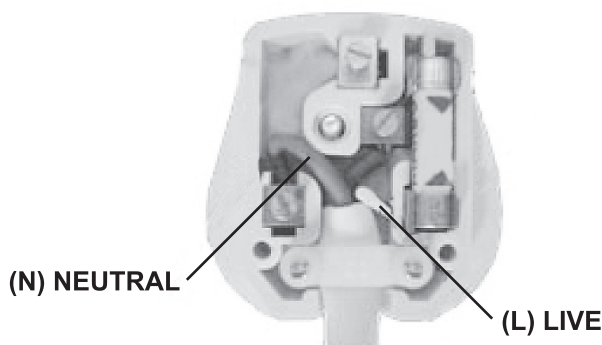

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug.
Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



STAYWARM[®] CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about StayWarm products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86