STAY WARM

OPERATING INSTRUCTIONS

Rechargeable Hot Water Bottle



MODEL: F2881

thank you

Thank you for the purchase of this quality **STAYWARM** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Automatic Temperature Control
- Ready to use in under 15 minutes
- . 5hrs of continuous warmth

- Luxury Fleece Cover
- · Permanently Sealed with Water, no risk of scalding



SPECIFICATIONS

• Operating Voltage: 220-240v~50/60Hz

• Power Consumption: 360w

• Ambient Operating Temperature: 5°C to 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

O DO NOT

DO NOT ALLOW THE WATER TO FREEZE



HOT SURFACE

This Hot Water Bottle will become hot once charged.

Do not use if you are insensitive to heat.

Do not fall asleep while using the hot water bottle.

Do not allow prolonged contact with skin or with thin garments.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

IMPORTANT INSTRUCTIONS. RETAIN FOR THE FUTURE USE

- · Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- · Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains or controller cord, do not let it pass over sharp corners, edges or become trapped in the bed frame.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water.
- If any cord is damaged, do not use. Check before each use!
- If any cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer
 or its service agent.

 


 
Not to be used by very young children (0-3 years)

 


Do not insert pins, needles, safety pins or other sharp items in the hot water bottle.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

 








Do not bleach or use harsh chemicals or cleaning fluids as they may damage the internal wiring.





O DO NOT

- DO allow the hot water bottle to cool down completely prior to storage.
- DO follow the cleaning and maintenance instructions provided
- DO turn off the power and remove the plug when the hot water bottle is not in use and before cleaning.
 Always turn the power off at the socket before inserting or removing plug. Remove by grasping the plug do not pull on the cord.
- DO regularly inspect for signs of wear and tear or damage on the heated pad and cord. If signs of deterioration occur, do not use.
- DO as parents and guardians ensure children are supervised at all times.
- DO take care as temperature of surrounding surfaces may increase when the heated pad is in use.
- DO confirm all parts are present prior to storing the packaging. The bag is not a toy and must not be
 played with as suffocation may occur.
- · DO use as advised only.

O DO NOT

- DO NOT switch the hot water bottle on if it is damp or wet. All parts must be completely dry prior to use.
- DO NOT freeze or allow the Hot Water Bottle to freeze as this may rupture the internal bag.
- DO NOT place the power cord or connector under any stress or strain. The power cord should always remain free from obstructions.
- DO NOT use pins, needles, safety pins or other sharp objects on or near the hot water bottle where it could cause damage.
- DO NOT dry clean or iron the hot water bottle
- DO NOT operate the hot water bottle with an external timer or separate remote control system.
- DO NOT use the hot water bottle for any purpose other than its intended use.
- DO NOT place the hot water bottle on or near a naked flame, heated element, oven or iron as doing so
 may melt the heating wire insulation.
- DO NOT allow power cord to dangle onto any hot surfaces, over the edge of a table or bench top where
 it could be damaged or tripped over.
- DO NOT operate the hot water bottle if it is damaged in any way.
- DO NOT immerse any part of the charger, supply cord or plug in water.
- DO NOT use the hot water bottle with infants or children under the age of 3, people with disabilities, limited mobility, anyone who cannot operate the controls properly, persons insensitive to heat or anyone with a medical condition such as; high blood pressure, diabetes, high skin sensitivity or those who cannot understand/follow these directions.
- DO NOT allow pets around the hot water bottle as sharp teeth and claws may puncture the hot water bottle damage the heating wires.
- DO NOT leave the hot water bottle unattended while charging or in use.
- DO NOT use this hot water bottle for medical use in hospitals.
- DO NOT place in a microwave or other heating appliance to heat up the water.
- DO NOT use if the hot water bottle or cord has been damaged as this may lead to overheating, fire or personal injury.
- · DO NOT rinse in water.
- DO NOT carry with charging cable connected.
- DO NOT place items on top of the hot water bottle during storage.
- DO NOT squeeze too hard as this may rupture the internal water bag.
- DO NOT stab or pierce the bag.
- · DO NOT use whilst charging.



⚠ WARNING

- Keep all dogs, cats and other pets away from the hot water bottle.
- Examine the hot water bottle frequently for signs of wear or damage. If there are such signs the pad has been misused or does not work then do not use.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who
 are unable to react to overheating.
- · Children under 3 years of age are not to use this appliance due to their inability to react to overheating.
- Charge on a flat surface only. Do not charge upright or inclined position.
- This hot water bottle must only be used with the supplied charger.



HOT SURFACE

The Hot Water Bottle will become hot once charged.



LOCATION OF CONTROLS



- A. Hot Water Bottle
- B. Charging Connector with Indicating light
- C. Charging Rack
- D. Hand Comfort Sleeve



OPERATION

USING THE HOT WATER BOTTLE

The hot water bottle is not to be used by young children unless supervised by a parent/guardian. Ensure that you have read all safety instructions carefully before using.

OVERHEATING

The hot water bottle is equipped with overheat safety protection which ensures that it will turn off if it gets too hot. If this occurs, please contact your retailer.

USING THE HEAT PAD

Remove all packaging and inspect for any damage before use.

- 1. Insert the controller connector into the socket on the hot water bottle by sliding back the cover. Press firmly.
- Place the hot water bottle on a flat surface for charging. Do not charge on an incline of if the bottle is vertical.
- Plug into the mains socket and switch on at the wall. The indicator light will illuminate Red to advise charging has commenced.
- **4.** It will take between 10-15 minutes to become fully charged. The indicator light will switch off to indicate the charging is complete.
- 5. Place the hot water bottle on a flat surface for charging. Do not charge on an incline of if the bottle is vertical.
- 6. Unplug the charger from the wall, then carefully remove the charger from the hot water bottle.
- 7. Close the slider and shake the water gently for 60 seconds to evenly distribute the heat.
- **8.** Place the heated hot water bottle onto the desired part of the body.
- **9.** The heating pad will remain warm for 2-5hrs depending on ambient temperature of the room.

⚠ WARNING

Risk of injury and damage!

Improper handling of the product may result in injury and damage to the product.

- Do not insert pins or needles into the product. You may damage the heating wires inside. There is a risk
 of electric shock and injury.
- · Do not operate the product while it is charging.



CLEANING AND CARE

⚠ WARNING

Risk of electric shock!

Improper handling of the product may result in an electric shock.

- Always unplug the mains plug from the mains socket and disconnect the connection plug from the connection socket before cleaning the product.
- Never immerse the control unit, connection plug, or hot water bottle in water.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surfaces

CLEANING THE HOT WATER BOTTLE

- Unplug the mains plug and disconnect the connection plug from the hot water bottle. Let the product cool
 down completely before cleaning it. DO NOT place the controller or cable/plugs in any water.
- 2. Sponge the soiled area using a soft damp cloth. Make sure no water goes into the connection socket.
- 3. Let the hot water bottle to dry completely before using it again. Do not place on radiators, inside tumble dryers or other heating appliances to dry the hot water bottle. Allow to dry naturally.

O DO NOT

Do not hand or machine wash!

STORAGE

All parts must be completely dry before being stored.


- Always let the product cool down completely before storing it.
- · Always store the product in a dry area.
- Protect the product from direct sunlight.
- Store the product in its original giftbox to protect from damage.

O DO NOT

DO NOT store items on top of the Hot Water Bottle.

Always inspect for damage before using again after storage.

FITTING A NEW UK PLUG

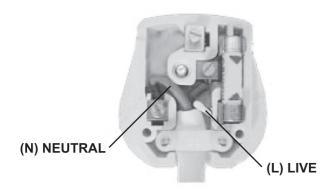

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

STAYWARM CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about StayWarm products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England. WN7 3XH Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86