

Paul
anthony[®]

OPERATING INSTRUCTIONS

Orbit Pro

2000w Hairdryer



NOT RECOMMENDED FOR USE IN HOTELS, GUEST HOUSES ETC.

MODEL: H1518

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Power: 2000w Max.
- 3 Heat / 2 Speed Settings
- Cool Shot Button
- Narrow Concentrator Nozzle
- Finger Diffuser Attachment
- Hang-up Loop
- Built-in Thermal Safety Cut-out
- Quiet DC Motor



SPECIFICATIONS

Operating Voltage: 220-240v~50Hz

Power Output: 1800 - 2000w

Ambient Operating Temperature: 5°C to 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.



www.lloytronhelpdesk.com

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

DO NOT

Do not use for any purposes other than the appliances intended use.

- This product is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the power cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the power cord is damaged, do not use. Check before each use!

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.


DO NOT

Do not use if any part of this appliance is damaged in any way.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

-  • **WARNING!** Do not use this appliance near bathtubs, showers or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current of 30mA is advisable in the electric circuit supplying the bathroom. Ask your installer for advice.



WARNING

- Keep the appliance and its cord out of reach of children less than 8 years.
- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the water. The appliance should then be checked by a qualified electrician before use again!
- The air inlet and outlet openings should never be obstructed.
- Keep your hair away from the immediate vicinity of the air inlet opening.
- The safety grill fitted in the air inlet opening is designed to prevent hair being drawn in. If the grill becomes clogged, it should be cleaned (e.g. with vacuum cleaner or brush), as otherwise the airflow will be obstructed to such an extent that the thermal cut-out will operate.

DO NOT

- Do not touch the scalp when using.
 - Do not allow the supply cord to come in contact with the heating element during use.
 - Do not direct aerosols or water sprays into the appliance.
 - Do not use the hair dryer with wet hands or wet hair.
-
- When drying your hair in rollers, do not allow any clips, hairpins etc to project more than 10mm (finger width) so as to ensure that they do not come in contact with the live parts inside the appliance.
 - When using clips and hairpins, these may become hot with prolonged drying. It is advised that these are removed.

WARNING – SPECIAL SAFETY CUT OUT DEVICE

This hairdryer is fitted with a special safety cut-out device.

If the product overheats due to a fault then the power will be removed from the device and the unit will stop working.

First you should check the unit to find the cause of the fault, or take to an engineer.

Check the fan is operating at full speed and the air inlet is not blocked.

Do not use the hairdryer if fault cannot be resolved.

The safety device is designed so that it will only reset if unplugged for more than 2 minutes.



LOCATION OF CONTROLS



A – 2 Speed Switch

This switch is used to operate the unit. Switch between off, low and high speeds to operate the fan motor at different speeds dependant upon the hair style requirements.

B – 3 Heat Switch

During operation, switch between low, medium and high heat settings to change the temperature of the air being output via the fan motor.

C – Cool Shot Button

During use, press and hold the cool shot button to change the output air temperature from hot to cold. Once the cool shot button is released, the output air temperature will revert back to the temperature set by the 3 heat switch.

D – Concentrator Nozzle Attachment

The removable concentrator nozzle attachment helps to focus the hot air to a more concentrated target of hair.

E – Hanging Loop

The hanging loop allows for easier storage.

F – Diffuser Nozzle Attachment

The removable diffuser nozzle attachment is designed to give body and lift when creating a hair style.



OPERATION

■ BASIC DRYING

- 1** **GENTLY** towel dry hair to **REMOVE** any excess water. **AVOID** rubbing hair too vigorously as this could cause split ends to form. **USE** a wide toothed comb to detangle hair.
- 2** **PLUG** the power cord into a suitable mains supply, ensuring that the speed & heat setting switches are set **TO '0'**.
- 3** **BEGIN** drying hair by **SETTING** the speed switch to **2** and the heat switch to **3**. **USE** your fingers to **'COMB'** through and **DIVIDE** hair to help dry more effectively.
- 4** When hair is almost dry all over, **SET** both the speed and heat switches to the **LOWEST** setting based on desired styling.
- 5** **DIVIDE** hair into manageable sections and **BEGIN** brushing from the nape of the neck towards the scalp, followed very closely by the dryer as you work your way through the hair. **CONTINUE** this process in **SMALL** sections at a time.

Recommended Settings		
Hair Type	Airflow	Heat
Short & Curly	Low	Low
Short & Sculptured	Low	Low
Medium & Curly	Low	Low
Medium & Sleek	High	Medium
Medium & Sculptured	Low	Medium
Long & Curly	Low	High
Long & Sleek	High	High
Long & Sculptured	High	High

■ CONCENTRATOR NOZZLE ATTACHMENT

The removable concentrator nozzle attachment helps to focus the hot air to a more concentrated target of hair.



■ DIFFUSER ATTACHMENT

This attachment is for wavy hair. Scrunch wet hair and place into diffuser on medium heat with a low airflow.

■ STRAIGHT, SMOOTH HAIR STYLING

- 1** **BEFORE** operating the hairdryer, **ATTACH** the concentrator nozzle attachment to the hairdryer, **ENSURING** that it clips into place **SECURELY**.
- 2** **USING** a large, round brush, **BRUSH** the hair from underneath.
- 3** **PULL** the hair down until the hair is fully extended and taut.
- 4** **SET** the speed switch and heat switch to the **HIGHEST** settings and **RUN** the hairdryer **SLOWLY** up and down the length of the hair **SEVERAL TIMES** until it is dry.
- 5** **REPEAT** this process with all sections of hair until it is completely dry all over.

■ CURLY HAIR

- 1** **SET** the heat switch and speed switch to the **LOWEST** setting and **MOVE** the hairdryer quickly around your head.
- 2** As the hair is drying, **SCRUNCH** it using your preferred styling product or **TWIRL** strands of hair around your fingers to add definition.

■ COOL SHOT

A touch of the Cool Shot Button instantly produces cold air for setting hair and also for professional styling. Use the Cool Shot as a finishing touch to hold and set your new style.



CLEANING AND CARE

■ MAINTENANCE

The Hair Dryer is virtually maintenance-free. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, ensure it has cooled completely and wipe the exterior with a damp cloth, then wipe dry.

If any abnormal condition occurs, unplug the unit, allow it to cool and return it for repair to an authorized service representative only. Repairs should not be attempted by the user.

- Always disconnect the hair dryer before cleaning.
- Never immerse the hair dryer in water.
- It is sufficient to wipe the exterior over with a damp cloth and then wipe dry.
- A soft dry brush may be used to remove dust and hairs from the air inlet grille, to ensure proper airflow at all times.

WARNING

To avoid the risk of electrocution – KEEP AWAY FROM WATER HAZARDS



- DO NOT IMMERSE THE UNIT IN WATER OR ANY OTHER LIQUID
- DO NOT TAKE OR USE THIS APPLIANCE IN THE BATHROOM
- DO NOT USE A HAIR DRYER WITH WET HANDS
- NEVER USE THE HAIR DRYER IN THE BATH, UNDER A SHOWER OR OVER A WASH BASIN FULL OF WATER
- DO NOT REACH FOR THE HAIR DRYER IF IT HAS FALLEN INTO WATER OR ANY OTHER LIQUID. UNPLUG IT IMMEDIATELY.


■ STORAGE

When not in use, store the Hair Dryer out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

Only store the product in environments ranging from 5°C to 23°C ambient temperature. Failure to comply could result in damage to the product.



FITTING A NEW UK PLUG

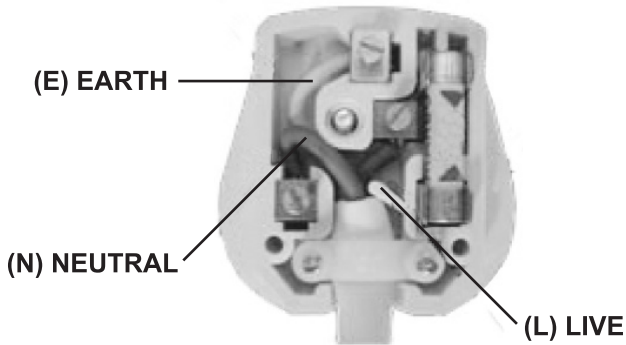


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



*Paul***anthony** CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Plc, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86