 


LLOYTRON®

Models
H2210RD / H2211RD
H2212RD / H2213RD

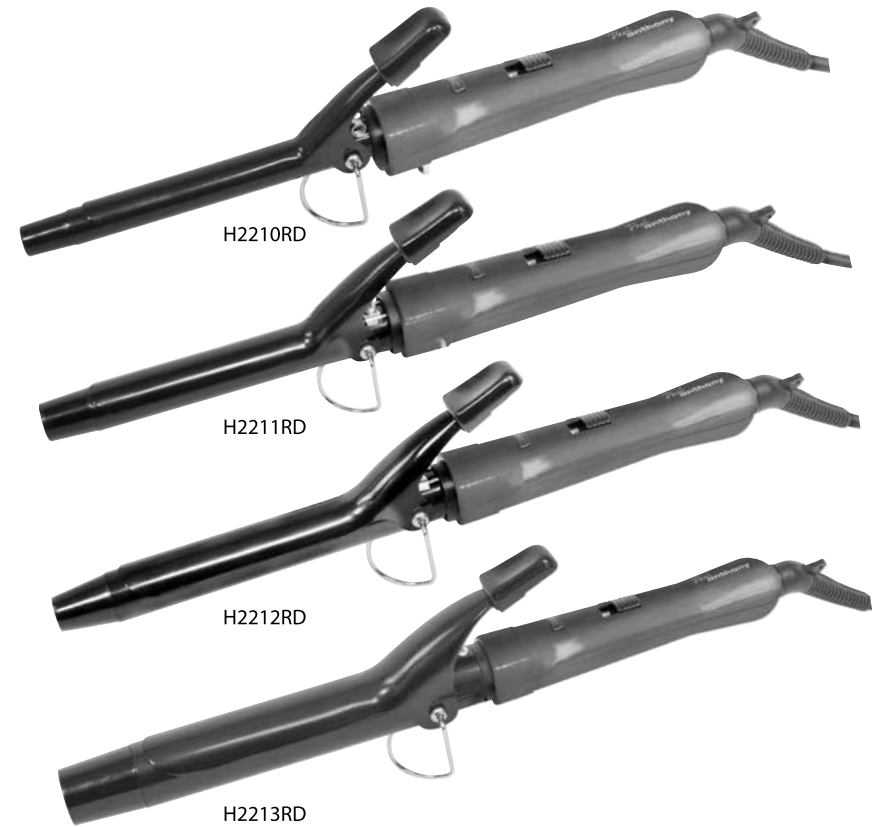

Salon Pro Curling Tongs



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, please call our Customer Service Department
customerservice@lloytron.com • Tel: 08454 81 8808

www.lloytron.com

Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire U.K. WN7 3XH

**OPERATING
INSTRUCTIONS**

Thank you for the purchase of this quality LLOYTRON product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 2 Heat Settings
- Cool Touch Tip
- For 2 Handed Operation (A)
- ON / OFF Indicator (B)
- Light Weight Construction
- Integral Stand (C)
- Tangle-Free Swivel Cord (D)

H2110RD

• 13mm Barrel • Power Consumption: 10W

H2111RD

 
• 16mm Barrel • Power Consumption: 13W

H2112RD

• 19mm Barrel • Power Consumption: 16W

H2113RD

• 25mm Barrel • Power Consumption: 20W

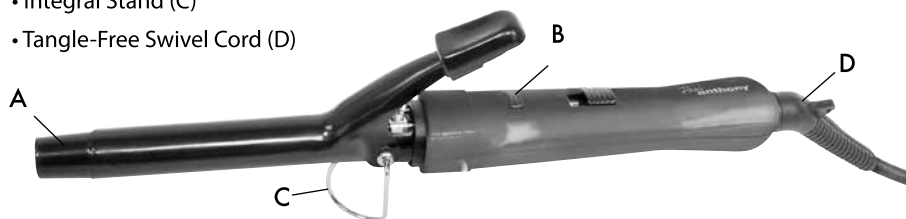

IMPORTANT SAFEGUARDS AND PRECAUTIONS



Save these instructions.

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

WEEE / ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste.

 
For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point.

If you are unsure where this may be, please contact your local authority.

Improper disposal may be harmful to the environment.

UK PLUG REWIRING

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

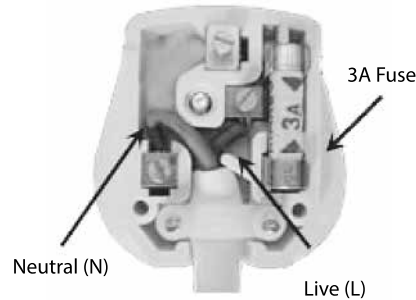

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)

BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.



WARNING!

Do not use this appliance near bathtubs, showers or other vessels containing water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current of 30mA is advisable in the electric circuit supplying the bathroom. Ask your installer for advice.
- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the water. The appliance should then be checked by a qualified electrician before use again!
- Do not touch the scalp when using.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

OPERATION

Plug the unit into the mains, switch on and wait for 15 minutes to allow the appliance to reach its working temperature.

Caution: Although the "Cool Tip" remains cool to the touch, the interface between the "Cool Tip" and the heated barrel does get hot. Take care not to let your fingers slide accidentally towards the heated barrel.

- For those lush, tight curls, wind the hair strands tightly around the barrel, holding the hair in place with the tong grasp clip.
- Roll up about an inch from the scalp, and allow the heat to permeate from the tong barrel to the hair for about 10 to 20 seconds.
- If you have short hair, place a comb close to the scalp to guard against burns.
- For gentler and softer curls, wind the hair a little more loosely around the barrel of the curling tong, roll up to about 3 or 4 inches from the scalp and hold for about 10 seconds.
- Finally, release hair from the tong, by pressing the grasp release clamp, and sliding the tong away from the curled hair.
- Proceed to the next curl.
- When all curls are made, brush out to make the curls loose and bouncy.

When styling, hold the handle in one hand and the safety cool tip in the other. Never wind hair around the tong more than twice.

NOTE: Use setting 1 for Fine Hair and setting 2 for Coarse/Thick Hair.

HELPFUL HINTS

1. To get best results, hair should be clean and dry, and free of all dirt, hair spray, creams, etc.
2. Do not use on artificial hairpieces or wigs as these may melt in the heat generated.
3. Do not use on hair that has been treated with lacquer or setting lotion as this can stick to the barrel, reducing the working efficiency.

CLEANING AND CARE

 
Maintenance

If cleaning becomes necessary, disconnect the unit from the power source, ensure it has cooled completely and wipe the exterior with a damp cloth, then wipe dry.

If any abnormal condition occurs, unplug the unit, allow it to cool and return it for repair to an authorized service representative only.

Repairs should not be attempted by the user.

- Always disconnect from mains outlet and allow to cool before cleaning.
- Never immerse in water.
- It is sufficient to wipe the exterior over with a damp cloth and then wipe dry.



WARNING: To avoid the risk of electrocution
– KEEP AWAY FROM WATER HAZARDS

- o DO NOT IMMERSE THE UNIT IN WATER OR ANY OTHER LIQUID
- o DO NOT TAKE OR USE THIS APPLIANCE IN THE BATHROOM
- o DO NOT USE WITH WET HANDS
- o NEVER USE IN THE BATH, UNDER A SHOWER OR OVER A WASH BASIN FULL OF WATER
- o DO NOT REACH FOR THE APPLIANCE IF IT HAS FALLEN INTO WATER OR ANY OTHER LIQUID. UNPLUG IT IMMEDIATELY.

Storage

When not in use, store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.