



OPERATING INSTRUCTIONS

Style Pro Ceramic Hair Straightener



MODEL: H2214

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 100 x 25mm long ceramic floating plates
- Cool Touch Tip
- Quick Heat Up, ready to use in 30 seconds
- 9x Versatile Temperature Control Settings
150C, 160C, 170C, 180C, 190C, 200C, 210C,
220C, 230C
- LED Display with Temperature setting in Celsius
- or Fahrenheit
- Keratin coating to reduce hair damage
- 60 minute auto-shut off safety feature
- 360 degree swivel cord
- Plate lock feature for storage
- Suits all hair types

SPECIFICATIONS

Operating Voltage: 220-240v~50/60Hz

Power Consumption: 55w max.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.



- To prevent against the risk of electric shock, do not submerge any part of this appliance in water.
- This appliance should only be placed on a flat heat resistant surface.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



WARNING! Do not use this appliance near bathtubs, showers or other vessels containing water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current of 30mA is advisable in the electric circuit supplying the bathroom. Ask your installer for advice.
- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the water. The appliance should then be checked by a qualified electrician before use again!

DO NOT

- Do not touch the scalp when using.
- Do not touch the hot surface even when unplugged. It can take 30 minutes to cool down.
- Do not allow the supply cord to come in contact with the heating element during use.
- Do not direct aerosols or water sprays onto the appliance.
- Do not use the appliance with wet hands.
- Do not use with extension lead
- Do not use on artificial hair, wigs or pet hair.
- Do not exceed the recommended application times or singeing or burning of hair may result.
- Do not let the hot plates touch a persons skin when in use.
- Do not rest the styler on non-heat resistant surfaces or near flammable materials whilst in use or cooling down.
- Do not use when sleepy, drowsy or intoxicated
- Do not wrap cord around the appliance.



LOCATION OF CONTROLS



- A – On/Off Switch
- B – Temperature Adjustment Switch
- C – Cool Touch Tip
- D – 360 degree swivel cord
- E – Ceramic Heating Plate
- F – Plate Lock Switch

KERATIN INFUSED

Keratin is a natural type of protein in your skin, hair, and nails. A keratin treatment adds additional keratin to your hair, which can help to reduce frizz, increase shine, and strengthen hair. If you have curly or wavy hair, keratin treatments can also make your hair firmer.



OPERATION

- To minimize heat damage to the hair, try the lowest temperature setting first, moving onto the higher settings if hair straightness is not satisfactory.
- For best effect, the section of hair to be straightened should not be more than 5cm wide and 1cm thick.

1. Plug the unit into the mains socket.
2. Place the straightener onto a flat heat resistant surface with the plate lock closed.
3. Press and hold the ON/OFF button for a few seconds until the LED display is illuminated.
4. The temperature is initially set to the lowest available setting. I.e 150C
5. Select your temperature by each press of the + or – button. The LED display will show the desired temperature from 150C to 230C. Each press increases or decreases by 10 degrees. It will take approximately 3 minutes for the straightener to reach 230C. Ready to use in 30 seconds at 150C.
6. If the temperature adjustment is idle for 5 seconds then the temperature will lock on the desired temperature and the LED display will show a Lock symbol. To unlock the temperature, quickly press the On/Off button.
7. When ready to use, remove the plat lock and open the straighteners.
8. Take a section of hair to be straightened and place the hair between the ceramic coated plates as close to the root as possible but do not touch the scalp. To prevent damage to the hair do not repeat on the same section of hair more than once.
9. Close the ceramic coated plates firmly together and slide the straightener down the length of the hair in a single motion taking not more than 5 seconds from root to tip to prevent overheating / scorching the hair.
10. Release the section of hair and repeat on the next section, straightening the lower sections of hair before the top ones.
11. The hair straightener can be turned off any time by pressing and holding the On/Off button (for approx. 3 seconds) or switching off at the mains and unplugging.

CAUTION

Although the “Cool Tip” remains cool to the touch, the interface between the “Cool Tip” and the heated plates does get hot. Take care not to let your fingers slide accidentally towards the heated plates.

Note: The hair straightener will automatically turn off after 1 hour. To reactivate, press and hold the On/Off button.

HELPFUL HINTS

1. To get best results, hair should be clean and dry, and free of all dirt, hair spray, creams, etc.
2. Do not use on artificial hairpieces or wigs as these may melt in the heat generated.
3. Do not use on hair that has been treated with lacquer or setting lotion as this can stick to the barrel, reducing the working efficiency.

CAUTION

Do not use any hair treatment product prior to straightening other than heat protection products that clearly state they can be used before straightening with a hair straightener. When using a heat protection product be careful to use as instructed by the manufacturer and be sure not to make your hair too sticky otherwise it could cling to the heating plates causing burning or pulling of the hair.



■ CHANGE TEMPERATURE

To change the temperature from Celsius to Fahrenheit and back again, simply press the centre of the temperature + / - buttons at same time whilst the unit is switched on.

CLEANING AND CARE

DO NOT

Do not clean or perform any maintenance whilst the appliance is plugged in or warm/hot.

Keep the straightener clean and free of styling products.

1. Switch off, unplug and always allow the straightener to cool (at least 30 minutes) before storing or cleaning.
2. Do not wrap the mains cable around the straightener when storing or hang by the cable as this may damage the cable in the long term.
3. Wipe the outside of the straightener, the ceramic coated plates and cable with a damp cloth to remove any build-up of styling products. Wipe dry. Do not use detergent or abrasives as these may scratch the surface. Never immerse the straightener, cable or plug in water.
4. Regularly check the mains cable for wear or damage, particularly where it enters the product and plug. Do not use if damaged.

WARNING

Allow the straightener to completely cool down for over 30 minutes before storage.
Do not wrap the cord around the straightener.

WEEE/ENVIRONMENTAL PROTECTION




■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



FITTING A NEW UK PLUG

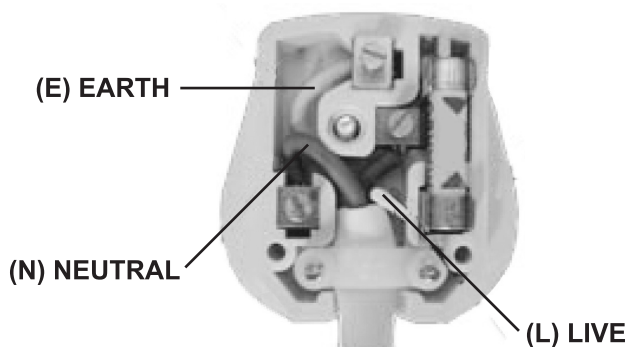


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 7 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



Paul
anthony CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86