
OPERATING INSTRUCTIONS

Silk Pro 2

Rechargeable Lady Shaver



MODEL: H3211

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Ergonomic and comfortable design
- Smooth and Gentle Shaving experience
- Cordless Lithium Powered
- USB-C rechargeable
- Twin hypoallergenic floating foil shaver with intercept trimmer
- Hypoallergenic Rubber stretches skin, lifts the hair for a more precise shave
- Showerproof
- Wet and dry razor
- Spring Loaded foils keeps close skin contact that naturally glides over the contours of the body
- 90 minutes charging time
- 60 minutes usage time
- Single use with a 10 minute charge
- Includes Cleaning Brush and Beauty Bag

SPECIFICATIONS

This product requires a USB-C Power Source.

Input Voltage: 5v DC 1000mA
Waterproof: IPX5
Motor Voltage: DC 3.7v

Battery: 3.7v 600mAh 2.22Wh 14500 Lithium Battery
Charging Time: 90 mins (approx.)
Working Time: 60 mins (approx.)

This product uses a Lithium-Ion battery that is not replaceable and requires a USB charger or charging port that provides 5v DC 1000mA or above.
A charging adaptor is not supplied with this product.

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance



with the rated electrical parameters shown on the rating label.

- This appliance should never be left unattended when plugged into a power source, except when charging.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

The supply cord can be replaced with any USB-C Charging cable.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.



IPX5 Suitable for use in a bath or shower.

This wet & dry shaver can be used for wet shaving using shaving lather or for dry shaving. You can use this shaver in the shower and clean with water.

DO NOT

- Do not use if the shaver or foils is damaged or if it malfunctions.
- Do not use for any purposes other than the appliances intended use.
- Do not twist or kink the cable, or wrap it around the appliance.
- Do not plug or unplug the appliance with wet hands.
- Do not share this shaver with family or others, this may cause infection or inflammation.
- Do not drop or subject to shock.

WARNING

- Only use an approved USB 5v Power source.
- Detach the appliance from the supply cord before cleaning it with water.
- Make sure the power adaptor does not get wet.

- Use, charge and store the appliance at temperatures between 5°C and 35°C.
- The rechargeable battery contains substances that may pollute or be harmful to the environment. Always remove the battery before discarding the appliance. Dispose of the batteries at an official collection point for batteries or seek advice from your local government authority.



LOCATION OF CONTROLS



- A. Integrated trimmer & shaver head(twin foil)
- B. Skin stretcher
- C. Long hair trimmer
- D. On/Off switch
- E. Foil assembly release button
- F. Bikini Shaver comb
- G. Cleaning brush
- H. USB cable



OPERATION

■ BEFORE USE

Before using your lady shaver, ensure the product is not damaged.

■ CHARGING INDICATOR

Red Flashing light is charging

Green light is fully charged

White light is during operation

■ CHARGING

The Shaver can be charged directly via the USB-C cable supplied into a USB Power source (not provided).

1. Plug the USB-C cable directly into the Shaver.
2. The Red LED on the Shaver will slowly flash to indicate charging.
3. When fully charged, approximately 90 mins, the LED will stop flashing and turn Green.

■ SHOWERPROOF

This Lady Shaver can be used under the shower (IPX 5). However, do not submerge in water for more than a few minutes.

■ FOIL REMOVAL

1. Make sure that the device is turned off.
2. To take off the foil head, push the release button (5) to the right. This will release the foil head which can then be removed for cleaning.
3. Do not try to remove the blades.
4. To refit the foil head, make sure foils are in place and then push back onto the motor unit. Do not push of damage the foils.

■ HEAD REMOVAL

The entire head can be removed and this can make the cleaning process easier.

1. Make sure that the device is turned off.
2. To take off the head, twist the head anticlockwise. This will release the full head unit for cleaning.
3. To refit the head, simply push back onto the handle and twist clockwise.



■ HOW TO USE

Switch on by sliding the on/off switch upwards.

IMPORTANT: Prior to first use, test the unit on a small area of your arm or leg. If you experience any sensitivity or allergic reaction, discontinue use immediately. Do not use this unit on sensitive or irritated skin.

SHAVING YOUR LEGS:

1. Ensure the shaving head is fully attached
2. Switch on by sliding the switch upwards.
3. Always keep the shaver perpendicular to the surface to be shaved.
4. Always work with both hands: stretch the skin with one hand and move the appliance with the other hand.
5. Slowly move the shaver, exerting light pressure.
6. As a precaution, the operation of the appliance may slow down substantially, if the shaver is pressed too hard against the skin.

SHAVING SENSITIVE AREAS:

1. To remove hairs from your underarms, move the appliance from the bottom, in an upwards direction.
2. To remove hairs from the bikini line, carefully stretch the skin and move the appliance from the outside to the inside.

Do not apply too much pressure to avoid causing irritation to the skin.

Do not apply any perfume or deodorant for 24 hours after shaving.

USING THE TRIMMER:

1. For long hair, use the trimmer before shaving. This will help you achieve a more effective shaving result.
2. Hold the appliance with the trimmer facing your leg and slightly tilted towards you.
3. Move the trimmer slowly against the direction of the hair growth.
4. Using the trimmer comb attachment

SHAVING THE BIKINI AREA:

1. When trimming the bikini area, attach the trimmer comb attachment to the appliance head by pushing onto the head until it clicks.
2. Hold the appliance at a right angle to your skin and press down gently.
3. Edge and shape the area as desired.



CLEANING AND CARE

Do not clean or perform any maintenance whilst the unit is being charged.

1. Press the release switch on the back of the unit to remove the head.
2. Using supplied cleaning brush remove any debris from inside the head and around the cutting teeth.
3. Rinse the head **ONLY** under a running tap and then allow to air dry.
4. After cleaning, add machine oil to the teeth of the trimmer to keep it in perfect condition.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The Lithium Ion rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

REMOVING THE BATTERY

The battery cannot be replaced. Lithium-ion batteries can explode, catch fire and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

To remove the battery, open the casing of the shaver, slide out the battery and carefully cut either wire on each terminal.

Note: it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.



Paul
anthony CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England. WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86