
OPERATING INSTRUCTIONS

Spa Pro

Pedi Roller



MODEL: H3402

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Ergonomic and comfortable design
- Dual Speed
- Cordless Lithium Powered
- USB rechargeable
- Fine and Coarse Interchangeable Rollers
- 90 minutes charging time
- 90 minutes usage time
- Integral Light
- Dry Use Only

SPECIFICATIONS

This product requires a USB Power Source.

Input Voltage: 5v DC 1000mA

Motor Voltage: DC 3.7v

Battery: 600mAh Lithium Battery

Charging Time: 90 mins

Working Time: 90 mins (approx.)

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces.
- To prevent damage to the USB cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the USB cord is damaged, do not charge. Check before each use!



- The USB charging cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Always unplug when not in use or when charging.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

The supply cord cannot be replaced other than with a manufacture's recommended cord.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.



Do not use this appliance near bathtubs, showers or other vessels containing water.

DO NOT


- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- Do not use if skin is damp or wet

WARNING

- Keep the appliance dry.
 - Ensure that any power adaptor used does not get wet.
 - Never press too hard as you can damage the rollers pin.
 - In case of discomfort, stop using the appliance immediately.
 - Do not use on sensitive skin or if skin is damaged or has open sores.
- Should this appliance fall into water. The appliance should then be checked by a qualified electrician before use again!
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - Use, charge and store the appliances at a temperature between 5°C and 35°C




LOCATION OF CONTROLS

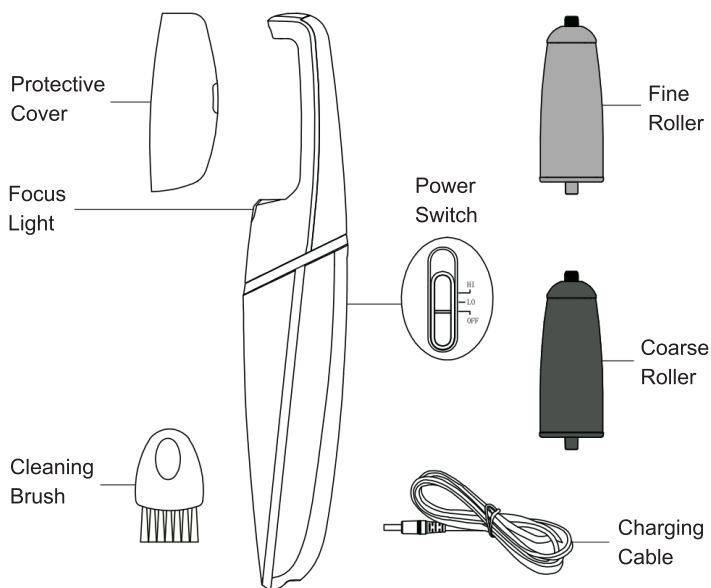


OPERATION

■ CHARGING BATTERY STATUS INDICATIONS

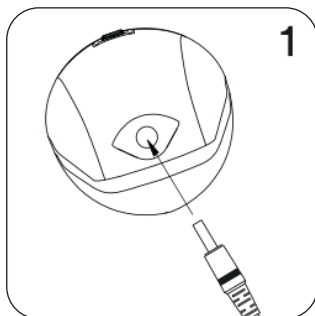


1. Insert the small plug into the charging socket at the bottom of (1), and the USB plug into any USB Charging adaptor or socket.

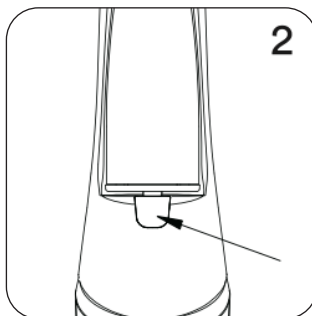

2. The indicator light (2) will illuminate when charging. When the appliance is fully charged (about 90 ins), the indicator light will turn off. Then you can use the appliance for approx. 90 mins.




■ HOW TO USE

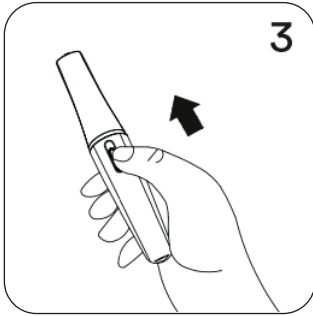


1. Remove the protective cover and fit the desired roller (fine or coarse). Use the Fine roller for polishing everyday maintenance, and the Coarse roller for grinding tough calluses and dry cracked skin.

2. Use the power switch (3) to set your speed on Low (1500rpm) for polishing or High (2000rpm) for grinding power. We recommend starting on Low and working your way up.

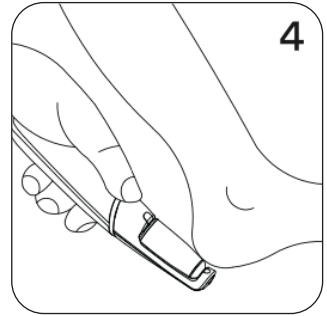

3. Use light, gentle pressure and allow the roller to do the work for you. Move the roller (4) in a slow back and forth (2-3 seconds) motion until your feet are silky smooth.

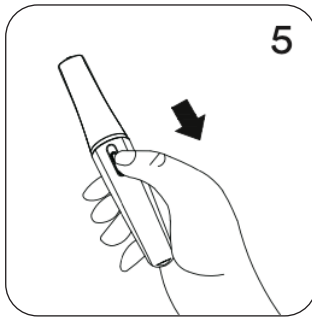




4. To turn off the appliance, simply return the power switch to OFF (5).

5. Rinse your feet or use a wet towel to remove the extra skin and apply some lotion.



■ ROLLER REPLACEMENT

Before changing the roller, make sure the appliance is turned off and the power supply is disconnected.

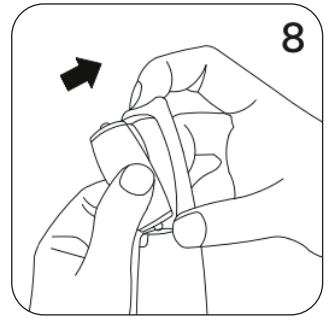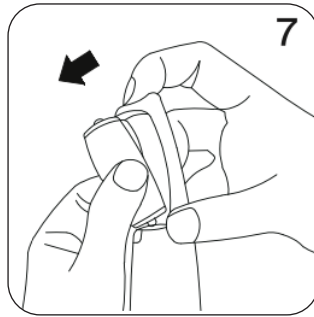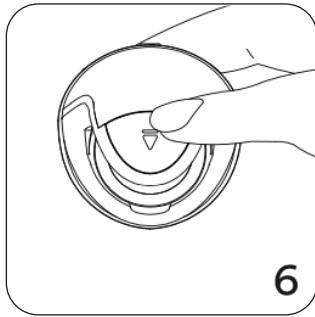


1. Press and hold the roller button at the top (6) with one finger, and gently pull the roller with the other hand (7). The roller will be removed easily.

2. To fit the desired roller, simply place its bottom pin first and then push the roller into the appliance (8). If fitted correctly, you should hear a click. Otherwise we suggest restarting the replacement again.

CLEANING AND CARE


Do not clean or perform any maintenance whilst the unit is being charged.

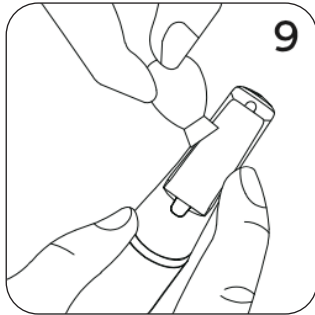

1. Remove the rollers. Clean the inner wall of the appliance with the cleaning brush (9).

2. Clean the cabinet with a damp lint-free cloth and allow to dry.

3. Wash the rollers under the tap (10) and let them dry naturally. DO NOT wash whilst inside the appliance.

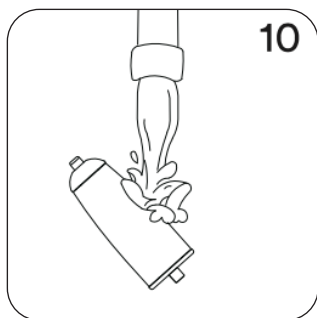

4. Store the appliance and rollers in a dry, ventilated and cool place.

5. Do not place in high temperature, high humidity or high pressure environments.

6. Do not place in direct sunlight.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The Lithium Ion rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

REMOVING THE BATTERY

The battery cannot be replaced. Lithium-ion batteries can explode, catch fire and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

To remove the battery, open the casing of the clipper, slide out the battery and carefully cut either wire on each terminal.

Note: it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.



Paul
anthony CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86