
OPERATING INSTRUCTIONS

Spa Pro

Rechargeable Facial & Eyebrow Trimmer



MODEL: H3501

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Ergonomic design
- Single speed
- Dual Action Facial or Eyebrow Trimmer
- Lithium Powered
- 90 minute usage time
- 90 minute full charging time
- Integral Light
- USB-C charging Port
- Dry Use Only

SPECIFICATIONS

This product requires a USB-C Power Source.

Input Voltage: 5v DC 1000mA

Motor Voltage: DC 3.7v

Battery: 600mAh Lithium Battery

Charging Time: 90 mins

Working Time: 90 mins (approx.)

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces.
- To prevent damage to the USB cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the USB cord is damaged, do not charge. Check before each use!



- The USB charging cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Always unplug when not in use or when charging.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

The supply cord can be replaced with any USB-C Charging cable.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.



WARNING! Do not use this appliance near bathtubs, showers or other vessels containing water.

DO NOT


- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- Do not use if skin is damp or wet
- Do not share this appliance with other friends or family members.

WARNING

- Keep the appliance dry
 - Ensure that any power adaptor used does not get wet
 - Never press too hard as you can damage the rollers pin.
 - In case of discomfort, stop using the appliance immediately.
 - Do not use on sensitive skin or if skin is damaged or has open sores.
- Should this appliance fall into water. The appliance should then be checked by a qualified electrician before use again!
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - Use, charge and store the appliances at a temperature between 5°C and 35°C



LOCATION OF CONTROLS

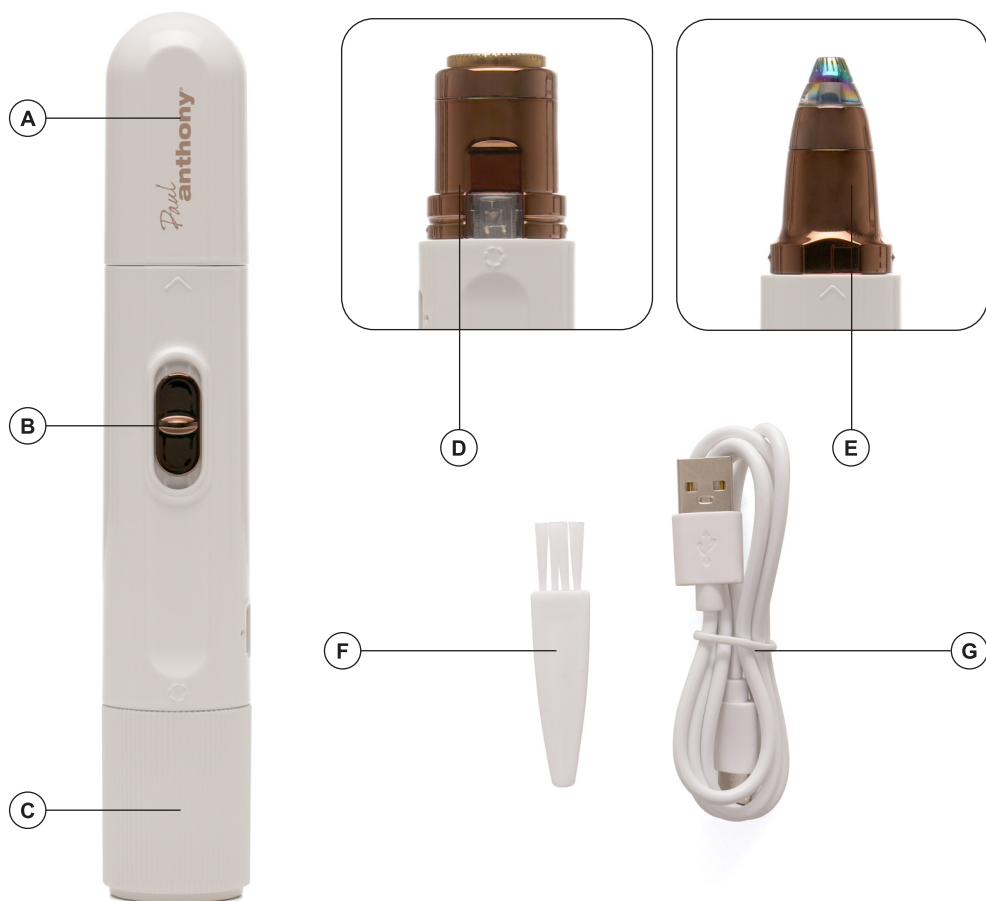

- A. Protective Cap
- B. On/Off Switch
- C. Protective Cap
- D. Trimmer Head
- E. Hair SHaver Head
- F. Brush
- G. USB cable



OPERATION

■ CHARGING BATTERY STATUS INDICATIONS

1. Insert the USB-C plug into the Charging port on the appliance, and the USB plug into any USB Charging adaptor or socket.
2. The RED charging LED will illuminate when charging and turns green when fully charged.

■ HOW TO USE

Always try on a small area before first time use. In the event of oversensitivity or allergic reactions, stop use immediately. Do not use on sensitive or irritable skin. Apply moisturising cream after use. For optimal use, use on hair length of less than 6mm.

■ HAIR SHAVER


1. Remove the cap covering the single shaving head.
2. Push the ON/OFF button up towards the shaver head to operate.
3. Gently press the shaving head onto the skin. Do not hold at an angle.
4. Remove any bothersome hair with circular motion.

Note: *It is normal for the head to become warm during use.*

■ EYEBROW TRIMMER

1. Remove the cap covering the pointed trimming head.
2. Push the ON/OFF button up towards the trimming head to operate.
3. Gently press the trimming head onto the skin to remove the unwanted hairs.
4. Start by using the trimmer away from the eyebrow and become closer to the eyebrow until the desired hair depth has been reached.

Note: *It is normal for the head to become warm during use.*

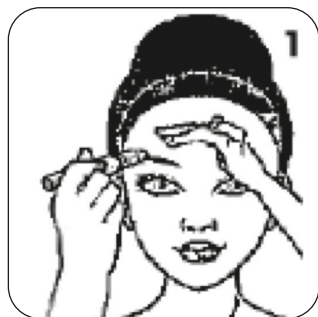

CLEANING AND CARE


Do not clean or perform any maintenance whilst the unit is being charged or switched on.

■ SHAVER HEAD

1. Remove the blades and foil by twisting the end clockwise.
2. Lift and remove the foil and use cleaning brush to remove any debris.
3. Replace the foil and head by pushing down and twisting anti-clockwise.
4. The head only can be rinsed under warm water. Do not submerge the appliance.
5. Allow to dry naturally.

■ EYEBROW TRIMMER

1. Remove the blades by twisting the end anti-clockwise.
2. Lift and remove the blades and use cleaning brush to remove any debris.
3. Replace the head by pushing down and twisting clockwise.
4. The head only can be rinsed under warm water. Do not submerge the appliance.
5. Allow to dry naturally.

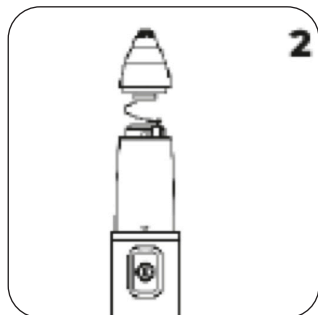

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The Lithium Ion rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

REMOVING THE BATTERY

The battery cannot be replaced. Lithium-ion batteries can explode, catch fire and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

To remove the battery, open the casing of the shaver, slide out the battery and carefully cut either wire on each terminal.

Note: *it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.*



Paul
anthony CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86