

Paul
anthony[®]

OPERATING INSTRUCTIONS

Travel Pro

Shaver with Trimmer



MODEL: H5001

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Dual precision titanium steel floating blades
- 40 minute operation
- 2x AA Battery Operated
- Comfortable Ergonomic Grip
- Retractable Precision Trimmer

SPECIFICATIONS

Operating Voltage: 3v DC

Requires: 2x AA Alkaline Batteries

Do not use rechargeable or Heavy Duty/Carbon Zinc batteries

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate at temperatures above or below this range. Failure to comply can cause damage to the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Always unplug when not in use or when charging.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.



- Animal clipper, hair clipper and appliances for manicure and pedicure can be used by children aged from 3 years under supervision.
- Shaver, wet shaver, animal clipper, hair clipper, and appliances for manicure and pedicure can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



WARNING! Do not use this appliance near bathtubs, showers or other vessels containing water.

- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the water. The appliance should then be checked by a qualified electrician before use again!
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- Use, charge and store the appliances at a temperature between 5°C and 35°C

DO NOT

- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.

WARNING

- Keep the appliance dry.



LOCATION OF CONTROLS



A – Foil Heads

The foil head protect the skin from being damaged by the titanium steel cutting blades.

B – Twin Titanium Floating Blades

The blades oscillate rapidly to cut away at facial hair, giving a clean, smooth shave.

C – On/Off Switch

This operates the motor to begin shaving. Ensure that the On/Off Switch is set to OFF before changing batteries

D – Battery Compartment

Insert two (2) AA (MN1500) Alkaline batteries.

OPERATION

■ SHAVING

Check that batteries are inserted and correct polarity before commencing shaving.



1. Push the on/off switch to “ON” to operate the shaver.



2. Place the shaver foil close to the skin and move fast in circular and straight motions. Stretching the skin with your free hand will help to straighten the hair, making it easier to cut.



■ TRIMMING



1. Push the trimmer switch up to expose the trimmer.



2. Push the on/off switch to the "ON" position to activate the trimmer blades.



3. Softly Touch the trimmer against the skin at a right angle and slowly trim downwards.



4. Push the on/off switch to the "OFF" position to disengage the trimmer blades.



5. Pull the trimmer switch to CLOSE the trimmer.

CLEANING AND CARE

■ MAINTENANCE

This shaver has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

■ STORAGE

Always store this shaver in a moisture-free area. Do not store in temperatures below 5°C or above 35°C.

 


■ DISASSEMBLY FOR CLEANING

This Shaver comes with removable components, allowing for a more thorough and detailed clean, or the ability to replace blunt and damaged 'Cutting Blades' or 'Foil Heads'.




1. Gently hold the sides of the Head and pull up to release the Head Cover.

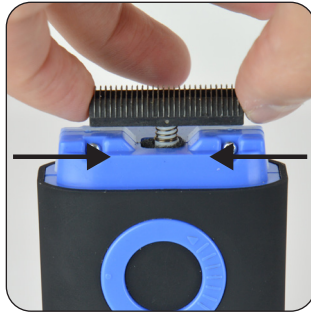


2. Each Foil Heads and Cutting Blades are held in place by an Inner Frame. Pull the Inner Frame catches to unclip them from the Head Cover.



 3. Remove the Foil by carefully pushing the top of the foil which will unclip from the head. Then extract the foil from inside the head.

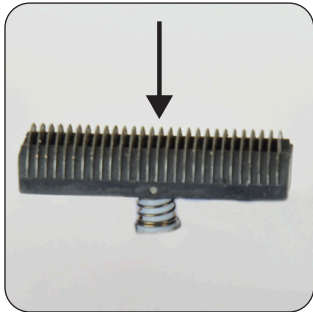

 4. Replace the foil by carefully pushing the cleaned or new foil inside the head unit until they click into place.

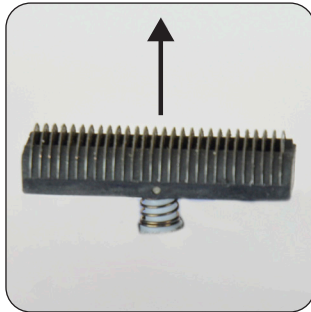


5. Remove the blades by pulling them up from the main unit. The blades are sat in a cradle and the whole cradle should be replaced.



6. The new blades push back into the holder. It doesn't matter which way round.




 7. Clip the Head Cover back into place.

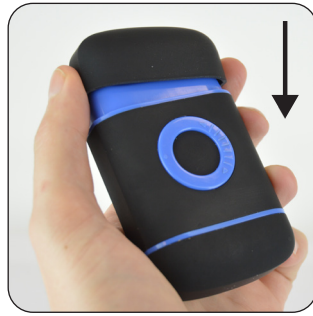

8. Place the plastic protective cover onto the head to protect the foil.

 ■ REMOVING THE BATTERY

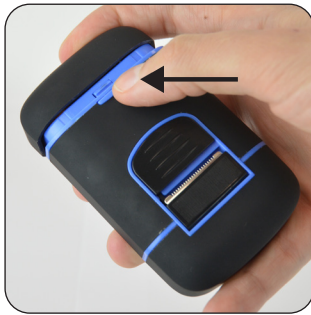

1. Press the button at the back of the unit above the blue line to release the bottom of the shaver.



2. Remove the bottom of the shaver to reveal the battery compartment.



3. Insert the batteries in series, one positive down, one negative down. It doesn't matter which way round as long as they are inserted in different directions.



4. Close the cover.



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

Paul
anthony CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Plc, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86