

OPERATING INSTRUCTIONS

Pro Series 1

Mobile Foil Shaver



MODEL: H5002

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- · Single Foil Blade
- 90 minute working time
- 90 minute charging time
- 10 mins use from 5 min charge
- USB chargeable (USB cable only supplied)
- Requires 5v DC 1.0A USB supply

SPECIFICATIONS

Operating Voltage: 5v DC

Battery: 3.7v Lithium-Ion 320mAh

Requires: USB Charger 5v DC 1000mA minimum

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product. This product uses a Lithium-Ion battery that is not replaceable and requires a USB charger or charging port that provides 5v DC 1000mA or above. A charging adaptor is not supplied with this product

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- · Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- · Only for use indoors.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- · Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.



- Animal clipper, hair clipper and appliances for manicure and pedicure can be used by children aged from 3 years under supervision.
- Shaver, wet shaver, animal clipper, hair clipper, and appliances for manicure and pedicure can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



WARNING! Do not use this appliance near bathtubs, showers or other vessels containing water.

- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the
 water. The appliance should then be checked by a qualified electrician before use again!
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- Use, charge and store the appliances at a temperature between 5°C and 35°C

LOCATION OF CONTROLS



A - Foil Heads

The foil head protect the skin from being damaged by the titanium steel cutting blades.

B – Twin Titanium Floating Blades

The blades oscillate rapidly to cut away at facial hair, giving a clean, smooth shave.

C - On/Off Switch

This operates the motor to begin shaving. Ensure that the On/Off Switch is set to OFF before Charging. There is no charging indicator to advise when charging or when fully charged. The charging will stop automatically when fully charged which should take no longer than 90 minutes.

D - USB-C Port

Charge using any USB charger or USB Source that is above 1000mAh using the cable provided



OPERATION

SHAVING

Check that the shaver is charged before commencing shaving.



1. Push the on/off switch to "ON" to operate the shaver.



2. Place the shaver foil close to the skin and move fast in circular and straight motions. Stretching the skin with your free hand will help to straighten the hair, making it easier to cut.

CLEANING AND CARE

■ MAINTENANCE

This shaver has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

STORAGE

Always store this shaver in a moisture-free area. Do not store in temperatures below 5°C or above 35°C.

DISASSEMBLY FOR CLEANING

This Shaver comes with removable components, allowing for a more thorough and detailed clean, or the ability to replace blunt and damaged 'Cutting Blades' or 'Foil Heads'.




1. Gently hold the sides of the Head and pull up to release the Head Cover.



2. The Foil Head and Cutting Blade is held in place by an Inner Frame. Pull the Inner Frame catches to unclip them from the Head Cover.



3. Remove the Foil by carefully pushing the top of the foil which will unclick from the head. Then extract the foil from inside the head.

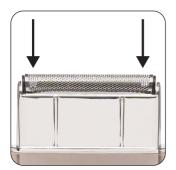

4. Replace the foil carefully by pushing the cleaned or new foil inside the head unit until they click into place.



5. Remove the blades by pulling them up from the main unit. The blades are sat in a cradle and the whole cradle should be replaced.



6. Push the blade back into the holder. It doesn't matter which way round.



7. Clip the Head Cover back into place.



8. Place the protective cover onto the head to protect the foil.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

Paul CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com

