

Paul
anthony
exclusive to LLOYTRON

OPERATING INSTRUCTIONS

**Pro Series X1 Elite
Titanium
Foil Shaver**



MODEL: H5015BK

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Rechargeable Cordless Operation
- Water Resistant
- Retractable Side Precision Trimmer
- Twin Blades for a closer shave
- Titanium steel foil flexible head for a smooth, comfortable shave
- Washable head
- Charging Time: 8 hours (approx.)
- Usage: 30mins (approx.)
- Cleaning Brush Included
- Mains Adaptor Included

LOCATION OF CONTROLS





IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the intended use.
- This product is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the power cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the power cord is damaged, do not use. Check before each use!
- If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Do not use if any part of this appliance is damaged in any way. Do not use if foils are damaged.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



- **WARNING!** Do not use this appliance near bathtubs, showers or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the water. The appliance should then be checked by a qualified electrician before use again!
- Make sure the adaptor does not get wet.
- Only use the power adaptor and accessories supplied.
- Use, charge and store the appliances at a temperature between 5C and 35C.
- The rechargeable shaver battery contains substances that may pollute or be harmful to the environment.
- Always remove the battery before you discard the shaver. Dispose of the batteries at an official collection point for batteries or seek advice from your local authority.

HOW TO USE

BEFORE USE:

- 1) Ensure the Shaver is fully charged before use, this takes approximately 8 hours.
- 2) Check the foil is not damaged and dirty before use.
- 3) Avoid pressing down on the foil or striking it with any hard substances as this could damage the foils. Damaged foils can score your skin and create abrasions.

CHARGING:

 
- 1) Turn OFF the switch before charging.
- 2) Plug the charging lead into the bottom of the shaver to fully charge. This takes approximately 8 hours.
- 3) Plug the adaptor into the power socket to begin charging.

To guarantee long life of the rechargeable battery, please observe the following guidelines.

- I) Charge and store the shaver at temperatures between 5C and 35C.
- II) Do not allow the shaver to be connected for over 20 hours to the power supply.

SHAVING:

- 1) Ensure Shaver is properly charged.
- 2) Remove the protective cap from the shaver.
- 3) Turn the Shaver ON.
- 4) Place the Shaver foil close to the skin and move fast in both circular and straight motions. (Fig. 1)
- 5) Care should be taken around moles and other skin blemishes.
- 6) Stretch the skin with your free hand to help straighten hair.
- 7) Hair on the neck can also be shaved this way.
- 8) After shaving, clean and place protective cap to prevent foil becoming damaged.

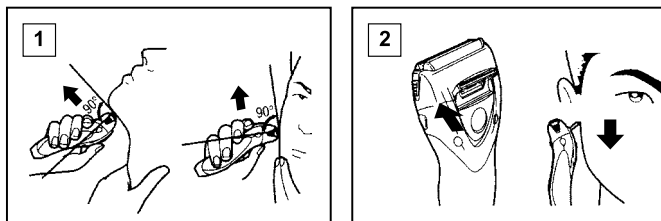

TRIMMING:

At the rear of the Shaver is a Trimming Head for Sideburns, Moustache and beards etc.

- 1) Push the Precision Trimmer switch up to engage the Trimmer.
- 2) Softly touch skin at right angles and slow trim downwards. (Fig. 2)
- 3) After using, Push the Precision Trimmer switch down to disengage Trimmer.

CLEANING AND CARE

MAINTENANCE

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

STORAGE

Always store this appliance and cord in a moisture-free area.
Do not wrap the cord of the charging adaptor around the appliance.
Do not store in temperatures above 35c.

 
 
 
 
CLEANING

Squeeze the two buttons on either side of the unit to remove Foil Frame, see Fig A.
Remove any hair debris using cleaning brush after each use, see Fig B and C.
Blow the debris from the inner blades, if necessary, remove by pulling off the mechanism.
Click back into place after cleaning.
Rinse the head under running water and allow to dry naturally, see Fig D.
DO NOT USE A TOWEL ON THE FOIL!
A Mild detergent can be used in the head only.

DO NOT TOUCH THE FOILS.

DO NOT SUBMERGE UNIT IN WATER OR ANY OTHER LIQUID.

ENSURE THE MAIN BODY and CHARGING TERMINALS DO NOT GET WET!

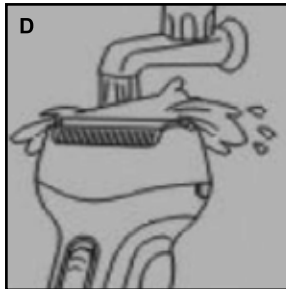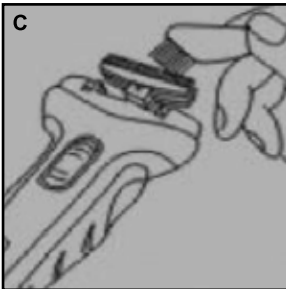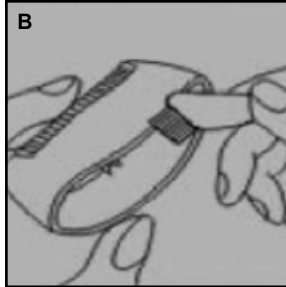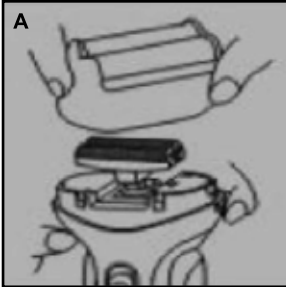

WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K