
OPERATING INSTRUCTIONS

Pro Series X3

Shaver with Trimmer



MODEL: H5017

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 3 precision titanium rotary blades
- Extra long 90 minute operation
- 2 hour fast charge
- Rechargeable cordless operation
- Retractable side precision trimmer
- Wet or dry use
- Comfortable Ergonomic Grip
- LED Battery Life Indicator
- Charge Time: 2hrs (approx.)
- Usage Time: 90mins (approx.)
- Universal Voltage
- AC charging adaptor, cleaning brush and travel pouch included.
- Ingress Rating 1PX7

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

DO NOT

Do not use for any purposes other than the appliances intended use.

- This product is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the power cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the power cord is damaged, do not use. Check before each use!
- If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.



⊘ DO NOT

Do not use if any part of this appliance is damaged in any way.

⊘ DO NOT

Do not use if the foils are damaged.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



Suitable for use in a bath or shower



Suitable for cleaning under an open water tap

⚠ WARNING

Detach the hand-held part from the supply cord before cleaning it with water.

- Make sure the adaptor does not get wet.
- Only use the power adaptor and accessories supplied.
- Use, charge and store the appliances at a temperature between 5°C and 35°C.
- The rechargeable shaver battery contains substances that may pollute or be harmful to the environment. Always remove the battery before you discard the shaver. Dispose of the batteries at an official collection point for batteries or seek advice from your local authority.



LOCATION OF CONTROLS



A – Foil Heads

The foil heads protect the skin from being damaged by the titanium steel cutting blades

B – Titanium Steel Cutting Blades

The blades spin rapidly to cut away at facial hair, giving a clean, smooth shave.

C – Head Cover

The head cover keeps the blades and foil heads attached to the motor.

D – Head Cover Release Catch

Pressing this releases the Head Cover, allowing for the blades and foil heads to be removed for detailed cleaning.

E – On/Off Switch

This operates the motor to begin shaving. Ensure that the On/Off Switch is set to 'off' before commencing charging; otherwise the unit will not charge.

F – Power & Charging Indicator LED

The LED will indicate when there is power to the unit and when the unit is charging. There are 5 LED's to show the battery status during charging as well as during use.

G – Charging Connection Point

Insert the AC Charging Adaptor to commence charging. Ensure that the AC Adaptor is plugged into a suitable 100-240v~50/60Hz Mains Socket. This model has a universal voltage and can therefore be used when travelling outside of the UK.

H – Trimmer

This feature can be used for precision trimming and detailed styling.

I – Trimmer Switch

Pushing the trimmer switch up will expose the trimmer

SPARES AVAILABLE ON REQUEST

CONTACT: CUSTOMERSERVICE@LLOYTRON.COM OR TEL. 08454 818808

If you find that over time usable parts become worn or damaged, then please contact our Customer Service Department above who can advise you if parts are available and any nominal cost to replace the parts.



OPERATION

■ BEFORE USE

- 1 ENSURE** the Shaver is **FULLY CHARGED** before use.
- 2 CHECK** the foil is not damaged or dirty.
- 3 AVOID** pressing into or striking the foil with any hard substances. Damaged foils can score your skin and create abrasions.

■ CHARGING

- 1 ENSURE** the on/off switch is set to '**OFF**' before attempting to charge.
- 2 PLUG** the AC adaptor into a suitable 220-240v~50Hz mains supply and **CONNECT** it to the shaver at the charging connection point.
- 3** The charging indicator LED will **LIGHT UP** to indicate that the shaver is charging. The LED's show the charging status and when all 5 LED's are lit up, charging is complete.
- 4 LEAVE** the shaver to charge. This will take approximately **2 HOURS**.

***Note:** the shaver will not charge when it is switched 'on'. Be sure to check that the on/off switch is set to 'off' when commencing charging. If the LED charging indicator is not lit up, the unit will not charge.*

- I) Charge and store the shaver at temperatures between 5°C and 35°C.
- II) Do not allow the shaver to be connected to the charger for more than 20 hours. The LED charging indicator does not turn off or change colour to indicate when the battery is fully charged.

■ SHAVING

Ensure the shaver is fully charged before commencing shaving.

- 1 PUSH** the on/off switch to the '**ON**' position to operate the shaver.
- 2 PLACE** the shaver foil close to the skin and **MOVE** fast in **CIRCULAR** and **STRAIGHT** motions. **STRETCHING** the skin with your free hand will help to **STRAIGHTEN** the hair, making it easier to cut.



■ TRIMMING

- 1** **PUSH** the trimmer switch up to **EXPOSE** the trimmer.
- 2** **PUSH** the on/off switch to the '**ON**' position to **ACTIVATE** the trimmer blades.
- 3** **SOFTLY TOUCH** the trimmer against the skin at a **RIGHT ANGLE** and slowly **TRIM DOWNWARDS**.
- 4** **PUSH** the on/off switch to the '**OFF**' position to **DISENGAGE** the trimmer blades
- 5** **PULL** the trimmer switch down to **CLOSE** the trimmer.



CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

■ STORAGE

Always store this appliance and cord in a moisture-free area. Do not wrap the cord of the charging adaptor around the appliance. Do not store in temperatures below 5°C or above 35°C.

■ DISASSEMBLY FOR CLEANING

This Shaver comes with remove components, allowing for a more thorough and detailed clean, or the ability to replace blunt and damaged 'Cutting Blades' or 'Foil Heads'.



1 **PRESS** the Head Removal Catch to **RELEASE** the Head Cover.



2 The Foil Heads and Cutting Blades are held in place by an Inner Frame. **PULL** the Inner Frame to **UNCLIP** it from the Head Cover.



3 **REMOVE** all three Foil Heads and Cutting Blades by **GENTLY PUSHING** them through the underside of the Head Cover with your fingers. The Cutting Blades and Foil Heads will separate very easily. Care should be taken not to damage these components.





4 USE the supplied Cleaning Brush to **REMOVE** any hair debris from the components and then **RINSE** under running water. Allow the components to dry naturally.



5 **RE-INSERT** the Foil Heads into the underside of the Head Cover, **ENSURING** that they are **SECURELY** in place. **ENSURE** that the slots at the side of each Foil Head align accordingly with the slots on the Head Cover.



6 **INSERT** the Cutting Blades onto the Foil Heads.



7 **CAREFULLY** PLACE the Inner Frame onto the Cutting Blades and press down **FIRMLY** to **CLIP** it into place. **GENTLY PULL** at the Inner Frame to check that it is locked **SECURELY**.



8 **CLIP** the Head Cover back into place.



9 **PUSH** the trimmer switch to **EXPOSE** the trimmer and **GENTLY BRUSH** away any excess hair or dirt. **PULL** the trimmer switch downwards to **CLOSE** after cleaning.



10 **PLACE** the plastic protective clip onto the head cover to protect the foils.





LOW VOLTAGE POWER ADAPTOR

This product is supplied with a low voltage power adaptor. To avoid damaging the product, do not use any adaptor other than that supplied.

■ ADAPTOR SPECIFICATIONS

- Input: 100-240v~50/60Hz
- Output: 5v DC 1000mA



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

REMOVING THE BATTERY

1 REMOVE any visible screws on the product to **OPEN** the casing.

2 REMOVE the casing to **EXPOSE** the battery.

3 CAREFULLY REMOVE the battery, **ENSURING** that any wires connected to the battery are cut **SEPARATELY** using a sharp blade. Do not cut the wires at the same time as this could short the battery and cause personal injury or damage to the product.





LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K