

*Paul*  
**anthony**<sup>®</sup>

---

OPERATING INSTRUCTIONS

---

Pro Series 2

# Shaver with Trimmer



---

MODEL: H5020

---

# thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- Dual precision titanium steel floating blades
- Rechargeable cordless operation
- Comfortable Ergonomic Grip
- LED Power Indicator
- Charge Time: 8hrs full charge, 30mins single use
- Usage Time: 35mins from full charge
- USB-C charging cable, cleaning brush and replacement foil / blades.

---

## SPECIFICATIONS

---

Operating Voltage: 5v DC

Requires: USB Charger 5v DC 1000mA minimum

Ambient Operating Temperature: 5°C - 23°C

**Note:** Do not operate if ambient temperature is outside this range as this may damage the product. This product uses a battery that is not replaceable and requires a USB charger or charging port that provides 5v DC 1000mA or above. A charging adaptor is not supplied with this product.

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

#### DO NOT

Do not use outside or in damp conditions.

- Before plugging into adaptor, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.

#### DO NOT

Do not use for any purposes other than the appliances intended use.



- To prevent damage to the power cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the power cord is damaged, do not use, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

 **DO NOT**

Do not use if any part of this appliance is damaged in any way.

 **DO NOT**

Do not use if the foils are damaged.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



**WARNING!** Do not use this appliance near bathtubs, showers or other vessels containing water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- Ensure that any power adaptor used does not get wet.
- Use, charge and store the appliances at a temperature between 5°C and 35°C.
- The rechargeable shaver battery contains substances that may pollute or be harmful to the environment. Always remove the battery before you discard the shaver. Dispose of the batteries at an official collection point for batteries or seek advice from your local authority.



---

## LOCATION OF CONTROLS

---



### A – Foil Heads

The foil heads protect the skin from being damaged by the titanium cutting blades.

### B – Twin Titanium Floating Blades

The blades oscillate rapidly to cut away at facial hair, giving a clean, smooth shave.

### C – On/Off Switch

This operates the motor to begin shaving. Ensure that the On/Off Switch is set to 'off' before commencing charging; otherwise the unit will not charge.

### D – Power & Charging Indicator LED

The LED will indicate when there is power to the unit and when the unit is charging.

### E – Charging Connection Point

Insert the USB-C charging cable into the bottom of the shaver and then inset the connection into a suitable USB charging device.

---

## OPERATION

---

### ■ BEFORE FIRST USE

1. Ensure the shaver is fully charged before use.
2. Check the foils are not damaged or dirty.
3. Avoid pressing into or striking the foils with any hard substances. Damaged foils can score your skin and create abrasions.



## ■ CHARGING



**1.** Ensure the on/off switch is set to down before attempting to charge.



**2.** Plug the USB cable supplied into any USB charging adaptor, socket or computer and then to the bottom of the shaver.



**3.** The charging indicator LED will light up to indicate that the shaver is charging. The LED indicator will NOT turn off when the battery is fully charged.



**4.** Leave the shaver to charge. It will take approximately 8 hours to fully charge.

**Note:** Do not use the shaver whilst charging. This may cause the charger to overheat.



## ■ SHAVING

Ensure the shaver is fully charged before commencing shaving.



**1.** Push the on/off switch to up to operate the shaver.



**2.** Place the shaver foil close to the skin and move fast in circular and straight motions. Stretching the skin with your free hand will help to straighten the hair, making it easier to cut.

## ■ TRIMMING



**1.** Push the trimmer switch up to expose the trimmer.



**2.** Push the on/off switch to the "ON" position to activate the trimmer blades.



**3.** Softly Touch the trimmer against the skin at a right angle and slowly trim downwards.



**4.** Push the on/off switch to the "OFF" position to disengage the trimmer blades.



**5.** Pull the trimmer switch to CLOSE the trimmer



---

## CLEANING AND CARE

---

### ■ MAINTENANCE

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

### ■ STORAGE

Always store this appliance and cord in a moisture-free area. Do not wrap the cord of the charging adaptor around the appliance. Do not store in temperatures below 5°C or above 35°C.

### ■ DISASSEMBLY FOR CLEANING

 
This Shaver comes with removable components, allowing for a more thorough and detailed clean, or the ability to replace blunt and damaged 'Cutting Blades' or 'Foil Heads'.



**1.** Gently squeeze the sides of the Head to release the Head Cover.




**2.** Each Foil Heads and Cutting Blades are held in place by an Inner Frame. Pull the Inner Frame catches to unclip them from the Head Cover.

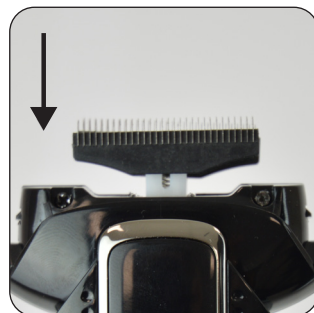


 **3.** Remove the Foils by carefully pushing the top of the foils which will unclick from the head. Then extract the foils from inside the head.




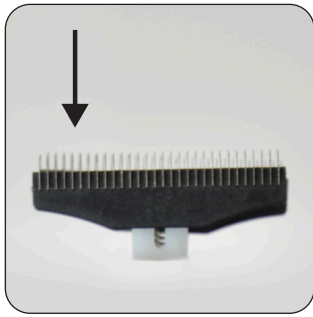

 **4.** Replace the foils by carefully pushing the cleaned or new foils inside the head unit until they click into place.

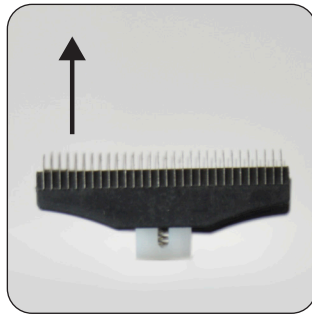

 **5.** Remove the blades by pulling them up from the main unit. Both blades are sat in a cradle and the whole cradle should be replaced.

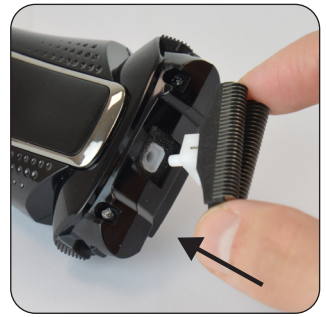

**6.** The new blades push back into the holder. It doesn't matter which way round.



**7.** Clip the Head Cover back into place.



**8.** Place the plastic protective clip onto the head cover to protect the foils.



## ■ REMOVING THE BATTERY

1. Remove the head unit and blades.
2. Remove the screw at the back of the unit and there are 2 screws either side of the head at the back of the unit. All 3 screws must be removed.
3. Prises open the casing to expose the battery compartment and circuitry.
4. There are two small screws on the PCB board, remove these and lift away to expose the battery.
5. Carefully remove the battery, ensuring that any wires connected to the battery are cut separately using a sharp blade. Do not cut the wires at the same time as this could short the battery and may cause personal injury or damage to the product.



---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



### ■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



---

*Paul*  
**anthony** CUSTOMER SERVICES

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)

To find out more about Paul Anthony products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86