
OPERATING INSTRUCTIONS

LITHIUM PRO 3

Shaver with Trimmer



MODEL: H5021

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 90 minute working time, with 2 hr max charge
- 10 mins use from 5 min charge
- Gentle, Precision Blade System
- Multi-directional dynamic flex heads
- Three rotary blades individually lift and cut each hair for the closest shave yet
- IPX5 Waterproof
- Wet or Dry use allows use with gel/foam shaving creams
- Interchangeable monoblade head provides stubble trimming to 0.2mm
- Monoblade™ has 10 silicone layers for skin protection
- Beard Trimming Comb is full adjustable from 0.5mm to 10mm thickness
- Full rubber textured grip
- USB chargeable (USB cable only supplied)
- Requires 5v DC 1.0A USB supply
- Includes a shaver stand, cleaning brush

SPECIFICATIONS

Rated Input: DC 5V (1000mA min) requires USB A or USB C

Battery: Lithium Ion 14500 3.2V 500mAh 1.60Wh

Extinguishing Agent: AVD, CO2, Sand, Dry Powder

Cable Length: 1.2m approximately, USB-A to USB-C

USB Charger not supplied with this product.

See Paul Anthony model number H9801BK for recommended USB Charger.

Dimensions: 6 x 6 x 16.5cm (approx.)

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

This product uses a Lithium-Ion battery that is not replaceable and requires a USB charger or charging port that provides 5v DC 1000mA or above.

A charging adaptor is not supplied with this product

IMPORTANT SAFEGUARDS AND PRECAUTIONS


SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.



- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- If the supply cord is damaged, do not use, it must be replaced by a special cord or assembly available from the manufacturer or service agent.
- Always unplug after charging.

- Animal clipper, hair clipper and appliances for manicure and pedicure can be used by children aged from 3 years under supervision.
- Shaver, wet shaver, animal clipper, hair clipper, and appliances for manicure and pedicure can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

 Suitable for cleaning under an open water tap and for use with wet gels and shaving foam.

DO NOT

- Do not use in the shower or bath.
- Do not operate this shaver whilst connected to the charging power source.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.

WARNING

- Keep the appliance dry
- Detach the hand-held part from the supply cord before cleaning it in water.
- Ensure that any power adaptor used does not get wet



LOCATION OF CONTROLS



A – Foil Heads

The foil heads protect the skin from being damaged by the titanium steel cutting blades.

B – Titanium Steel Cutting Blades

The blades oscillate rapidly to cut away at facial hair, giving a clean, smooth shave.

C – Head Cover

The head cover protects the blades when not in use. To remove the cover you must slide away and not pull off.

D – On/Off

This operates the motor to begin shaving. Ensure that the On/Off Switch is set to '0' before commencing charging. To turn On or Off, twist the handle.

E – Power & Charging Indicator LED

The LED will indicate when there is power to the unit and when the unit is charging. DO NOT use the shave whilst charging.

F – Charging Connection Point

Insert the USB charging cable into the bottom of the shaver and then inset the connection into a suitable USB charging device.

G – Monoblade™ Trimmer Head

The head easily replaces the Shaver Head and can be used as a Trimmer, a detailer or for a very close stubble shaver of 0.2mm from the skin

H – Beard Trimmer Attachment

The adjustable comb attachment clips directly onto the Monoblade™ Trimmer Head for easy trimming of beards and other facial hair at specific lengths. The adjustment can be locked at 20 different hair lengths, from 0.5mm to 10mm



OPERATION

■ BEFORE FIRST USE

1. Push the on/off switch to “ON” to operate the shaver.
2. Check the foils are not damaged or dirty.
3. Avoid pressing into or striking the foils with any hard substances. Damaged foils can score your skin and create abrasions.

■ CHARGING



1. Ensure the shaver is set to OFF before attempting to charge.



2. Plug the USB cable supplied into any USB charging adaptor, socket or computer and then to the bottom of the shaver.



3. The charging indicator LED will light up to indicate that the shaver is charging. The LED indicator will NOT turn off when the battery is fully charged.



4. Leave the shaver to charge. It will take approximately 2 hours to fully charge.

Note: Do not use the shaver whilst charging. This may cause the charger to overheat.



■ DRY SHAVING

Ensure the shaver is fully charged before commencing shaving.



1. Remove the Protection Cover by sliding over the head. DO NOT pull the cover from the head as this will also remove the blade cover.

2. Twist the on/off switch to up to operate the shaver.

3. Place the shaver foil close to the skin and move fast in circular and straight motions.



4. Care should be taken around moles and other skin blemishes.

5. Stretch the skin with your free hand will help to straighten the hair, making it easier to cut.

6. After shaving, Clean and then replace the Protective Cover to prevent foil damage.

■ USING SHAVING GEL/FOAM

Ensure the shaver is fully charged before commencing shaving.

1. Push the on/off switch to "ON" to operate the shaver.

2. Check the foils are not damaged or dirty.

IMPORTANT: Prior to first use, test the unit on a small area of your arm or leg. If you experience any sensitivity or allergic reaction, discontinue use immediately. Do not use this unit on sensitive or irritated skin.



■ ATTACHING THE MONOBLADE™ HEAD



1. With a firm grip on the shaver handle, pull the entire Shaving Head unit up and away from the handle.



2. Now locate the Monoblade™ head into the slot and firmly push down until it snaps into place.

■ MONOBLADE™ STUBBLE SHAVING



1. Place the flat of the head against the skin and slowly slide through the hair against the direction of growth. This will cut to 0.2mm leaving a very fine stubble.



2. Regularly turn off and rinse blade under a warm water tap to clean blade.



3. Do not tap blade on sink bowl as this may damage the blade.



■ MONOBLADE™ STYLING & EDGING



- 1.** Hold the unit with the back of the blade facing you with no comb attached.
- 2.** Start with the blades resting lightly on the skin, using motions towards the edge of the beard/moustache line to the desired locations in the facial area.
- 3.** Shape as desired.

■ ATTACHING AND REMOVING THE ADJUSTABLE COMB TO THE MONOBLADE™

- 1.** Place comb attachment over the blade and click it into place at the back of the head unit.
- 2.** Adjust the length of the comb by turning the wheel anti-clockwise to extend the length from 0.5mm to 10mm as indicated on the wheel in 0.5mm steps, or clockwise to reduce the length.
- 3.** Once the length is set, the comb will lock into place until the wheel is moved.
- 4.** To remove the comb, minimise comb length to minimum and turn product off. Unclip by pulling comb away from back of unit and lift away from the blade.

Always comb your beard or moustache with a fine comb before you start trimming.



■ TRIMMING YOUR BEARD



1. Attach the adjustable comb onto the unit as described above.



2. If trimming for the first time, it is advisable to start trimming using a longer setting before decreasing the length, in order to achieve your desired beard length.



3. Turn the unit on.



4. Place the flat of the comb against the skin and slowly slide through the hair against the direction of growth.



5. Repeat from different directions as necessary, to ensure an even trim.



6. If hair builds up inside the comb during the trimming process, switch the unit off, pull off the comb and clean the hair out of the comb to avoid clogging.

■ STYLE GUIDE

- 0.5mm - 1.5mm - Suitable for 5 O'clock shadow and short stubble
- 2mm - 5.5mm - Suitable for trimming short beards
- 6mm+ - Suitable for tidying Long Beards



■ ATTACHING THE SHAVING HEAD

1. With a firm grip on the shaver handle, pull the entire Monoblade™ Head unit up and away from the handle.
2. Ensure the Protective Cover is placed onto the Shaver Head to prevent any damage to the blades when locating.
3. Now locate the Shaver head into the slot and firmly push down until it snaps into place.

CLEANING AND CARE

■ MAINTENANCE

This shaver has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

■ STORAGE

Always store this shaver in a moisture-free area. Do not store in temperatures below 5°C or above 35°C.

■ SHAVER & MONOBLADE HEAD CLEANING

The Shaver Head and Monoblade Head can be cleaned under a running tap or use the supplied brush to remove any hair debris.

■ SHAVER HEAD - DISASSEMBLY FOR DETAILED CLEANING OR CHANGING BLADES/FOILS

This Shaver comes with removable “Head Cover”, allowing for a more thorough and detailed clean, or the ability to replace blunt and damaged ‘Cutting Blades’ or ‘Foil Heads’.



1. Slide off the Protection Cover.



2. Gently prise and lift off the Head Cover from the main body of the Shaving Head.




3. Each Foil Heads and Cutting Blades are held in place by an Inner Frame. Pull the Inner Frame catches to unclip them from the Head Cover.



4. Remove the Foils by carefully pushing the top of the foils which will unclick from the head. Then extract the foils from inside the head.



5. Replace the foils by carefully pushing the cleaned or new foils inside the head unit until they click into place.

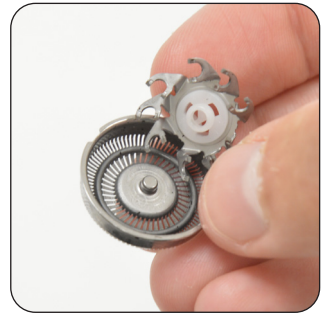

6. Remove the blades by pulling them up from the main unit. Both blades are sat in a cradle and the whole cradle should be replaced.



7. The new blades push back into the holder. It doesn't matter which way round.



8. Clip the Head Cover back into place on the Shaving Head.



9. Slide back the Protective Cover.



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

Paul
anthony CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England. WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86