



---

## OPERATING INSTRUCTIONS

---

MONOBLADE

# Shaver & Beard Trimmer



---

MODEL: H5022

---

# thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- 30mm Wide Double Edged Shaving Head
- 0.3mm hair depth cut
- 3x Stubble / Beard Comb Guides (1mm, 3mm, 5mm)
- 90 MIN Long Life Run Time
- 2hrs Ultra Fast Direct Charge Time
- 5hrs Induction Case Charging Time
- 45 Acute Angle Blade
- IPX7 Wet of Dry Use
- Spare Replacement Shaving Head
- USB-C Rechargeable Operation
- Ergonomic Design

---

## SPECIFICATIONS

---

This product requires a USB-C Power Source.

Input Voltage: 5v DC 1000mA

Waterproof: IPX7

Motor Voltage: DC 3.7v

Battery: 600mAh Lithium Battery

Charging Time: 120 mins direct or 5hrs by induction

Working Time: 90 mins (approx.)

This product uses a Lithium-Ion battery that is not replaceable and requires a USB charger or charging port that provides 5v DC 1000mA or above.

A charging adaptor is not supplied with this product.

Ambient Operating Temperature: 5°C - 23°C

**Note:** Do not operate if ambient temperature is outside this range as this may damage the product.

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance




with the rated electrical parameters shown on the rating label.

- This appliance should never be left unattended when plugged into a power source, except when charging.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- Animal clipper, hair clipper and appliances for manicure and pedicure can be used by children aged from 3 years under supervision.
- Shaver, wet shaver, animal clipper, hair clipper, and appliances for manicure and pedicure can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

 IPX7 Suitable for use in a bath or shower. This wet & dry shaver can be used for wet shaving using shaving lather or for dry shaving. You can use this shaver in the shower and clean with water.

#### DO NOT

- Do not use if the appliance is damaged or malfunctions.
- Do not use for any purposes other than the appliances intended use.
- Do not twist or kink the cable, or wrap it around the appliance.
- Do not plug or unplug the appliance with wet hands.

#### WARNING

- Only use an approved USB 5v Power source.
- Detach the appliance from the supply cord before cleaning it with water
- Make sure the power adaptor does not get wet

- Use, charge and store the appliance at temperatures between 5°C and 35°C.
- The rechargeable battery contains substances that may pollute or be harmful to the environment. Always remove the battery before discarding the appliance. Dispose of the batteries at an official collection point for batteries or seek advice from your local government authority.



## LOCATION OF CONTROLS



1. Flexible dual blade Monoblade Head

2. On/Off button

3. Charging indicator light

4. 3 x guide combs(1 , 3 , 5mm)

5. Replacement Monoblade head

6. Cleaning brush

7. Type C plug

8. USB plug

9. Induction charging box(Can store unit and accessories)



[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)

---

# OPERATION

---

## ■ CHARGING VIA TRAVEL CASE

The travel case can be used as an induction charging station.

1. Plug the case directly into a USB Power Source.
2. Place the Monoblade Trimmer/Shaver into the case. No need to close the lid.
3. The LED on the Monoblade will slowly flash to indicate charging.
4. When fully charged, approximately 5hrs, the LED will stop flashing.
5. The Monoblade can be kept inside the Travel Case even after charging has finished and whilst the case remains plugged into the power source.

## ■ CHARGING DIRECTLY

The Monoblade can be charged directly vis the USB-C cable supplied.

This is a quicker charging process than the induction method.

1. Plug the USB-C cable directly into the Monoblade.
2. The LED on the Monoblade will slowly flash to indicate charging.
3. When fully charged, approximately 2hrs, the LED will stop flashing.

## ■ LOW BATTERY

The LED on the Monoblade will start to flash when not connected to the power source to indicate a low battery of less than 10%.

## ■ HEAD REMOVAL

1. The Monoblade comes with a spare head in case of wear & tear or damage.
2. Make sure that the device is turned off.
3. To take off the head, grasp it with one hand, grasp the device body with the other hand and rotate anti-clockwise (looking at the front part of the trimmer – as shown in the picture to the right).
3. Take the head off.



To install the Head, perform the actions for removal in reverse order.  
Make sure the Head is the correct way round before using.



## ■ HOW TO USE

Switch on by pressing the on/off switch.

Always comb your beard or moustache with a fine comb before you start trimming.

**IMPORTANT:** Prior to first use, test the unit on a small area of your arm or leg. If you experience any sensitivity or allergic reaction, discontinue use immediately. Do not use this unit on sensitive or irritated skin.

## ■ ATTACHING AND REMOVING THE BEARD COMB GUIDES

1. Place comb attachment over the blade and click it into place at the back of the head unit.
2. The Monoblade comes with 3 different depths of Combs, 1mm for Shadow, 3mm and 5mm for a clean Beard look.
3. To remove the comb, turn Monoblade off. Unclip by pulling comb away from back of unit and lift away from the blade.

## ■ DRY SHAVING

1. For a clean shaven look, use the unit without the comb attachment.
2. The Monoblade will cut to 0.3mm whilst lifting the hair follicle and does not cause skin burn like normal shavers.
3. Place the flat of the head against the skin and slowly slide through the hair against the direction of growth.
4. Regularly turn off and rinse blade under a warm water tap to clean blade.
5. Do not tap blade on sink bowl as this may damage the blade.

## ■ USING SHAVING GEL

1. The Monoblade is IPX7 rated and waterproof.
2. Follow same instructions as Dry Shaving if using shaving gel or foam.
3. After use, rinse blade under a warm water tap to clean away any excess gel and debris. We recommend re-oiling the blades after cleaning. Place a few drops of cutter or sewing machine oil onto the blades, allow oil to soak before wiping off excess.

## ■ TRIMMING YOUR BEARD

1. Attach a comb guide onto the Monoblade as described above.
2. If trimming for the first time, it is advisable to start trimming using a longer setting before decreasing the length, in order to achieve your desired beard length.
3. Turn the unit on.
4. Place the flat of the comb against the skin and slowly slide through the hair against the direction of growth.
5. Repeat from different directions as necessary, to ensure an even trim.



6. If hair builds up inside the comb during the trimming process, switch the unit off, pull off the comb and clean the hair out of the comb to avoid clogging.

**1mm** – Suitable for 5 O'clock shadow and short stubble

**3mm** – Suitable for trimming short beards

**5mm** - Suitable for tidying Long Beards

## ■ USING SHAVING GEL

1. Hold the unit with the back of the blade facing you with no comb attached.
2. Start with the blades resting lightly on the skin, using motions towards the edge of the beard/moustache line to the desired locations in the facial area.
3. Shape as desired.

---

## CLEANING AND CARE

---

Do not clean or perform any maintenance whilst the unit is being charged.

1. Press the release switch on the back of the unit to remove the head.
2. Using supplied cleaning brush remove any debris from inside the head and around the cutting teeth.
3. Rinse the head ONLY under a running tap and then allow to air dry.
4. After cleaning, add oil to the teeth to keep the Monoblade in perfect condition.

---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



### ■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



---

*Paul*  
**anthony** CUSTOMER SERVICES

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Paul Anthony products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86