

OPERATING INSTRUCTIONS

Waterproof
**6 in 1 Grooming
Kit**



MODEL: H5116GM

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- On/Off switch (1)
- Full size trimmer guide (2)
- Precision trimmer guide (3)
- Nose & ear trimmer attachment (4)
- Micro shaver attachment (5)
- 2 guide combs (6)
- Charging indicator light (7)
- Charging adaptor (8)
- Charging base stand (9)
- Cleaning brush (10)
- Lubricating oil (11)
- Head removal button (12)



IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.



WARNING! Do not use this appliance near bathtubs, showers or other vessels containing water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current of 30mA is advisable in the electric circuit supplying the bathroom. Ask your installer for advice.
- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the water. The appliance should then be checked by a qualified electrician before use again!

OPERATION

MAINS ADAPTOR

This appliance is supplied with a Mains Adaptor. Only the adaptor supplied must be used to charge this appliance.

MAINS OPERATION

To use by mains operation, keep the adaptor attached to the trimmer and plugged into the mains wall socket.

CHARGING / RECHARGING

Before using the trimmer for the first time, charge for a minimum of 16 hours. The charging cord can be put in the stand.

1. Plug the transformer into the mains.
2. Place the trimmer in the stand in correct direction with silk print side. Always check that the indicator light is on when the trimmer is in the stand.
3. When fully charged, you will be able to use the trimmer for up to 45min.

The charging cord also can put directly into the unit for charging.

HOW TO USE

TO CHANGE ATTACHMENTS

Press the orange head removal button (12) and pull off the head. To replace an attachment simply push on until a click is heard.

USING THE MICRO SHAVER (Diagram 1)

Attach the micro shaver attachment

Hold the unit so the shaver gently touches your face in a 45 degree angle.

Use short, well-controlled movements to shaver around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

NOTE: The micro shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of our electric shavers.

ATTACHING AND REMOVING THE GUIDE COMBS

With the trimmer blade facing away from you. Slide the guide comb on top of the full size trimmer attachment and click into position.

With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

TRIMMING EDGE OF SIDEBURNS (Diagram 2)

Hold the personal groomer with full size trimmer attachment facing you.

Start with edge of sideburn, and with the trimmer blades resting lightly against your skin. Use motions towards edge of sideburn line to trim to desired locations in facial area.

TRIMMING THE NAPE OF YOUR NECK (Diagram 3 & Diagram 4)

Note: You will need a hand mirror for this operation if performing it alone.

Before you begin, attach the full size trimmer attachment. Then attached to the precision trimmer attachment Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering

 
the roots of the hairs you are lifting to prevent accidental removal by the personal groomer.
 Using your other hand, hold the personal groomer to the base of your neck with the cutting unit facing up, and move the personal groomer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
 Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

TO REMOVE HAIR FROM NOSE AND EAR (Diagram 5 & 6)

Attach the nose trimmer attachment
 Insert the personal groomer gently into nostril or ear
 Gently move the unit in and out of the nostril or ear and at the same time rotate
 Avoid inserting the cutting unit more than 6mm into your nostril or ear.



TO REMOVE HAIR FROM EYEBROWS (Diagram 7)

Attach the nose trimmer attachment
 Gently guide cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
 To remove the hairs completely lower onto the skin and move over desired area
 Use slow and well-controlled movements.

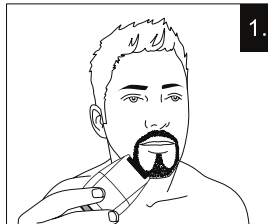


ATTACHING AND REMOVING THE TRIMMER COMB ATTACHMENT

  NOTE: Always ensure the unit is switched off before changing any attachments.
 To remove, hold the personal groomer with one hand and turn the trimmer head anti-clockwise with the other.
 To attach, hold the personal groomer with one hand and turn the trimmer head clockwise with the other.

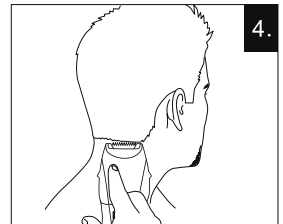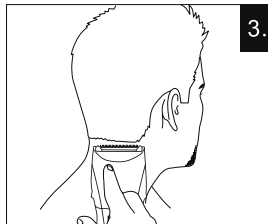


TIPS FOR BEST RESULTS

 Beard ,moustache and sideburn hairs should be dry
 Avoid using lotions before using your personal groomer. Comb your hair in the direction that it grows

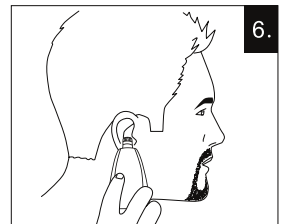

Remove trimmer comb attachment if you are:

 1. Defining hairline edges such as sideburns.
2. Trimming the nape of your neck,
3. Trimming your beard line on front of neck.

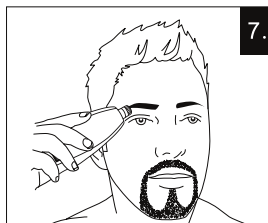

CLEANING AND CARE

MAINTENANCE & CLEANING

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

STORAGE

Always store this appliance and cord in a moisture-free area.

Do not wrap the cord of the charging adaptor around the appliance.

Do not store in temperatures above 35c.

CLEANING

Remove the attachments after each use. Brush the blades and attachment using the cleaning brush to remove any hair

Cleaning the trimmer blades regularly will maintain their optimal performance.

Alternatively rinse under a running tap of water.

SPECIFICATIONS:

Waterproof IPX: IV

Power Source: AC220-240V 50Hz

Power Consumption: 3W

Motor Voltage: DC 2.4V

Charging Time: 8 hours

Battery Capacity: 600 mAh ×2

WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at www.lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K