

Paul
anthony[®]

OPERATING INSTRUCTIONS

MonoBlade

Lithium Hybrid Trimmer Shaver



MODEL: H5119

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Monoblade tackles any length of hair from full beard to close stubble shave in one quick and easy step. Perfect for men with beards, goatees, stubble or loves to be creative.
- Shaves just above the skin level, which reduces razor burn and ingrown hairs.
- Double-sided blades stays sharp for consistent cutting
- High power long life Lithium rechargeable battery
- Waterproof IPX5 for Wet or Dry use
- Ultra-fast charging time, 10 mins of use from 5 min charge
- Fully charged in 1.5hrs using a standard USB power source
- Working time from full charge: 60mins run time approx.
- Easy lockable and fully adjustable beard trimmer comb from 0.5mm to 10mm in 20 steps
- 45 degree acute angle blade greatly enhances the sharpness
- USB charging cable included. Simply plug into any USB power source
- Accessories: cleaning brush and oil

SPECIFICATIONS

Charging Time: 1.5hrs to maximum capacity

Usage Time: 60 minutes from full charge

This product uses a Lithium-Ion battery that is not replaceable and requires a USB charger or charging port that provides 5v DC 1000mA or above.

A charging adaptor is not supplied with this product.

Ambient Operating Temperature: 5°C - 23°C

Note: Do not operate if ambient temperature is outside this range as this may damage the product.

IMPORTANT SAFEGUARDS AND PRECAUTIONS

READ & SAVE THESE INSTRUCTIONS

- For Household Use only.
- Before plugging into mains socket, check whether supply line voltage and current rating are in



compliance with the rated electrical parameters shown on the rating label.

- This appliance should never be left unattended when plugged into a power source, except when charging.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.



Suitable for cleaning under an open water tap.

DO NOT

- Do not use if the appliance is damaged or malfunctions.
- Do not use for any purposes other than the appliances intended use.
- Do not twist or kink the cable, or wrap it around the appliance.
- Do not plug or unplug the appliance with wet hands.

WARNING

- Not suitable for use in Bathtubs or Showers.
- Only use an approved USB 5v Power source.
- Detach the appliance from the supply cord before cleaning it with water.
- Make sure the power adaptor does not get wet.

- Use, charge and store the appliance at temperatures between 5°C and 35°C.
- The rechargeable battery contains substances that may pollute or be harmful to the environment. Always remove the battery before discarding the appliance. Dispose of the batteries at an official collection point for batteries or seek advice from your local government authority.



LOCATION OF CONTROLS



A - On/Off Switch

B - Blade

C - Adjustable Comb Guide (0.5mm – 10mm)

D - LED Charging Indicator

E - USB Charging Cable

F - Head Ejection Button

CHARGING YOUR TRIMMER SHAVER

Note: It is recommended to fully charge this appliance for 2 hours before using for the first time.

Ensure the Trimmer Shaver is turned off.

1

Connect the unit to the USB cable (located at the bottom of the handle)

2

Connect the USB plug to a powered USB charging port.

The unit will not operate during the charging process. To preserve the life of the battery, it is advised to run the Trimmer Shaver empty every 6 months and then fully charge.

DO NOT

Do not allow the unit to be connected to a charger for more than 12 hours.

The LED charging indicator illuminates steady RED when charging and when fully charged the LED is switched off.



INSTRUCTIONS FOR USE

Switch on by pressing the on/off switch.

Always comb your beard or moustache with a fine comb before you start trimming.

IMPORTANT: Prior to first use, test the unit on a small area of your arm or leg. If you experience any sensitivity or allergic reaction, discontinue use immediately. Do not use this unit on sensitive or irritated skin.

■ ATTACHING AND REMOVING THE ADJUSTABLE COMB

- 1** Place comb attachment over the blade and click it into place at the back of the head unit.
- 2** Adjust the length of the comb by turning the wheel anti-clockwise to extend the length from 0.5mm to 10mm as indicated on the wheel in 0.5mm steps, or clockwise to reduce the length.
- 3** Once the length is set, the comb will lock into place until the wheel is moved.
- 4** To remove the comb, minimise comb length to minimum and turn product off. Unclip by pulling comb away from back of unit and lift away from the blade.

■ DRY SHAVING

- 1** For a clean shaven look, use the unit without the comb attachment.
- 2** Place the flat of the head against the skin and slowly slide through the hair against the direction of growth.
- 3** Regularly turn off and rinse blade under a warm water tap to clean blade.
- 4** Do not tap blade on sink bowl as this may damage the blade.

■ USING SHAVING GEL

- 1** Follow same instructions as Dry Shaving if using shaving gel or foam.
- 2** After use, rinse blade under a warm water tap to clean away any excess gel and debris.

We recommend re-oiling the blades after cleaning. Place a few drops of cutter or sewing machine oil onto the blades, allow oil to soak before wiping off excess.



■ TRIMMING YOUR BEARD

- 1** Attach the adjustable comb onto the unit as described above.
- 2** If trimming for the first time, it is advisable to start trimming using a longer setting before decreasing the length, in order to achieve your desired beard length.
- 3** Turn the unit on.
- 4** Place the flat of the comb against the skin and slowly slide through the hair against the direction of growth.
- 5** Repeat from different directions as necessary, to ensure an even trim.
- 6** If hair builds up inside the comb during the trimming process, switch the unit off, pull off the comb and clean the hair out of the comb to avoid clogging.

0.5mm – 1.5mm – Suitable for 5 O'clock shadow and short stubble

2mm – 5.5mm – Suitable for trimming short beards

6mm+ - Suitable for tidying Long Beards

■ STYLING & EDGING

- 1** Hold the unit with the back of the blade facing you with no comb attached.
- 2** Start with the blades resting lightly on the skin, using motions towards the edge of the beard/ moustache line to the desired locations in the facial area.
- 3** Shape as desired.

CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

WARNING

Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.



■ STORAGE

Failure to comply could cause damage to the product.

⊘ DO NOT

Do not wrap cord around appliance.

Do not store in temperatures outside of 5°C - 23°C.

■ CLEANING

The exterior surface of the appliance should be cleaned with a clean damp cloth only. Brush away any hair debris from the blades and comb attachment. Rinse under a warm water tap to assist in cleaning.

The blade can be removed by pushing the Red Ejection Button up and then pulling the blade gently away from the head of the unit for easier cleaning and it is replaced by pushing back into the head. The blade is self-sharpening and does not require replacing. It will last the life of the product if properly maintained.

We recommend re-oiling the blades after cleaning. Place a few drops of cutter or sewing machine oil onto the blades, allow oil to soak before wiping off excess.

⊘ DO NOT

Do not tap blade on sink bowl as this may damage the blade.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ DISPOSAL END OF LIFE AND BATTERY DISPOSAL

The Lithium Ion rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of the official waste collection points. Do not dispose of batteries or products with normal household waste.



■ REMOVING THE BATTERY

The battery cannot be replaced. Lithium-ion batteries can explode, catch fire and/or cause burns if disassembled, damaged or exposed to water or high temperatures. Do not short circuit.

Battery Removal:

- 1** Locate the screws on the base of the unit.
- 2** Remove the screws and pry open the unit to expose the battery.
- 3** Carefully cut the 2 wires one at a time using a sharp blade and remove the battery.

Note: *it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.*

Paul
anthony

CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.paulanthonystyling.co.uk or www.lloytron.com

WARRANTY

A manufacturer's warranty is available with this product which requires registration within the first 28 days of purchase to activate. Follow the instruction on the Warranty Card supplied with this product.

Your statutory rights are not affected.

Consumables are excluded.

The model number and batch number of this product can be found on the rating plate of the appliance.



Distributed by Lloytron Plc, Laltex House, Leigh, England WN7 3XH