
OPERATING INSTRUCTIONS

Lithium Pro

Cord/ Cordless Hair Clipper



MODEL: H5122SV

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Lithium Ion battery –high power long life battery with LED charging indicator
- Self Sharpening Ceramic Blades – Oscillating ceramic blades allow a snag-free cut
- Usage Time – Cordless operation lasting 90mins working time
- Ultra Fast Charging Time – Fully charged in less than 2 hours. 15 min quick charge
- Precision Trimmer - 1mm to 18mm Cutting Length
- Precision Taper Adjustment – Cuts closer for a more detailed and stylish finish from 1mm to 1.9mm
- Wet or Dry - IPX7 rated – Designed to reduce clogging when cutting wet hair or simply rinse the blades under the water tap to clean
- 6x interchangeable straight cutting guides – 3mm, 6mm, 9mm, 12mm, 15mm, 18mm
- 2x feathering cutting guides – Left and right tapered feathering guide
- Cord or Cordless Operation – 1.8m cord length for versatile use
- Universal Voltage – Use within any country with voltage ranging from 110v – 240v.
- Accessories - Includes Charging Stand, Comb and Cleaning Brush, plus FREE Barbers Apron

SPECIFICATIONS

This product is supplied with a low voltage power adaptor. To avoid damaging the product do not use any other adaptor other than that supplied.

Input Voltage: 110-240v~50/60Hz 0.2A max

Output Voltage: 5.0v DC 600mA

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc



⊘ DO NOT

Do not use for any purposes other than the appliances intended use.

- This product is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the power cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the power cord is damaged, do not use. Check before each use!

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

⊘ DO NOT


Do not use if any part of this appliance is damaged in any way.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

• Animal clipper, hair clipper and appliances for manicure and pedicure can be used by children aged from 3 years under supervision. Shaver, wet shaver, animal clipper, hair clipper, and appliances for manicure and pedicure can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

 


 Suitable for cleaning under an open water tap.

Warning: Detach the hand-held part of the supply cord before cleaning it in water.

- Should this appliance fall into water, pull the plug out of the wall immediately. Do not place your hand in the water. The appliance should then be checked by a qualified electrician before use again!
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- Make sure the adaptor does not get wet.
- Only use the power adaptor and accessories supplied
- Use, charge and store the appliances at a temperature between 5°C and 35°C

LOCATION OF CONTROLS

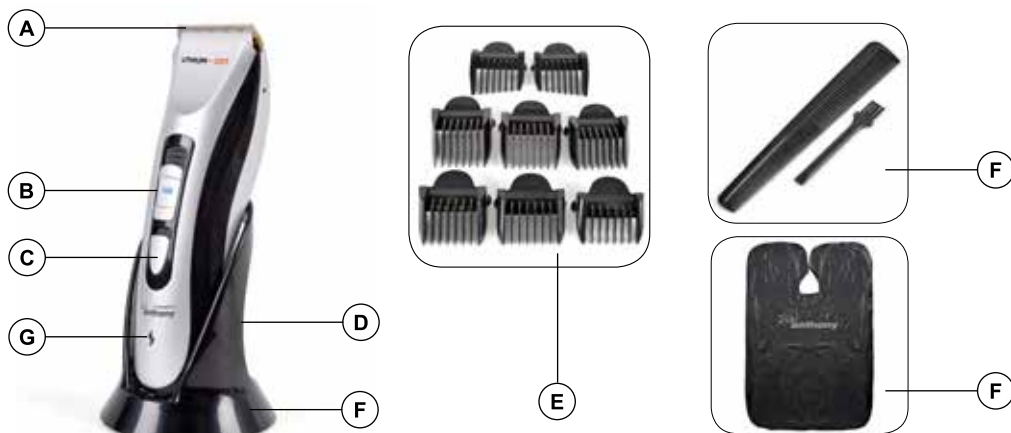

A – Self Sharpening Ceramic Blades

Oscillating ceramic blades allow a snag-free cut.

B – Precision Taper Adjustment

Cuts closer for a more detailed and stylish finish from 1mm to 1.9mm.

C – On/Off Switch

Switching the on/off switch to “on” operates the motor to activate the blades.

D – Cord or Cordless Operation

1.8m cord length for versatile use.

E – Interchangeable comb guide attachments

#1 - 3mm, #2 - 6mm, #3 - 9mm, #4 - 12mm, #5 - 15mm, #6 - 18mm, Left Feather and Right Feather guides for a variety of lengths and styles.

F – Accessories

Includes barber’s comb, cleaning brush, barbers apron and charging stand.

G – Charging LED Light

Illuminates when charging.



OPERATION

■ BEFORE USE

Note: DO NOT cut hair when hair is wet since this can snag and pull at the hair. Always towel dry before starting to cut hair.

1 ENSURE the clipper is plugged into a power socket or is fully charged. For first use, always fully charge.

2 INSPECT clipper and **ENSURE** it is free from hair and dirt.

3 ATTACH the correct guide comb attachment for desired hair length.

 
4 ENSURE guide comb is **ATTACHED FULLY**, before cutting any hair.

5 COMB hair before cutting, to **ENSURE** it is tangle free.

6 The clipper is fitted with an adjustable taper lever, which will gradually change the closeness of your cut without changing guide combs.

Note: Cut the hair gradually using short strokes only to work gradually over the entire head. Always take a little hair at a time. You can always trim off additional hair later.

■ HOW TO USE

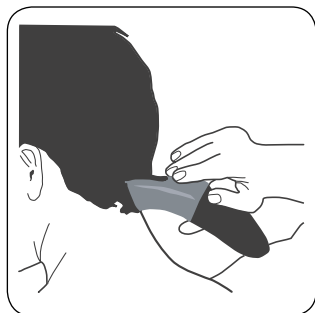


1 NAPE OF NECK

1) Start **UPWARD** from nape of neck using a 3mm or 6mm Guide Comb.

2) **HOLD** the clipper with the cutting edge pointed up and begin to **CUT HAIR**. Start at the centre of the head at the base of the neck.

 3) **HOLD** the clipper **LIGHTLY** against the head with the comb teeth pointing **UPWARD**. **SLOWLY LIFT** the clipper, working **UPWARDS** and **OUTWARDS** through the hair, **TRIMMING** just a little at a time.

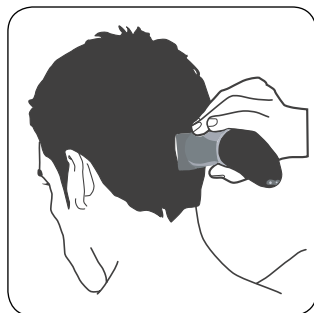

2 BACK OF HEAD

1) With the 12mm Guide Comb, **CUT** the hair at back of the head.



3 SIDE OF THE HEAD

1) With the 3mm or 6mm Guide Comb, **TRIM SIDEBURNS**.

2) Then change to longer 9mm Guide Comb to **CUT SIDE OF HEAD**.





4 TOP OF HEAD

- 1) With the 12mm Guide Comb, **CUT HAIR** at the top of the head against the direction in which the hair naturally grows.
- 2) For longer hair, use without Guide Comb. **LIFT HAIR** on top of head with a hand comb. **CUT OVER** the hand comb with the hair lifted or **HOLD** between the fingers and cut of desired length.



5 FINISHING TOUCHES

- 1) **USE** the clipper **WITHOUT** attachment comb for close trimming around the base and sides of the neck and around the ears.
- 2) To produce clean straight lines at the sideburns, **REVERSE THE CLIPPER**. Press the clippers at **RIGHT ANGLES** to the head, tip the blades lightly touching the skin and then work **DOWNWARDS**.

CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

■ STORAGE

Always store this appliance and cord in a moisture-free area. Do not wrap the cord around the appliance. Do not store in temperatures below 5°C or above 35°C.

■ CLEANING

Remove any hair debris using cleaning brush after each use.

⊘ DO NOT

Do not submerge unit in water or any other liquid.

Use cutter oil or sewing machine oil on blades and operate for 5 seconds.



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The Lithium Ion rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

■ REMOVING THE BATTERY

The battery cannot be replaced. Lithium-ion batteries can explode, catch fire and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

To remove the battery, open the casing of the clipper, slide out the battery and carefully cut either wire on each terminal.

Note: *it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.*





LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Paul Anthony products please visit our website at www.paulanthonystyling.co.uk
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K