

---

OPERATING INSTRUCTIONS

---

Pro Series T3

# Multi-purpose Neckline, Facial & Body Trimmer



---

MODEL: H5123L

---

# thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

## FEATURES

- High Carbon Stainless Steel Blades
- 25mm Wide Precision Trimmer
- Adjustable comb guide with 5 setting 2, 4, 6, 8 & 10mm included
- 2x Detail Trimming guide included No1 (3mm) and No2 (6mm)
- LCD Display
- Battery Power Left %
- 90min Long Life Run Time
- 2hrs Full Charge Time
- Hair Accessories
- USB-C Rechargeable Operation
- Ergonomic Design

## SPECIFICATIONS

This product requires a USB-C Power Source.


Input Voltage: 5v DC 1000mA  
Waterproof: IPX0  
Motor Voltage: DC 3.7v

Battery: 600mAh Lithium Battery 3.7v  
Charging Time: 2hrs  
Working Time: 90min (approx.)


## IMPORTANT SAFEGUARDS AND PRECAUTIONS

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

 **DO NOT**  
Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

 **DO NOT**  
Do not use for any purposes other than the appliances intended use.



- This product is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the power cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the power cord is damaged, do not use. Check before each use!
- The supply cord can be replaced by an equivalent USB-C Cable.

#### **DO NOT**

Do not use if any part of this appliance is damaged in any way.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.



**WARNING!** Do not use this appliance near bathtubs, showers or other vessels containing water.

#### **DO NOT**

Do not use if any part of this appliance is damaged in any way.

#### **WARNING**

- Keep the appliance dry.
- Do not use this appliance near bathtubs, showers or other vessels containing water.
- Detach the hand-held part of from the supply cord before cleaning it with water.
- Make sure the power adaptor does not get wet.
- For purposes of recharging the battery only use detachable supply units that meet minimum requirements specified in specifications.

- Use, charge and store the appliance at temperatures between 5°C and 23°C.
- The rechargeable battery contains substances that may pollute or be harmful to the environment. Always remove the battery before discarding the appliance. Dispose of the batteries at an official collection point for batteries or seek advice from your local government authority.
- This appliance contains batteries that are non-replaceable and are only replaceable by skilled persons.



---

## LOCATION OF CONTROLS

---

A – Blade

B – Charging Indicator Light

C – Adjustable Comb

D – On/Off Switch

E – Cleaning Brush

F – USB Cord

G – Lubricating Oil



---

## OPERATION

---

### ■ CHARGING BATTERY STATUS INDICATIONS

The Trimmer should be fully charged before each use.

Place USB-C charging cable into the Trimmer and then into a 1000mAh USB Power Source.

**DO NOT**

DO NOT USE the Trimmer whilst charging.

The LCD Display shows the Power Left % in the battery as a full charge.

Charging the battery will usually take a maximum of 2hrs to fully charge and a RED plug will be shown to indicate it is charging. It will show “100%” when fully charged and the indicator will change to GREEN.

The percentage charge will be displayed as it continually charges.

Working time is approximately 90 minutes from a full charge.



[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)

## ■ SHAVING

**IMPORTANT:** Prior to first use, test the trimmer on a small area of your arm or leg. If you experience any sensitivity or allergic reaction, discontinue use immediately. Do not use this trimmer on sensitive or irritated skin.

1. Turn the Trimmer 'On' by switching the 'On/Off' switch to the 'On' position.
2. Hold the Trimmer at a 45 degree angle to the desired area and trim in the opposite direction of your hair growth.
3. Continue to trim until the hair is removed.

**Note:** For the cleanest hair removal, pull your skin taut with one hand while trimming.



### **WARNING**

Keep out of reach of children.



## ■ OPERATION

1. Plug into a USB Powersource.
2. Set Comb to correct depth.
3. Press ON/OFF button to turn on the Trimmer.
4. Press ON/OFF button to turn OFF.

## ■ USING THE COMB ATTACHMENT

Included with your trimmer is an adjustable comb attachment for trimming eyebrows/moustaches/beards etc. for 2, 4, 6, 8 and 10mm.

1. Ensure the Trimmer is turned 'off'.
2. Slide the appropriate side of the Comb attachment onto the Trimmer head. Be sure to align the grooves on the Comb attachment with the grooves on the Trimmer head.
3. You can adjust the Comb attachment by sliding the attachment up and down to determine the length of the hair cut.
4. To remove the Comb attachment, turn off the power, hold the upper centre of the unit and simply slide the Comb off.

There are 2 additional trimming guides with fixed 3mm and 5mm settings.

To Guarantee long life of the rechargeable battery, please observe the following guidelines.

- I) Charge and store the shaver at temperatures between 5°C and 23°C.
- II) Do not allow the shaver to be connected for over 20 hours to the power supply.

**IMPORTANT:** Prior to first use, test the trimmer on a small area of your arm or leg. If any sensitivity or allergic reaction occurs, discontinue use immediately. Do not use this trimmer on sensitive or irritated skin.



---

## CLEANING AND CARE

---

### ■ MAINTENANCE

This appliance has been designed to operate over a long period of time with minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

### ■ STORAGE

Always store this appliance and cord in a moisture-free area. Do not wrap the cord of the charging adaptor around the appliance. Do not store in temperatures below 5°C or above 23°C. Failure to comply could cause damage to the product.

### ■ CLEANING

Remove any hair debris using cleaning brush after each use. Wipe appliance with a slightly damp cloth and dry with towel.

#### DO NOT

Do not submerge unit in water or any other liquid.

Use cutter oil or sewing machine oil on blades and operate for 5 seconds.



---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



### ■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

### ■ REMOVING THE BATTERY

The battery cannot be replaced. Lithium-ion batteries can explode, catch fire and/or cause burns if disassembled, damaged or exposed to water or high temperatures. To remove the battery, open the casing of the clipper, slide out the battery and carefully cut either wire on each terminal.

**Note:** *it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.*



---

*Paul*  
**anthony** CUSTOMER SERVICES

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Paul Anthony products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England. WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86