

OPERATING INSTRUCTIONS

Salon Pro

Nose Hair Clipper & Trimmer



MODEL: H5130BK

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- · Nasal and Ear Trimming Head
- Facial Hair Trimming Head for Moustache and Sideburns
- · High Carbon Steel Blades
- LED Light Illumination
- Battery Operated (1 x AA 1.5v Alkaline Battery-Not Included)
- · Stand for both unit and spare head.



IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

· Read all instructions carefully.

O DO NOT

Do not use rechargeable batteries.

- · Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the motor speed deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life Alkaline batteries is recommended.
- The blades are precision engineered. Do not subject to excessive force or impact.

O DO NOT

Do not throw the battery in fire or dispose of in household waste.

O not shor

Do not short-circuit the supply terminals of the batteries.

O DO NOT

Do not insert the unit further into the nostril or ear hole than the narrow tip on the outer blade.

O DO NOT

Do not press forcefully into your nostril or ear hole.

O DO NOT

Do not use if the outer blade frame is damaged or deformed.

O DO NOT

Do not clean or change heads with the unit switched ON.

If used once a week for 1 minute at a time, the blades will last approximately 3 years.

- This appliance can be used by children aged from 8
 years and above and persons with reduced physical,
 sensory or mental capabilities or lack of experience and
 knowledge if they have been given supervision
 or instruction concerning use of the appliance in a
 safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

OPERATION


IMPORTANT: Prior to first use, test the trimmer on a small area of your arm or leg. If you experience any sensitivity or allergic reactions, discontinue use immediately. Do not use this trimmer on sensitive or irritated skin.

■ INSERTING/REPLACING THE BATTERY

TURN the ON/OFF SWITCH to the 'OFF' position. Whilst firmly holding the CENTRE part of the Nose Clipper UPRIGHT, TWIST the Battery Compartment Cover (located at the bottom of the unit) CLOCKWISE to expose the Battery Compartment.

2 REMOVE or REPLACE any old batteries if necessary. ALWAYS ENSURE you follow the correct polarity following the +/- signs. This unit uses 1 x AA 1.5v Alkaline Battery (Not Included).

REPLACE the Battery Cover by TWISTING the Battery Compartment Cover ANTI-CLOCKWISE until it CLICKS into place.

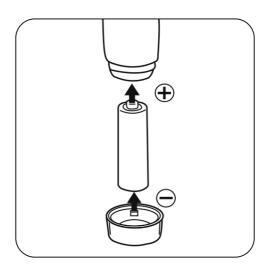

⚠ WARNING

Attempting to force the battery cover back on incorrectly may cause damage to the product.

IMPORTANT: To avoid damage to the Nose Clipper, be sure that the battery is inserted in the proper direction indicated by the +/- signs. If the Nose Clipper will not be used for a long period of time, remove the battery from the unit.

HOW TO USE

- REMOVE the protective cap and turn the clipper 'ON' by PUSHING the ON/OFF SWITCH to the 'ON' position.
- **2** GENTLY INSERT the outer blade into the nostril or ear passage and ROTATE to cut hairs.
- **3** DO NOT INSERT beyond the outer blade or use FORCEFULLY within the nostrils or ear passages.

- 4 CONTINUE to use until the hair is REMOVED.
- For moustache and sideburn trimming, REMOVE the nose and ear trimming head by HOLDING the unit UPRIGHT and TWISTING the head ANTI-CLOCKWISE.

 TAKE the facial hair trimming head and CLIP it into place by TURNING it CLOCKWISE.

⚠ WARNING

Attempting to force the trimming heads back on incorrectly may cause damage to the product.

CLEANING AND CARE

MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

CLEANING

The exterior surface of the appliance should be wiped with a clean dry cloth only.

O DO NOT

Do not use abrasive cleaners, solvents or polish on any part of this appliance.


After each use, turn the unit off and remove the trimming head by twisting it anti-clockwise. A quick rinse of the head under running water will help to clean the blades. Replace the trimming head by twisting it clockwise.

Note: Do not force the trimming heads onto the unit as this could cause damage to the product.

Dry with soft clean towel.

O DO NOT

Do not submerge the unit in water or any other liquid.

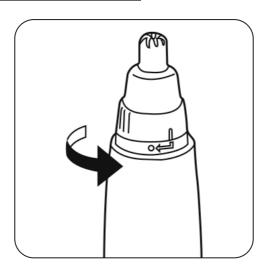

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

Paul CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com

