

## OPERATING INSTRUCTIONS

# Salon Pro Facial Trimmer

## THANK YOU

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

## FEATURES

- Battery Operated
- Requires 1xAAA (not included)
- Single Speed
- On/Off Light
- Includes 2 Attachments and Cleaning Brush
- 2/4mm and 6mm Trimming Guides (included)



## IMPORTANT SAFEGUARDS AND PRECAUTIONS



### SAVE THESE INSTRUCTIONS

- DO NOT use rechargeable batteries
- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the motor speed deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life Alkaline batteries is recommended.
- DO NOT throw the battery in fire or dispose of in household waste.
- DO NOT short-circuit the supply terminals of the batteries.
- The blades are precision engineered. Do not subject to excessive force or impact.
- DO NOT clean or change heads with the unit switched ON.

If used once a week for 1 minute at a time, the blades will last approximately 3 years.

**MODEL: H5131BK**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

## HOW TO USE

**IMPORTANT:** Prior to first use, test the trimmer on a small area of your arm or leg. If any sensitivity or allergic reaction, discontinue use immediately. Do not use this trimmer on sensitive or irritated skin.

### INSERTING/REPLACING THE BATTERY:

1. Turn the On/Off/Light switch to the "Off" position and remove the cap. While firmly holding the centre part of the Trimmer, slide off the Battery Compartment Cover to expose the Battery Compartment.
2. Remove or replace any old battery if necessary. Always ensure correct polarity following the +/- signs.
3. Replace the Battery Cover by aligning the dot on the Battery Compartment with the dot on the Battery Cover. Then push the cover on to close.

**WARNING:** Attempting to force the cover on incorrectly may cause damage to the Trimmer.

**IMPORTANT:** To avoid damage to your Trimmer, be sure that the battery is inserted in the proper direction indicated by the +/- signs. If the Trimmer will not be used for a long period of time, remove the battery from the unit.



### HOW TO USE:

1. Remove the cap then turn the Trimmer on by the On/Off/Light switch to the "On" position. Turn the switch to the "Light" position to also turn on the light.
2. Hold Trimmer at a 45 degree angle to the desired area and trim in the opposite direction of your hair growth.
3. Continue to trim until the hair is removed.



Tip: For the cleanest hair removal, pull your skin taut with one hand while trimming.

**WARNING:**

- Keep out of reach of children
- Do not look directly into the light during use
- Avoid direct eye exposure

**USING THE COMB ATTACHMENTS:**

Included with your trimmer are two comb attachments for trimming eyebrows/moustaches etc.

The 2mm/4mm Comb is for trimming short hairs

The 6mm Comb is for long hairs.

1. Make sure the Trimmer is turned off.
2. Slide the appropriate side of the Comb attachment onto the Trimmer head.  
Be sure to align the grooves on the Comb attachment with the grooves on the Trimmer head.

Note: When using the 2mm/4mm Comb attachment, be sure the trimming size you prefer is facing the same direction as the Trimmer.

3. To remove the Comb attachment, turn off the power, hold the upper centre of the unit and simply slide the Comb off.




## CLEANING AND CARE

**NOTE:** Water will cause damage to your Trimmer. Do not use the trimmer in a damp room or near water. When not in use, be sure the Trimmer is turned off.

**CLEANING**

1. Turn the Trimmer off and remove the battery.
  2. Pop the Trimming Head Cover off by wedging your finger under the plastic and gently lifting up and away from the Trimmer Head.
  3. Carefully take the trimmer head apart and remove the Trimmer blades.
  4. Using the Cleaning bush provided, gently wipe away any hair or dust.
- Note: The Comb attachments may be washed. However, make sure they are thoroughly dry before re-use.
5. Replace the Trimmer head and the Trimmer head cover.
  6. Replace the cap when storing the Trimmer.

Do not leave a battery in your Trimmer for prolonged periods of non-use. This may lead to the battery leaking and damaging the unit.

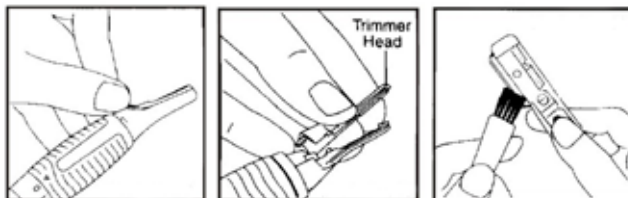



## LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

**call: 08454 81 8808**

**email: [customerservice@lloytron.com](mailto:customerservice@lloytron.com)**

**web: [www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find more details on a wide range of Lloytron products please visit our website at [www.lloytron.com](http://www.lloytron.com)  
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K