

**OPERATING INSTRUCTIONS**

Pro Series T2

**Nose Hair  
Clipper &  
Trimmer**



**MODEL: H5132BK**

# thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

## FEATURES

- For Use with Ears and Nasal Passages
- High Carbon Stainless Steel Blades
- Requires 1 x AA Battery (Battery Not Included)

## LOCATION OF CONTROLS

- Protective Cap
- Nose and Ear Clipper
- On/Off Switch
- Battery Compartment



## IMPORTANT SAFEGUARDS AND PRECAUTIONS



### SAVE THESE INSTRUCTIONS

- DO NOT use rechargeable batteries
- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the motor speed deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life Alkaline batteries is recommended.
- DO NOT throw the battery in fire or dispose of in household waste.
- DO NOT short-circuit the supply terminals of the batteries.
- DO NOT insert the unit further into the nostril or ear hole than the narrow tip on the outer blade.

- DO NOT press forcefully into your nostril or ear hole.
- DO NOT USE if the outer blade frame is damaged or deformed.
- The blades are precision engineered. Do not subject to excessive force or impact.
- DO NOT clean or change heads with the unit switched ON.

If used once a week for 1 minute at a time, the blades will last approximately 3 years.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.


## HOW TO USE

**IMPORTANT:** Prior to first use, test the trimmer on a small area of your arm or leg. If you experience any sensitivity or allergic reactions, discontinue use immediately. Do not use this trimmer on sensitive or irritated skin.

### INSERTING/REPLACING THE BATTERY

- Turn the On/Off Switch to the 'Off' position and remove the cap. Whilst firmly holding the centre part of the Nose Clipper, twist the Battery Compartment Cover anti-clockwise to expose the Battery Compartment.
- Remove or replace any old batteries if necessary. Always ensure you follow the correct polarity following the +/- signs.
- Replace the Battery Cover by twisting the Battery Compartment Cover clockwise until it clicks into place.

**WARNING:** Attempting to force the battery cover back on incorrectly may cause damage to the product.

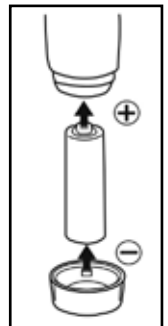

**IMPORTANT:** To avoid damage to the Nose Clipper, be sure that the battery is inserted in the proper direction indicated by the +/- signs. If the Nose Clipper will not be used for a long period of time, remove the battery from the unit.

### HOW TO USE:

- Remove the protective cap and turn the clipper on by pushing the On/Off Switch to the 'On' position.
- Gently insert the outer blade into the nostril or ear passage and rotate to cut hairs.
- Do Not insert beyond the outer blade or use forcefully within the nostrils or ear passages.
- Continue to use until the hair is removed.

# CLEANING AND CARE

## MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

## CLEANING:


The exterior surface of the appliance should be wiped with a clean dry cloth only. **DO NOT USE ABRASIVE CLEANERS, SOLVENTS OR POLISH ON ANY PART OF THIS APPLIANCE.**

After each use, turn the unit off and remove the outer blade frame by twisting it anti-clockwise. A quick rinse of the head under running water will help to clean the blades. Replace the outer blade frame by twisting it clockwise.

**NOTE: DO NOT** force the outer blade frame onto the unit as this could cause damage to the product.

Dry with soft clean towel.

**DO NOT** submerge the unit in water or any other liquid.

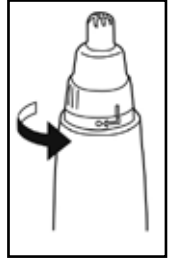

# WEEE/ENVIRONMENTAL PROTECTION



## Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



# LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

**call: 08454 81 8808**

**email: [customerservice@lloytron.com](mailto:customerservice@lloytron.com)**

**web: [www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find more details on a wide range of Lloytron products please visit our website at [www.lloytron.com](http://www.lloytron.com)  
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K