
OPERATING INSTRUCTIONS

Style Pro

Cordless Detailing & Stubble Trimmer



MODEL: H5136A

thank you

Thank you for the purchase of this quality **PAUL ANTHONY** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- High Carbon Stainless Steel Blades
- 40mm Wide Precision T-Bar Trimmer
- 4x Comb Guides (1mm, 2mm, 3mm, 6mm)
- Zero Overlap Blades for Tramline Tattoo or Bald Cut
- LCD DISPLAY
- Battery Power Left %
- 3 SPEED, High, Medium, Low
- 3HR Long Life Run Time
- 2HRS Full Charge Time
- Hair Accessories
- USB-C Rechargeable Operation
- Ergonomic Design

TECHNICAL SPECIFICATIONS

Rated Input: DC 5V requires USB A or USB-C
Battery: Lithium Ion 18650 3.7V 1200mAh 4.44Wh
Cable Length: 1m approximately, USB-A to USB-C
USB Charger not supplied with this product.
See Paul Anthony model number H9801BK for recommended USB Charger.
Dimensions: 16 x 4.7 x 3.5cm (approx.)

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.

- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

DO NOT

Do not use for any purposes other than the appliances intended use.

- This product is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the power cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the power cord is damaged, do not use. Check before each use!
- The supply cord can be replaced by an equivalent USB-C Cable.

DO NOT

Do not use if any part of this appliance is damaged in any way.

- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.



WARNING! Do not use this appliance near bathtubs, showers or other vessels containing water.

DO NOT

Do not use if any part of this appliance is damaged in any way.

WARNING

- Keep the appliance dry
 - Do not use this appliance near bathtubs, showers or other vessels containing water.
 - Detach the hand-held part of from the supply cord before cleaning it with water
 - Make sure the power adaptor does not get wet.
-
- Use, charge and store the appliance at temperatures between 5°C and 23°C.
 - The rechargeable battery contains substances that may pollute or be harmful to the environment. Always remove the battery before discarding the appliance. Dispose of the batteries at an official collection point for batteries or seek advice from your local government authority.
 - Do not use whilst charging or connected to power source.

LOCATION OF CONTROLS



1 – Beard Trimmer

2 – 1mm Comb

3 – 2mm Comb

4 – 3mm Comb

5 – 6mm Comb

6 – Protection Cap

7 – Cleaning Brush

8 – USB-C Charging Cable

9 – Lubricating Oil

OPERATION

■ CHARGING BATTERY STATUS INDICATIONS

The Trimmer should be fully charged before each use.

Place USB-C charging cable into the Trimmer and then into a 1000mAh USB Power Source.


⊘ DO NOT

DO NOT USE the Trimmer whilst charging.

The LCD Display shows the Remain Power % in the battery as a full charge.

Charging the battery will usually take a maximum of 3hrs to fully charge and a RED plug will be shown to indicate it is charging and the display will flash. It will show “100%” when fully charged and will stop flashing. The percentage charge will be displayed as it continually charges.

Working time is approximately 2 hours from a full charge.

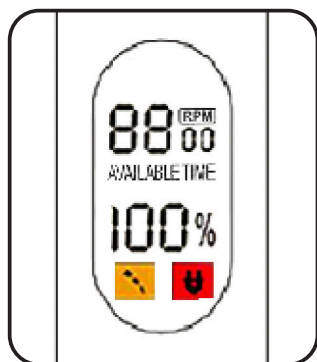

■ BEARD TRIMMING

IMPORTANT: Prior to first use, test the trimmer on a small area of your arm or leg. If you experience any sensitivity or allergic reaction, discontinue use immediately. Do not use this trimmer on sensitive or irritated skin.

1. Turn the Trimmer 'On' by switching the 'On/Off' switch to the 'On' position.
2. Hold the Trimmer at a 45 degree angle to the desired area and trim in the opposite direction of your hair growth.
3. Continue to trim until the hair is removed.

Note: For the cleanest hair removal, pull your skin taut with one hand while trimming.

⚠ WARNING

Keep out of reach of children.



■ OPERATION

1. Unplug from USB Power source.
2. Attached desired comb. If no comb used then trimmer will cut bald to 0.0mm.
3. Press ON/OFF button to turn on the Trimmer at max speed.
4. Press ON/OFF button will cycle through speeds and then to OFF.

■ SPEED CHANGE

You can change the speed of the Trimmer for different performance from 7500rpm, to 7000rpm to 6500rpm by continually pressing the ON/OFF button.

The LCD display shows the actual speed.

CLEANING AND CARE

Do not clean or perform any maintenance whilst the unit is being charged.

1. Remove the any comb guides.
2. Using supplied cleaning brush remove any debris from inside the head and around the cutting teeth.
3. Rinse the head ONLY under a running tap and then allow to air dry.
4. After cleaning, add oil to the teeth to keep the clipper in perfect condition.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The rechargeable battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

■ REMOVING THE BATTERY

The battery cannot be replaced. Lithium-ion batteries can explode, catch fire and/or cause burns if disassembled, damaged or exposed to water or high temperatures. To remove the battery, open the casing of the clipper, slide out the battery and carefully cut either wire on each terminal.

Note: *it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.*

Paul
anthony CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Paul Anthony products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86