

Digital Alarm Clock



thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- LED 'PM' & 'ALARM' Indicators
- AC Mains Operation (220-240 - 50Hz)
- Wake to Alarm
- Snooze Function
- Jumbo 1.8" 12 Hour
- Red LED Display
- 1 x PP3 Battery Back-Up (Not Included)



SPECIFICATIONS

Operating Voltage: 220-240v~ 50Hz

Backup Battery: PP3 9v (Not included)



IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Read all instructions carefully.
- For Household Use only.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.




- To prevent possible hearing damage, do not listen at high volume levels for long periods.

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use rechargeable batteries in this appliance.
- Do not mix old and new batteries, different types of batteries, alkaline or rechargeable batteries with different capacity together – they may leak.
- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life alkaline batteries is recommended.
- DON'T throw the battery in fire or dispose of in household waste. Consult your local authority in the correct way to dispose of unwanted batteries.
- DON'T short-circuit the supply terminals of the batteries.
- Always check the correct polarity when inserting batteries. Incorrect polarity can damage this unit.

LOCATION OF CONTROLS

- 1 Alarm 'SET' Button
- 2 'Snooze Button
- 3 'Hour' Button
- 4 'Minutes' Button
- 5 Alarm Function Button
- 6 Time Function Button
- 7 Jumbo 1.8" 12 Hour
- 8 Red LED Display
- 9 'Hi' / 'Low' Dimmer

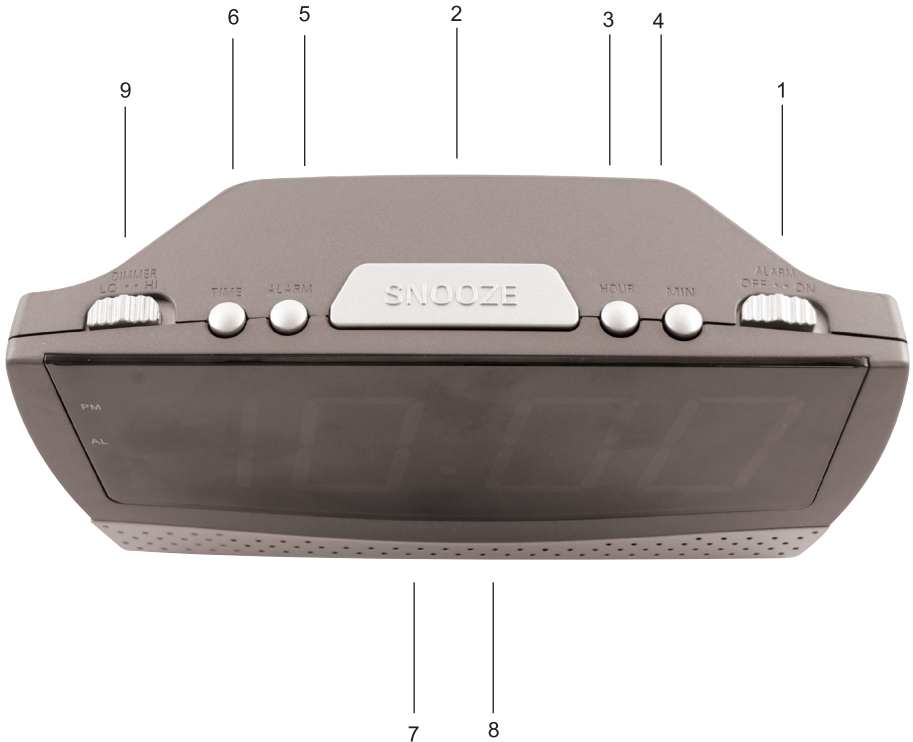

OPERATION

Plug into the mains outlet. The entire display will flash meaning the incorrect time is being displayed. This is normal condition and will stop once the time has been set.

SETTING THE CLOCK TIME

Press and hold the "Time Function" button and simultaneously press the "Hour" or "Minute" buttons to change the hour or minutes respectively.

Please make sure that the time is set to AM or PM as indicated (A red Dot in the upper left corner indicates the PM range).

SETTING THE ALARM TIME

Press and hold the "Alarm Function" button and simultaneously press the "Hour" or "Minute" buttons to change the hour or minutes respectively.

Please make sure that the time is set to AM or PM as indicated (A red Dot in the upper left corner indicates the PM range).

SETTING THE ALARM

Switch "Alarm Set" to On. The alarm will activate once the time has reached. The AL indicator will illuminate. To turn off, switch "Alarm Set" to Off.

SNOOZE

When the alarm sounds, pressing the SNOOZE button will temporarily silence the alarm. The alarm will resound again 9 minutes later. This can be repeated as often as you wish, for up to 2 hours.

DIMMER

Switch the Dimmer switch to LO or HI depending on personal preference for brightness.

BATTERY BACKUP (Battery not included)

In the event of power failure, this unit will automatically switch to a battery standby circuit when a battery is installed. Open the battery compartment and install a 9v PP3 Battery. Under battery operation, the clock will keep running and the alarm will sound at the preset time. The clock will not be visible when running on the battery; this will conserve the battery power.

The battery should be replaced once per year.

CLEANING AND CARE

MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

CLEANING:

The exterior surface of the appliance should be wiped with a clean dry cloth only.

DO NOT USE ABRASIVE CLEANERS, SOLVENTS OR POLISH ON ANY PART OF THIS APPLIANCE.


WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

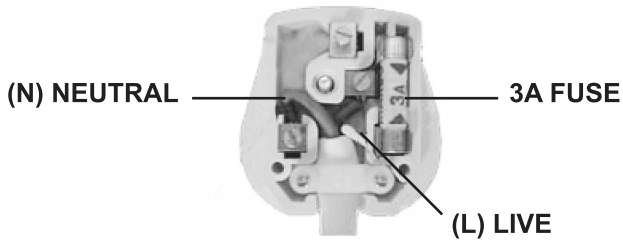

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at www.lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K